

## CARE AND MAINTENANCE

Spot clean using a mild water-free solvent. Only a professional cleaner should undertake a complete overall cleaning.

The use of steam or water-based cleaners may cause excessive shrinking or staining.






## NOTICE

\* Please make sure that you have all parts indicated before you begin assembly of this item

\* This item should be assembled on a soft surface to prevent scratching the finish during assembly

\* This item may require periodic tightening

## Part List and Hardware List

PIECE	DESCRIPTION	PICTURE	QUANTITY
A	Leg		1X
B	Seater		1X
H1	Nut		4X
H2	Flat washer		4X
H3	Wrench key		1X



Model# DCH4002

Product Dimensions: 23.6"W x 22.4"D x 29.5"H

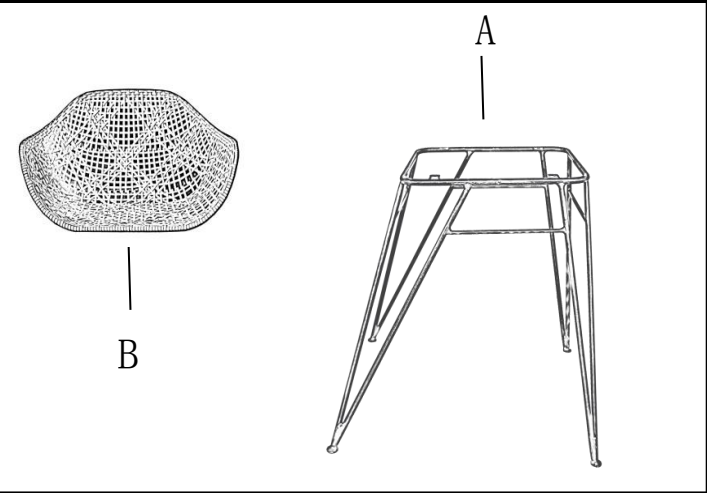
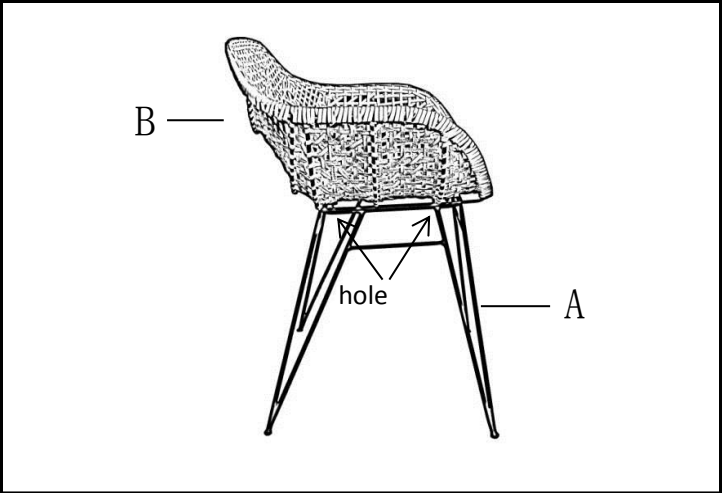
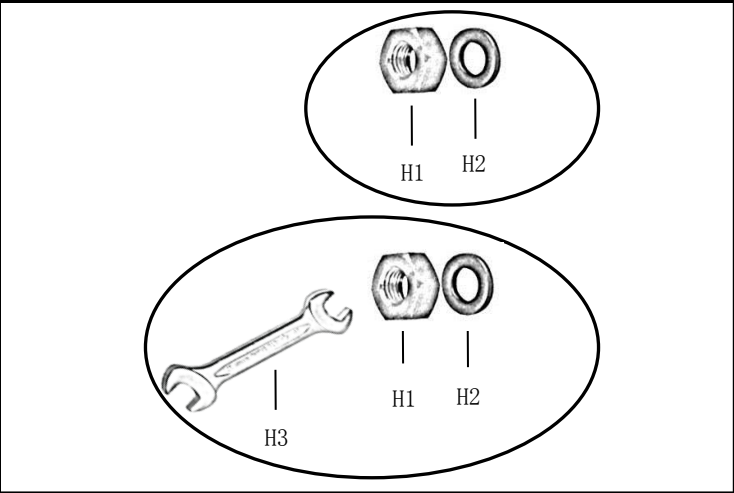
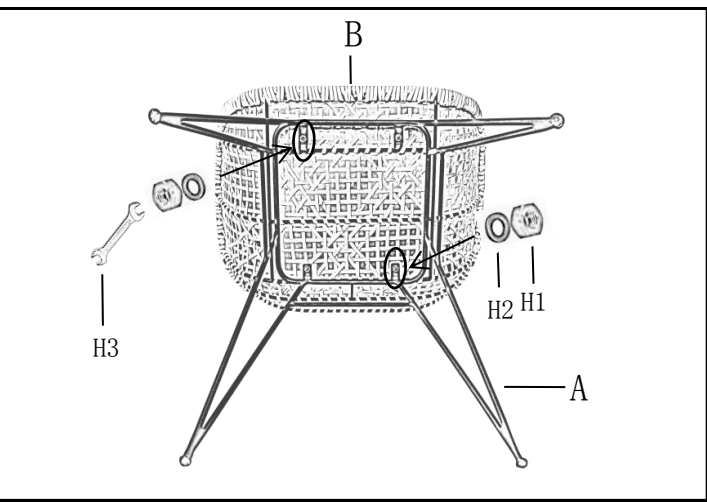


PREPARATION

Before beginning assembly of product, make sure all parts are present. Compare parts with package contents list and hardware contents list.  
If any part is missing or damaged, do not attempt to assemble the product.

Estimated Assembly Time: 10 minutes.

Tools Required for Assembly (included): Allen Key

		
STEP1 PREPARE SEAT AND BACK REST PART	STEP2 INSERT BOLT INTO HOLES PLATE IN THE LEGS	STEP3 PREPARE WASHERS AND NUT
		
STEP4 INSERT THE WASHERS WITH NUT AND TIGHTEN COMPLETELY		