



\*The measured time indicated by the stopwatch hands that move independently of the center and 24-hour hands.

#### Time Setting

1. Pull out the crown to position 2, turn the crown clockwise until the previous day's date appears.
2. Pull out the crown to position 3, set the time by turning the crown.
3. Push the crown back to position 1.

#### 24-Hour Sub-Dial Setting

The 24-hour hand moves correspondingly with the hour and minute hands. When setting the time be sure to check that the 24-hour hand is set properly.

#### Using the Stopwatch

Check the stopwatch minute and second hands to see if they are in the "0" position. If not, follow the stopwatch hand adjustment instructions. Pressing A stops and starts the stopwatch. Pressing B controls the split time and resets.

#### Stopwatch Hand Adjustment

1. Pull crown out to the position 2.
  2. Press A or B at the same time to reset the stopwatch minute and second hands to the "0" position.
  3. With each press of A or B (A= forward, B= back), the hands move once clockwise or counter-clockwise. The hands move quickly if the pushers are kept pressed.
- NOTE: If the stopwatch hands move improperly, pull crown out and press A and B at the same time for over 2 seconds. When the pushers are released, the stop-watch second hand will turn counter-clockwise and return to original position.
4. Push crown back to position 1.

## WATER RESISTANT

Your new watch is a water-resistant watch. Check the marking on the back of the watch, find below the relevant usage recommendation.

### \*Water Resistant 3ATM or 30M (100 Feet)

Shall withstand splashes of water while wearing the hand. But should not be worn while swimming or diving.

### \*Water Resistant 5ATM or 50m (165 Feet)

Suitable for showering or swimming in shallow water.

### \*Water Resistant 10ATM or 100M (330 Feet)

Suitable for swimming, snorkeling, but should not be worn while scuba diving.

### \*Diver's 20ATM or 200M (660 Feet)

Meets the higher requirements of water resistant and suitable for scuba diving. We don't recommend swimming or diving with your watch unless it has a screw down crown and is water resistant to at least 10ATM or 100 Meters.

## GENERAL CARE FOR A WATER RESISTANT WATCH

\*DO NOT OPERATE ANY BUTTONS WHEN THE WATCH IS WET OR IN WATER.

\*DO NOT WEAR THE WATCH IN A HOT SHOWER OR SAUNA. EXTREME HEAT CAN DAMAGE THE WATCH.

\*AFTER USE IN SALT WATER OR CONTACT WITH SAND OR MUD, RINSE THE WATCH IN A STREAM OF FRESH WATER AND DRY IT WITH SOFT CLOTH.

\*LEATHER STRAPS ARE MORE EASILY DAMAGED BY FREQUENT EXPOSURE TO WATER. AFTER EVERY USE IN WATER, WIPE THE STRAP WITH A SOFT CLOTH, TO IMPROVE THE LIFE OF THE STRAP.

# AUGUST steiner

## INSTRUCTION MANUAL

### QUARTZ CHRONOGRAPH MOVEMENT