


## B. Set the Date

1. Pull the crown to position 2.
2. Turn the crown clockwise. Continue to turn the crown until the desired date is set.
3. Push the crown back to position 1.

## A. Set the time - Hour, Minute

1. Pull the crown to position 2.
2. Turn the crown clockwise to set the hour / minute hands to the desired time.
3. Push the crown back to position 1.

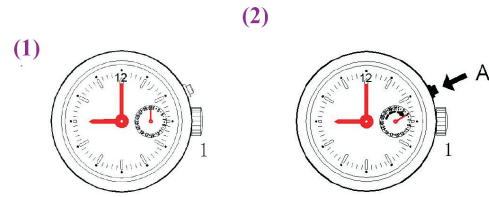

## Quick Correction of Date :

1. Set the crown to position 1.
2. Press the button A step-by-step to advance the date until the desired date is set.

## C. Set the Day

1. Pull the crown to position 2.
2. Turn the crown clockwise to advance the day hand until the desired day is set. The day hand will advance one day when 04:00 in the morning is reached.
3. Push the crown back to position 1.

## WATER RESISTANT

Your new watch is a water-resistant watch. Check the marking on the back of the watch, find below the relevant usage recommendation.

**\*Water Resistant 3ATM or 30M (100 Feet)**

Shall withstand splashes of water while washing the hand. But should not be worn while swimming or diving.

**\*Water Resistant 5ATM or 50m (165 Feet)**

Suitable for showering or swimming in shallow water.

**\*Water Resistant 10ATM or 100M (330 Feet)**

Suitable for swimming, snorkeling, but should not be worn while scuba diving.

**\*Diver's 20ATM or 200M (660 Feet)**

Meets the higher requirements of water resistant and suitable for scuba diving. We don't recommend swimming or diving with your watch unless it has a screw down crown and is water resistant to at least 10ATM or 100 Meters.

# AKRIBOS xxiv

## INSTRUCTION MANUAL MULTI-FUNCTION WATCH

MANUAL-32

## GENERAL CARE FOR A WATER RESISTANT WATCH

- \*DO NOT OPERATE ANY BUTTONS WHEN THE WATCH IS WET OR IN WATER.
- \*DO NOT WEAR THE WATCH IN A HOT SHOWER OR SAUNA. EXTREME HEAT CAN DAMAGE THE WATCH.
- \*AFTER USE IN SALT WATER OR CONTACT WITH SAND OR MUD, RINSE THE WATCH IN A STRAM OF FRESH WATCH AND DRY IT WITH SOFT CLOTH.
- \*LEATHER STRAPS ARE MORE EASILY DAMAGED BY FREQUENT EXPOSURE TO WATER. AFTER EVERY USE IN WATER, WIPE THE STRAP WITH A SOFT CLOTH, TO IMPROVE THE LIFE OF THE STRAP.