


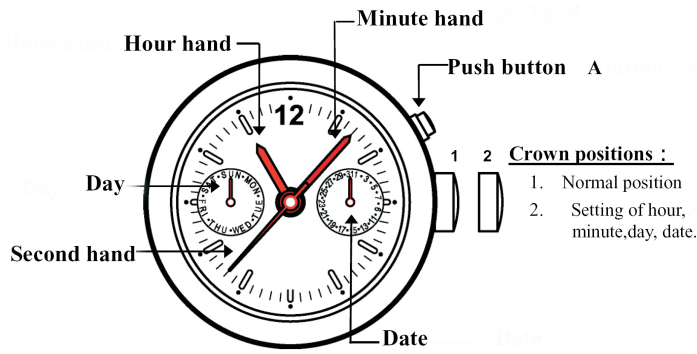


B. Set the Date

1. Pull the crown to position 2 .
2. Turn the crown clockwise. Continue to turn the crown until the desired date is set.
3. Push the crown back to position 1 .

A. Set the time - Hour, Minute

1. Pull the crown to position 2 .
2. Turn the crown clockwise to set the hour / minute hands to the desired time.
3. Push the crown back to position 1 .

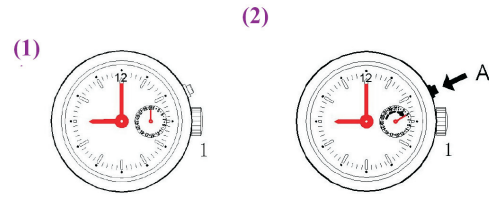

Quick Correction of Date :

1. Set the crown to position 1 .
2. Press the button A step-by-step to advance the date until the desired date is set.

C. Set the Day

1. Pull the crown to position 2 .
2. Turn the crown clockwise to advance the day hand until the desired day is set .The day hand will advance one day when 04:00 in the morning is reached.
3. Push the crown back to position 1 .

WATER RESISTANT

Your new watch is a water-resistant watch. Check the marking on the back of the watch, find below the relevant usage recommendation.

***Water Resistant 3ATM or 30M (100 Feet)**

Shall withstand splashes of water while washing the hand. But should not be worn while swimming or diving.

***Water Resistant 5ATM or 50m (165 Feet)**

Suitable for showering or swimming in shallow water.

***Water Resistant 10ATM or 100M (330 Feet)**

Suitable for swimming, snorkeling, but should not be worn while scuba diving.

***Diver's 20ATM or 200M (660 Feet)**

Meets the higher requirements of water resistant and suitable for scuba diving. We don't recommend swimming or diving with your watch unless it has a screw down crown and is water resistant to at least 10ATM or 100 Meters.

AKRIBOS xxiv

INSTRUCTION MANUAL MULTI-FUNCTION WATCH

MANUAL-32

GENERAL CARE FOR A WATER RESISTANT WATCH

- *DO NOT OPERATE ANY BUTTONS WHEN THE WATCH IS WET OR IN WATER.
- *DO NOT WEAR THE WATCH IN A HOT SHOWER OR SAUNA. EXTREME HEAT CAN DAMAGE THE WATCH.
- *AFTER USE IN SALT WATER OR CONTACT WITH SAND OR MUD, RINSE THE WATCH IN A STRAM OF FRESH WATCH AND DRY IT WITH SOFT CLOTH.
- *LEATHER STRAPS ARE MORE EASILY DAMAGED BY FREQUENT EXPOSURE TO WATER. AFTER EVERY USE IN WATER, WIPE THE STRAP WITH A SOFT CLOTH, TO IMPROVE THE LIFE OF THE STRAP.