


Elmwood Arbor

Model# 11199

W221122-A5080

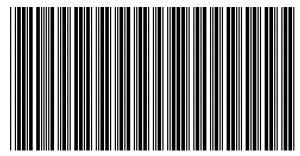



Assembly Instruction Manual

Please read instructions thoroughly before beginning assembly.

Check boxes carefully for contents listed. Some parts are packaged inside of others.

Assemble on a clean, flat, non-abrasive surface to prevent scratching.

In the event of missing or damaged parts please call or email our customer service department at the contact info below.

Tools Required

- -Battery or Electric Drill (#2 phillips bit)
- -Tape Measure
- -Hammer or Rubber Mallet (Recommended)
- -Shovel or Post Hole Digger (Recommended)

QUESTIONS? COMMENTS? CONTACT US!

115 Vision Parkway P.O. Box 122


Sheboygan Falls, WI 53085

1-877-258-6020


www.dura-trel.com

sales@dura-trel.com

Part	Description	Dimension	Box	Qty
#			#	-
1	Left Post	2" sq. x 84"	1	2
2	Right Post	2" sq. x 84"	1	2
3	Top/Bottom Cross Rail	%" x 1 ½" x 22"	1	4
4	Vertical Slat	¼" x 1 ½" x 56 ¾"	1	4
5	Horizontal Slat	¼" x 1 ½" x 22"	1	12
6	Top Rail	%" x 3" x 56 ¾"	1	2
7	Top Cross Rail	%" x 3" x 19 ½"	1	2
8	Top Slat	¼" x 1 ½" x 44 ½"	1	2
9	Top Cross Slat	¼" x 1 ½" x 21"	1	5
10	Corner Brace	¼" x 1 ½" x 16 ½"	1	4
11	Ground Anchor	14"	1	4
12	Hardware Bag (Includes):		1	1
	■ Post Cap	2" square	27 33	4
	 Arbor Top Cap 	%" x 3"	8	4
÷ :	 Painted Screw 	1 1/4"		20
	 Painted Screw 	3/4"		4
	 Painted Self Tapping Screw 	1" (#8)		8
	 Super Glue 	Tube		1

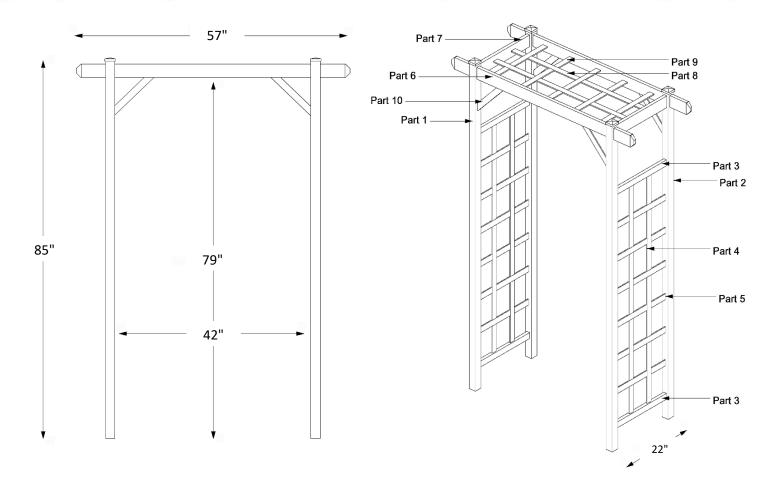




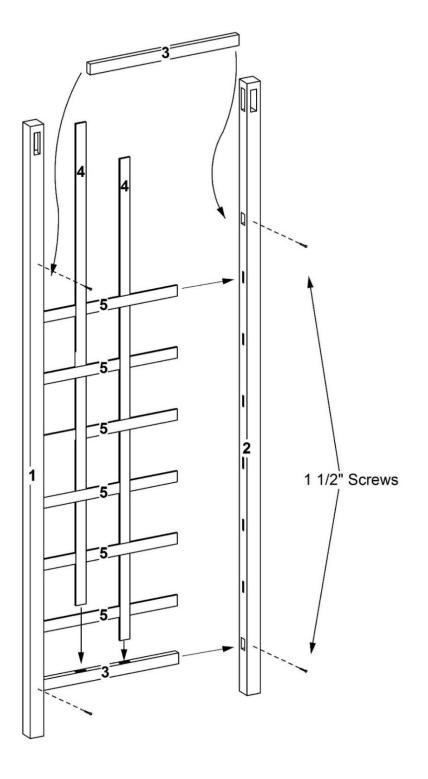

- Lay out one 84" one left post (part 1). Starting at bottom, insert one 22" top/bottom cross rail (part 3) and six 22" horizontal slat (part 5). Insert free ends of bottom cross rail and horizontal slats into one 84" right post (part 2).
- Weave one 56¾" vertical slat (part 4) through horizontal slats. Insert end into left hole of bottom cross rail.

Weave remaining second 56¾" vertical slat (part 4) through horizontal slats opposite of left vertical slat. Insert end into right hole of bottom cross rail. Separate tops of posts just enough to insert remaining 22" top/bottom cross rail (part 3).

Using two 1 ¼" screws per post, fasten together arbor panel. Be sure all parts are fully inserted into posts before fastening. REPEAT using remaining posts, top/bottom cross rails, horizontal and vertical slats to assemble second arbor panel.

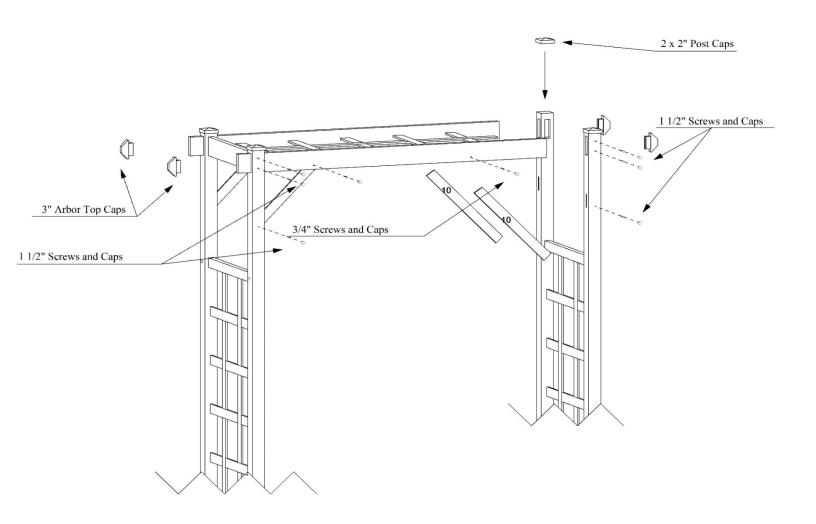





Insert one 19%" arbor top cross rail (part 7) into top holes of both assembled arbor panels (from page 3.) Center arbor top cross rail between posts to allow parts to be inserted through the remaining routed holes.




Insert five 21" arbor top cross slats (part 9) into one 56%" arbor top rail (part 6). Insert free ends of arbor top cross slats into remaining 56%" arbor top rails (part 6). Weave one 44%" arbor top slat (part 8) through arbor top cross slats. Weave remaining 44%" arbor top slat (part 8) through arbor top cross slats opposite of other arbor top slat.



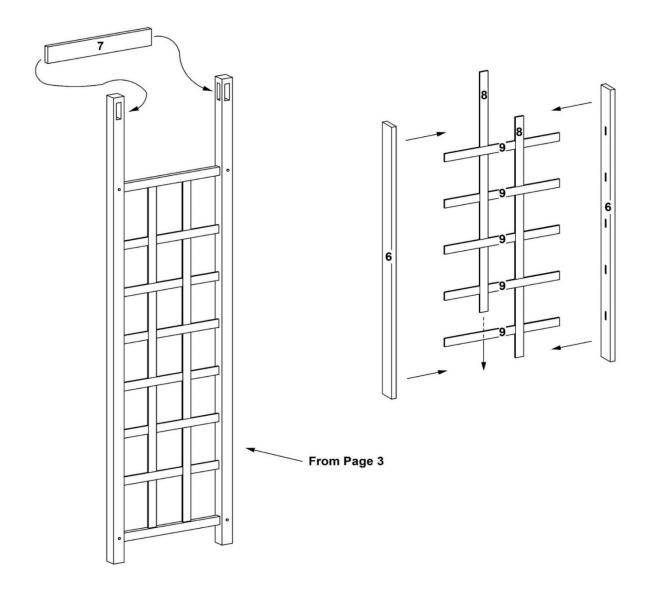


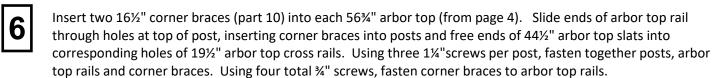

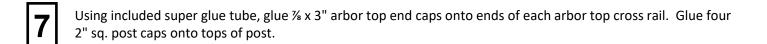



Ground Anchor Installation

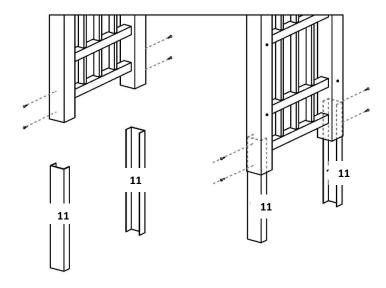


Option 1 (soft ground)

Slide one ground anchor (part 10) into bottom of each post until it meets bottom cross rail. Using two 1" self-tapping screws per post, screw the post to ground anchor using the pilot holes for guides.

Using ground anchor installation layout drawing, dig holes approximately 16" deep. Set arbor in holes and level. Back fill with soil removed from holes.

Ground Anchor Installation Layout

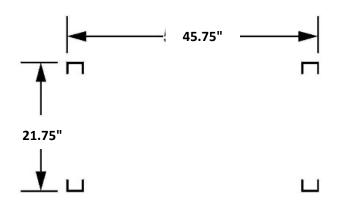

Option 2 (permanent installation)

NOTE: There is very little room for error with this installation method.

Using ground anchor installation layout drawing, dig holes 16" deep according to dimensions. Fill with cement and place ground anchors in wet cement. Be sure that ground anchors are straight and in accordance with dimension of ground anchor installation layout drawing. Allow cement to dry.

Slide arbor over ground anchors. Using two 1" self-tapping screws, fasten post to ground anchor.

Warranty Statement

20 Year Guarantee

Please call manufacturer direct with questions concerning missing or defective parts at Toll Free: 877-258-6020.

Dura-trel, Inc. products are warranted to be free from manufacturing defects resulting in delaminating, peeling, flaking, corroding, cracking, crazing, or extreme amounts of fading or bleaching causing the PVC to change to its natural color for a period of 20 years from the date of purchase.

Normal weathering is defined as exposure to sunlight and extremes of weather and atmosphere which will cause any colored surface to gradually fade.

CONDITIONS NOT COVERED BY THIS WARRANTY:

- A. Physical abuse, misuse, neglect, or improper storage.
- B. Improper installation or installation not in strict adherence to the instructions written by Dura-Trel, Inc.
- C. This warranty does not apply if materials are painted, varnished, or coated with any substance.
- D. Dura-Trel, Inc. is not responsible for damages to product during shipping.
- E. Damage attributable to atmospheric pollutants, hail, lightning, hurricane, tornado, wind borne objects, earthquake, fire, mildew, casualty, act of God, building or ground settlement, or subjection to stress or weight.

CLAIMS AND REMEDIES:

If a Dura-Trel, Inc. product is determined to have a manufacturing defect which is covered by this warranty, Dura-Trel, Inc. will replace the material containing the defect (labor not included) F.O.B from the point of manufacture. Dura-trel, Inc. will not be responsible for any cost incurred in the removal or reinstallation of the product.

Important: All claims must be sent to the following address and should describe the defect claim.

Dura-Trel, Inc., P.O. Box 122, Sheboygan Falls, WI 53085

Dura-Trel, Inc. reserves the right to discontinue or change its design and/or color. If the original color or style is not available, Dura-Trel, Inc. shall have the right to substitute a product designated by Dura-Trel, Inc.

Dura-Trel, Inc. shall not be liable for any incidental, special, or consequential damages arising out of the use of these products.

