

 


ITEM#: **244-TV74**

DESCRIPTION: **ENTERTAINMENT TV STAND**


Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts which may have come loose inside the carton during shipment. Identify and count all parts and compare with the parts List Below:

PART LIST:


①		②	
TV STAND: 1PC		WOOD PANEL: 2PCS	

HARDWARE LIST


NO.	Drawing	Description	Q'ty
A		Furniture Tipping Restraint	1 Set

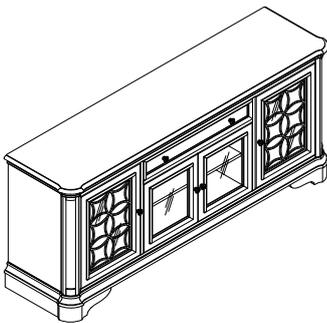

**OPTIONAL ANTIQUE
MIRRORED GLASS**

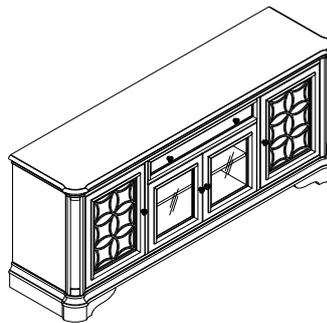

**OPTIONAL
WOOD DOOR**

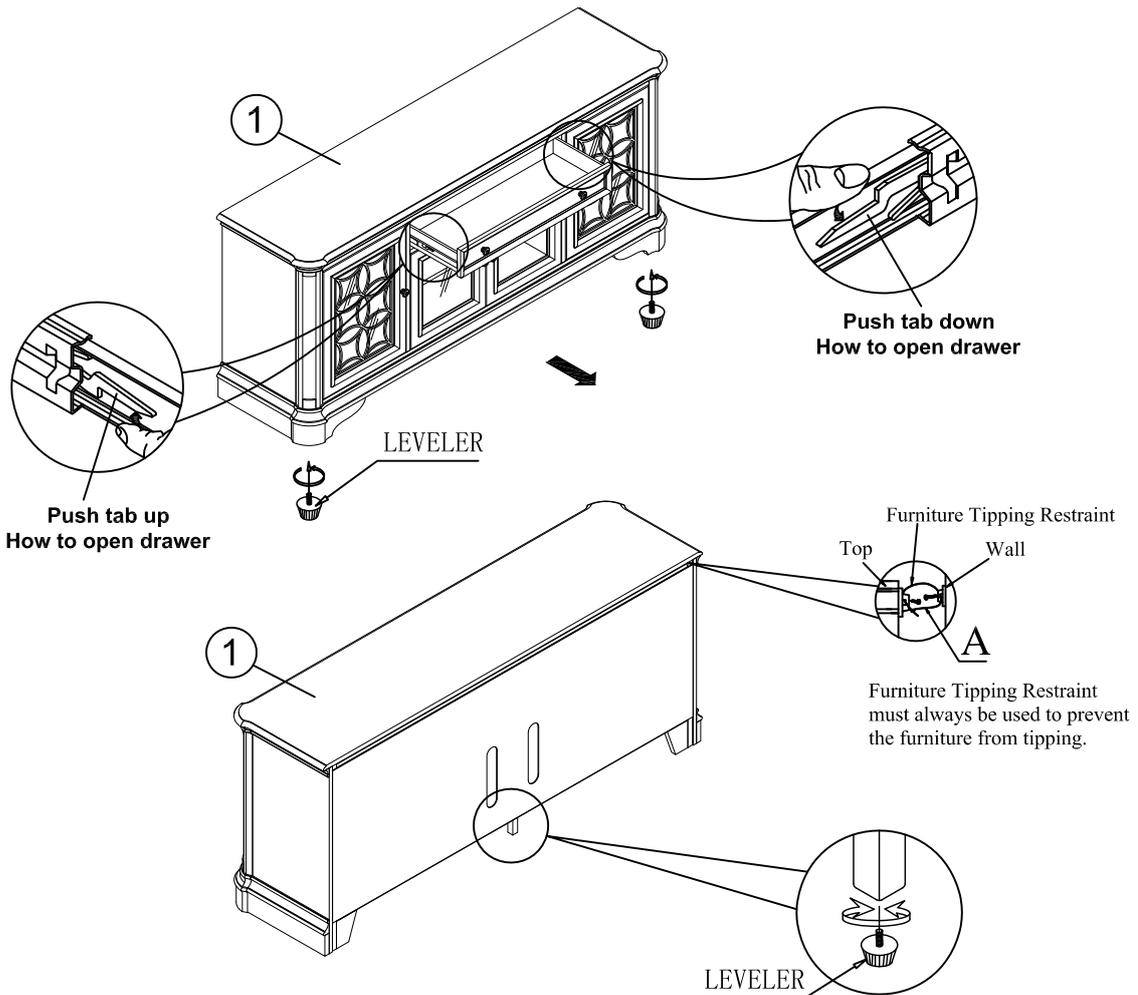

CLEANING INSTRUCTION


Clean the TV Stand surface with a furniture polish and a soft cloth.

Made in VietNam


ASSEMBLY INSTRUCTION

DESCRIPTION: ENTERTAINMENT TV STAND
ITEM#: 244-TV74


OPTIONAL WOOD PANEL

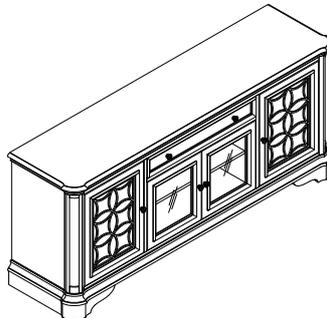


STEP 1: Open the door back panel

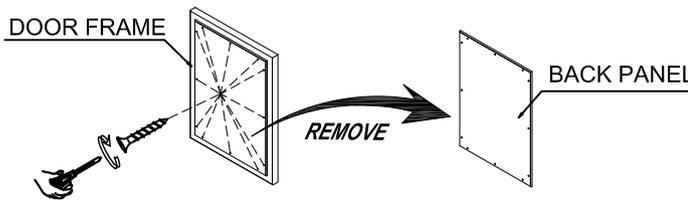


STEP 2: Remove antique mirrored glass

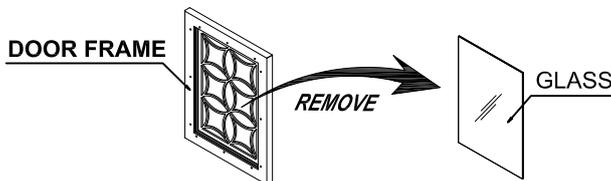

STEP 3: Insert wood panel

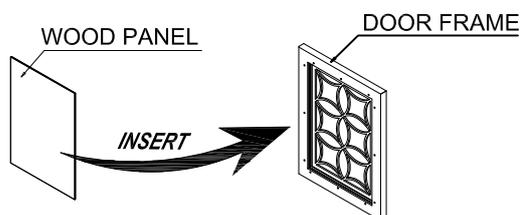

STEP 4: Attach the door back panel with decorative screw

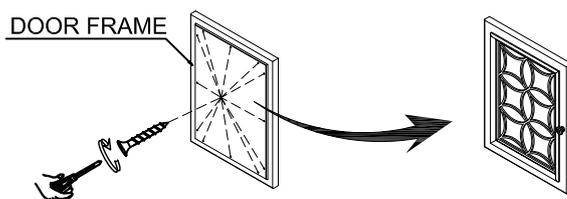

CLEANING INSTRUCTION

Clean the TV Stand surface with a furniture polish and a soft cloth.




ASSEMBLY INSTRUCTION

DESCRIPTION: ENTERTAINMENT HUTCH
ENTERTAINMENT TV STAND

ITEM#: **244 - EC74/ TV74**


Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts which may have come loose inside the carton during shipment. Identify and count all parts and compare with the parts List Below:

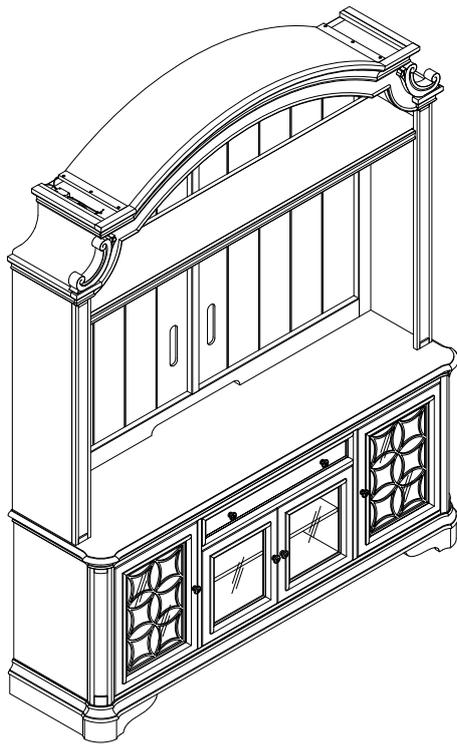

HARDWARE LIST			
NO.	Drawing	Description	
A		Bolt $\Phi 1/4" \times 1-1/4"$	4pcs
B		Flat washer ($\Phi 1/4" \times 16mm$)	4pcs
C		Spring washer ($\Phi 1/4"$)	4pcs
D		Shelf support	4pcs
E		Cover cap plastic ($\Phi 20 \times \Phi 18 \times 7mmH$)	4pcs
F		Wood screw ($\Phi 8 \times 5/8"$)	38pcs
G		Wood screw ($\Phi 8 \times 3/4"$)	2pcs
H		Wood screw ($\Phi 6 \times 5/8"$)	4pcs
I		Wood screw ($\Phi 8 \times 1-1/4"$)	6pcs
J		Allen wrench (4mm)	1pc

HUTCH PART LIST:

① 	②
LIGHT BRIDGE: 1PC	ADJUSTABLE SHELF: 1PC
③ 	④
LEFT SIDE FRAME: 1PC	RIGHT SIDE FRAME: 1PC
⑤ 	⑥
CENTER POST BACK: 1PC	BOTTOM RAIL BACK: 1PC
⑦ 	⑧
LEFT BACK PANEL: 1PC	RIGHT BACK PANEL : 1PC

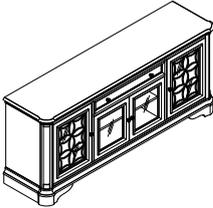

 TV STAND: 1PC

CLEANING INSTRUCTION


Clean the Entertainment Hutch/ TV Stand surface with a furniture polish and a soft cloth.

Made in Viet Nam


STEP 1

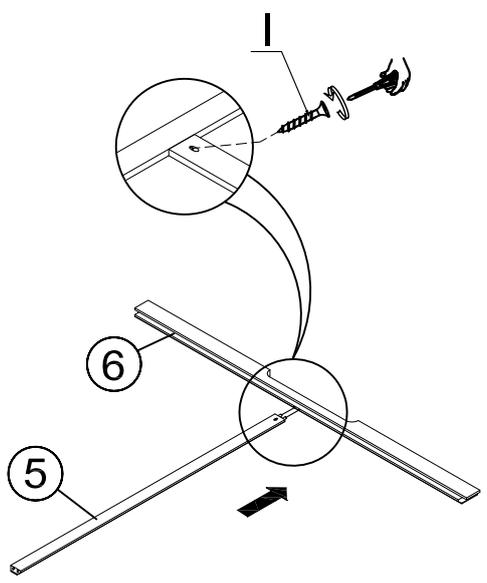

STEP 2

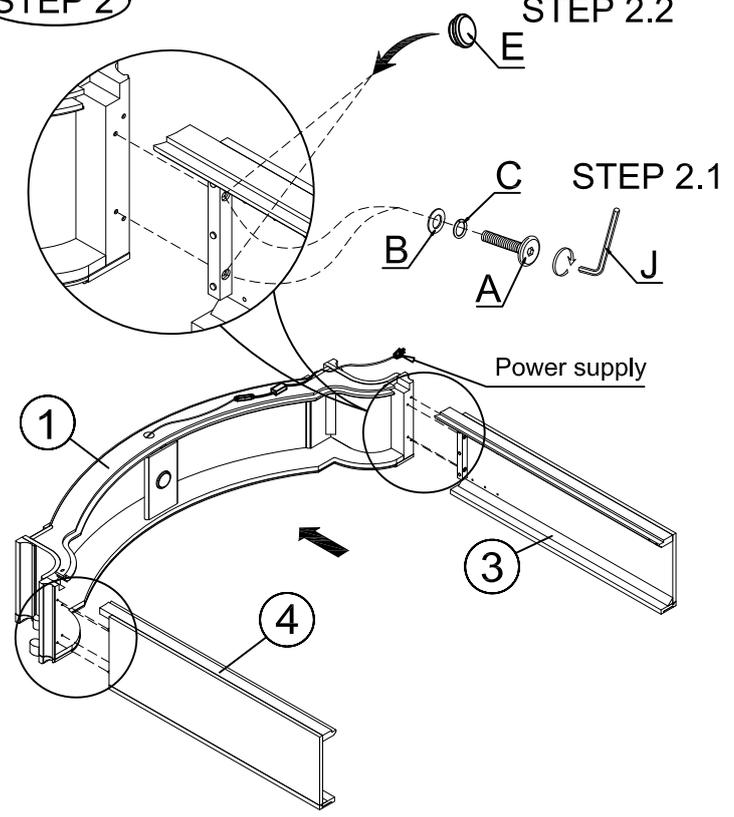

STEP 3

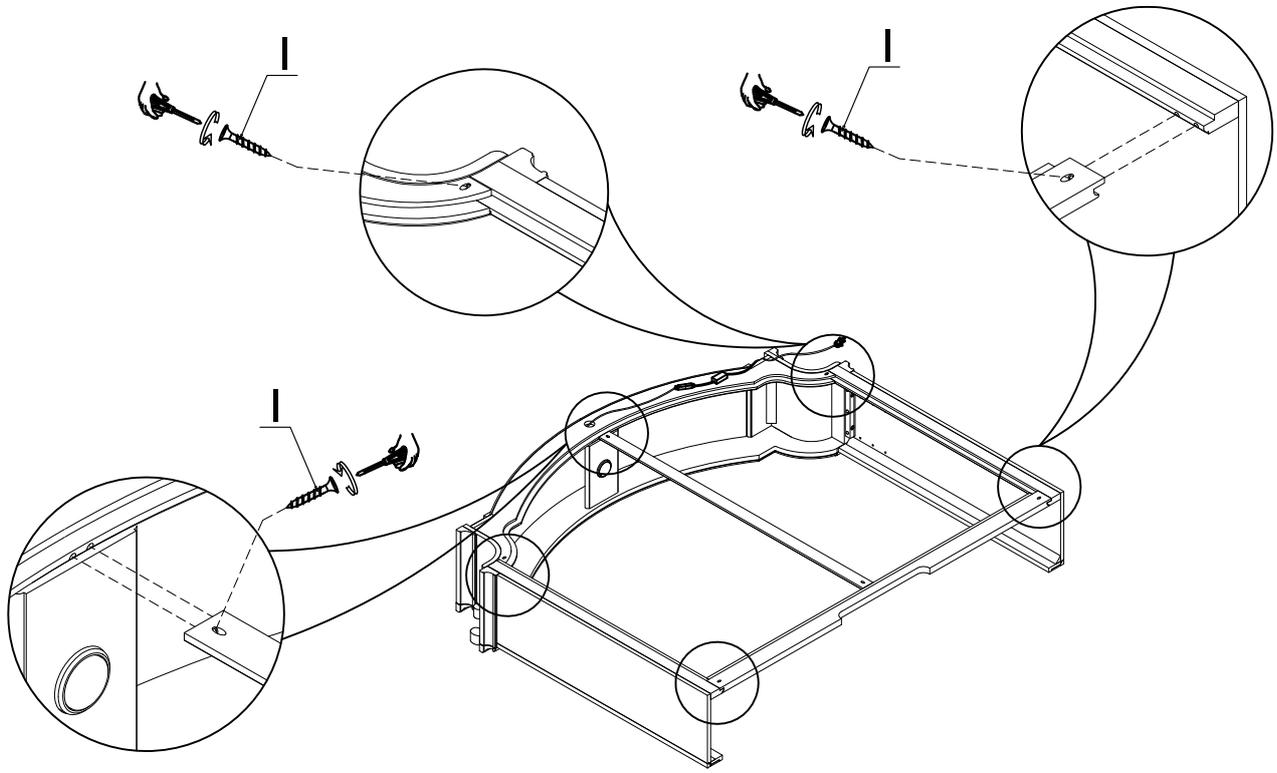


CLEANING INSTRUCTION


Clean the Entertainment Hutch/ TV Stand surface with a furniture polish and a soft cloth.

Made in Viet Nam

STEP 4

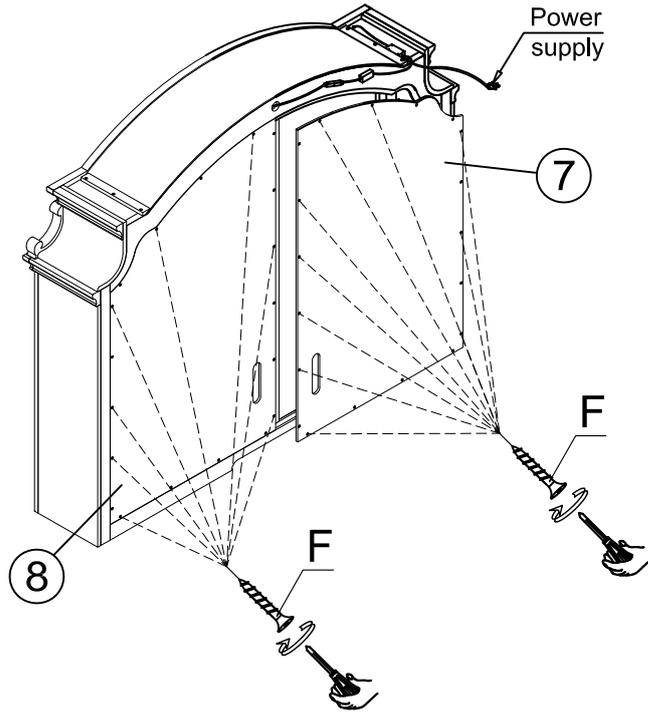



STEP 5

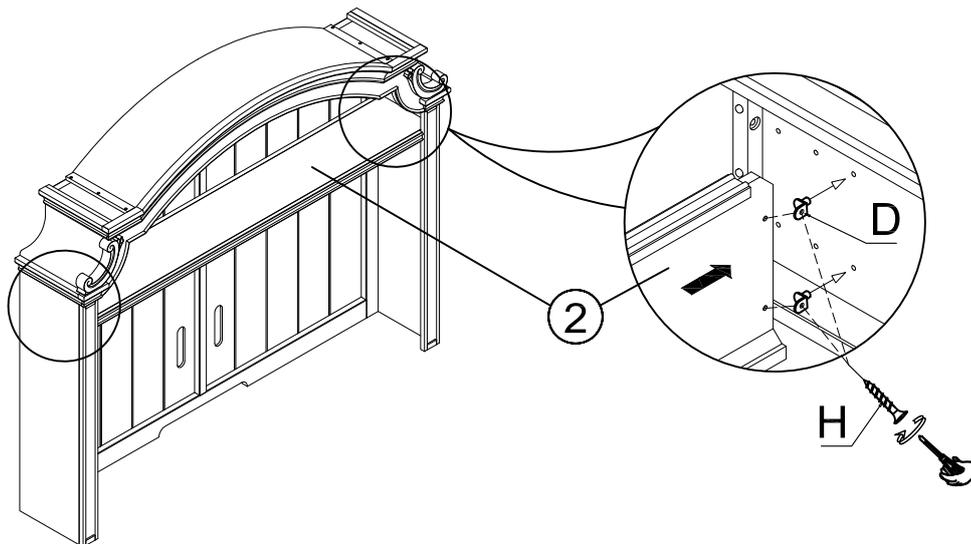

CLEANING INSTRUCTION

Clean the Entertainment Hutch/ TV Stand surface with a furniture polish and a soft cloth.

STEP 6

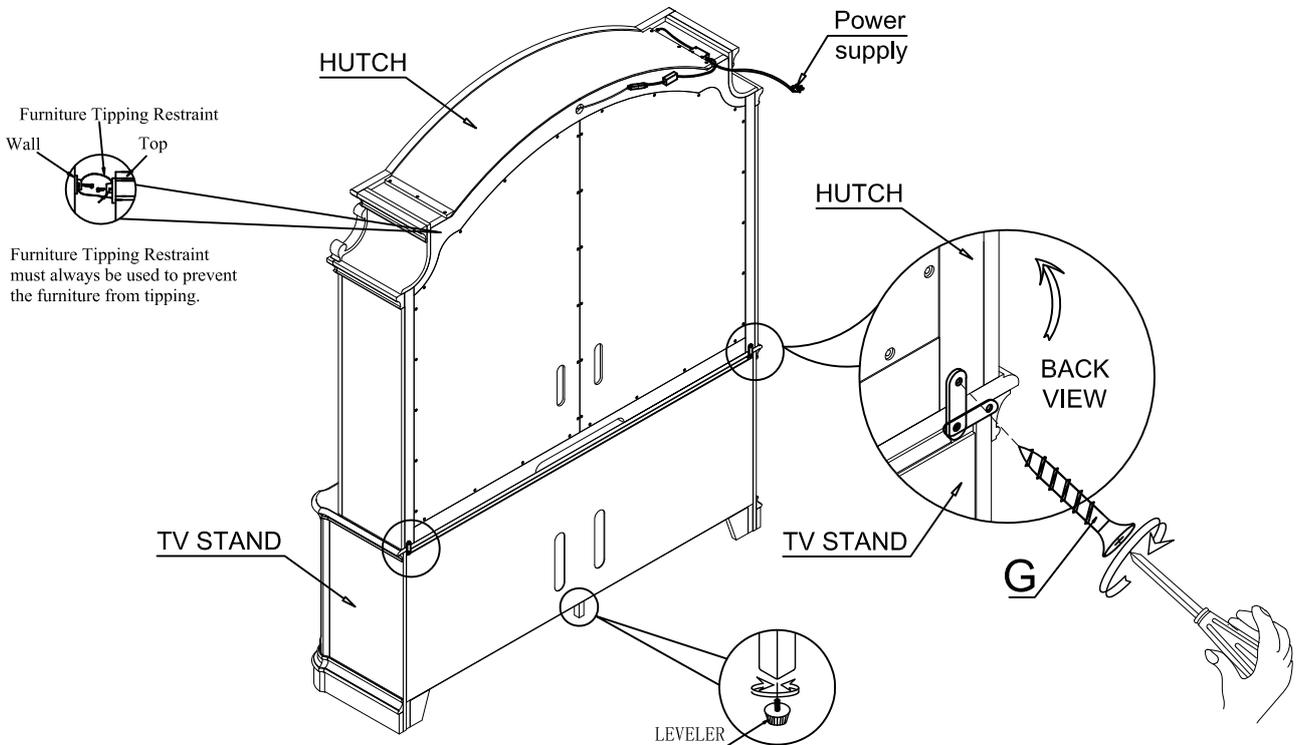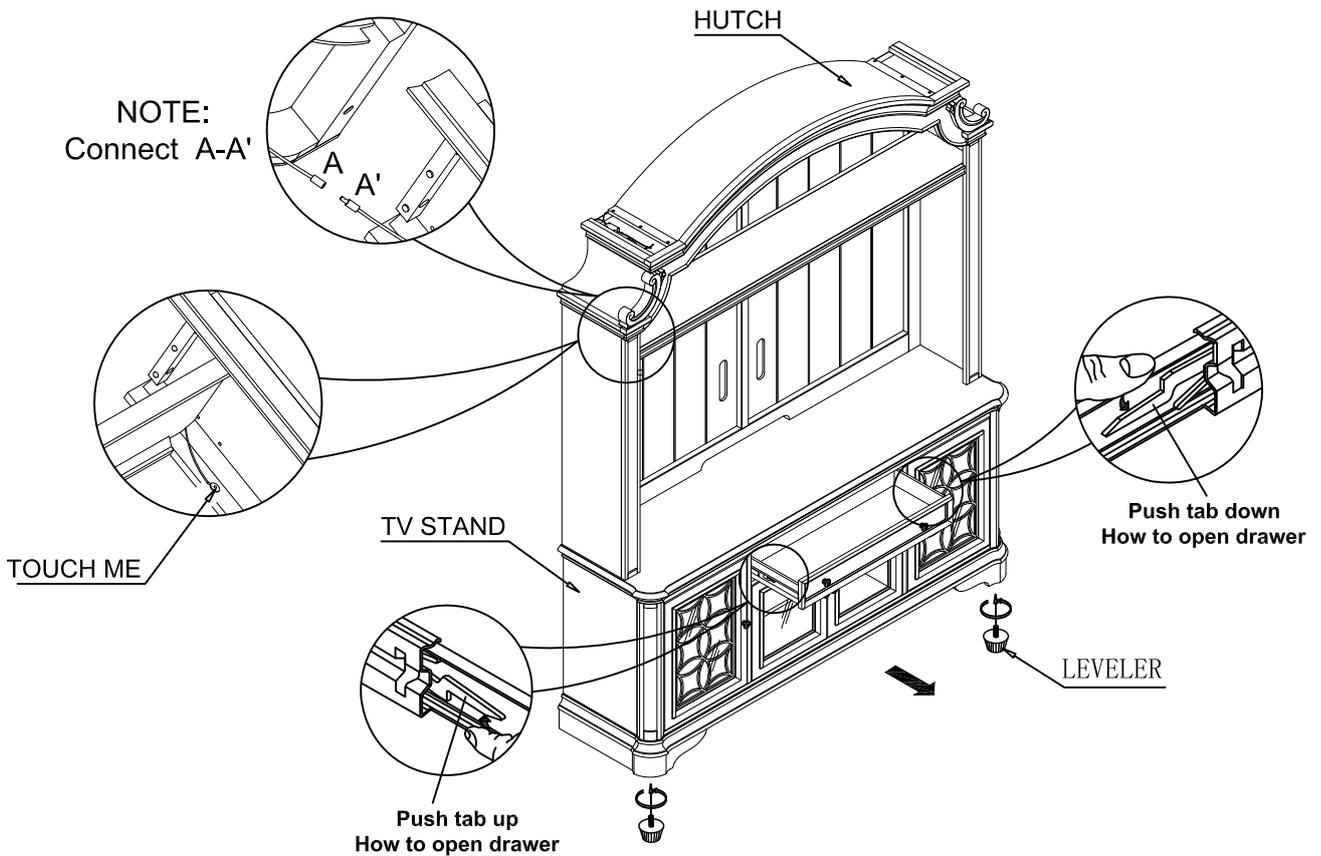

CLEANING INSTRUCTION

Clean the Entertainment Hutch/ TV Stand surface with a furniture polish and a soft cloth.

Made in Viet Nam