

ASSEMBLY INSTRUCTION


SWIVEL COUNTER STOOL

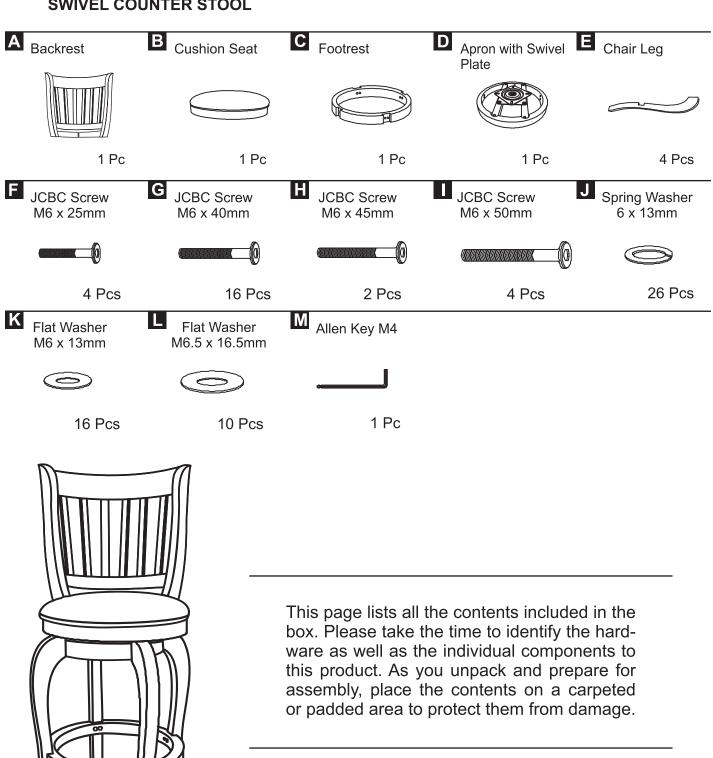

Attached the Chair Legs (E) to the Apron with swivel plate (D), then attach the Footrest (C) to the Chair Legs (E). Use JCBC Screw (G), Spring Washer (J), Flat Washer (K) with Allen Key (M) for both.

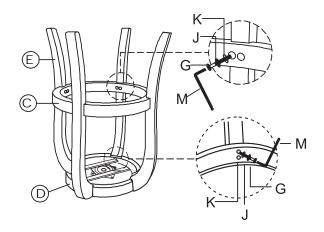


Invert Cushion Seat (B) and place on a stable raised surface (i.e. Table). Attached the Backrest (A) to the Cushion Seat (B) using JCBC Screw (H). (I), Spring Washer (J), Flat Washer (L) with Allen Key (M).

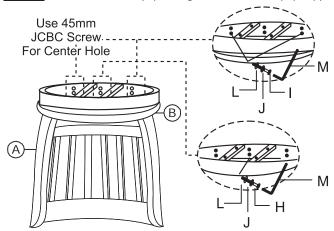

Take the Allen Wrench, and turn the bolts until the legs are secure. DO NOT TIGHTEN COMPLETELY. Stop when you feel you are adding force to tighten the bolt.

Stand chair up on an even surface and check that it is balanced. If there is a slight wobble, apply downward pressure in the corner where a leg is uneven. Keeping pressure in that corner, tighten all bolts. If balanced, apply downward pressure evenly in the center and tighten all bolts. Do not over-tighten beyond hole depth.

Keep the Backrest (A) and Cushion Seat (B) inverted on a stable raised surface. Attached the Swivel Plate located on the Apron with Swivel Plate (D) to the Cushion Seat (B) using JCBC Screw (F), Spring Washer (J), Flat Washer (L) with Allen Key (M). Turn the Swivel Pub Stool right side up.

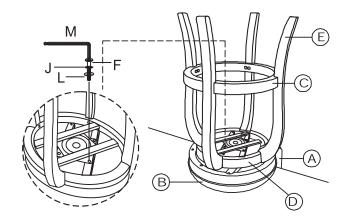

Helpful Tip:

-Instead of applying downward pressure while reaching under to tighten bolts, have someone sit on the chair while you tighten the bolts.

CLEANING & CARE

Treat surface with care. Surface is resistant to scratches but is not scratch resistant. Clean surfaces with a dry or damp soft cloth. Do not use abrasive cleaners. Hardware may loosen over time. Periodically check that all connections are tight.