
 

## **ASSEMBLY INSTRUCTIONS**

## **DINING CHAIR**

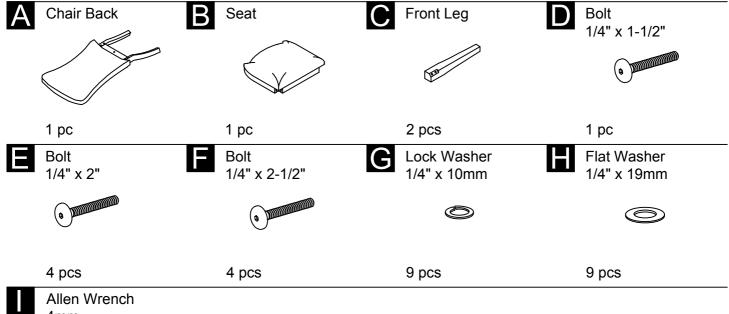




1 pc

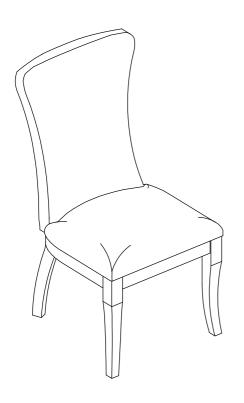


This page lists all the contents included in the box. Please take the time to identify the hardware as well as the individual components to this product. As you unpack and prepare for assembly, place the contents on a carpeted or padded area to protect them from damage.

Place the Chair Back (A) upside down on the smooth carpeted surface. Attach the Seat (B) to the Chair Back (A) using Bolt (D), Lock Washer (G) and Flat Washer (H) into the middle holes, and using Bolt (F), Lock Washer (G) and Flat Washer (H) into the corner holes, tightening with the Allen Wrench (I).

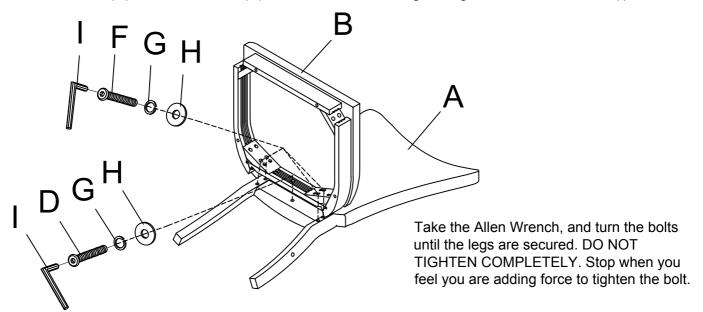

Attach the Front Leg (C) to the Seat (B) using Bolt (E), Lock Washer (G) and Flat Washer (H) with the Allen Wrench (I).

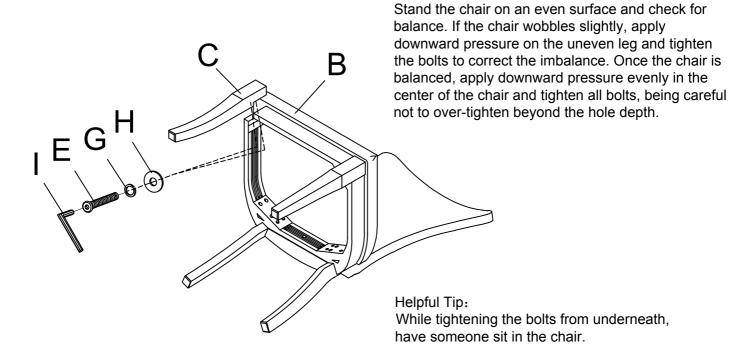

## Cleaning & Care

Treat surfaces with care. Surfaces are resistant to scratches but are not scratch resistant. Clean surfaces with a dry or damp soft cloth. Do not use abrasive cleaners. Hardware may loosen over time. Periodically check that all connections are tight.