

 
 

 


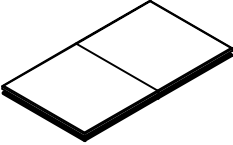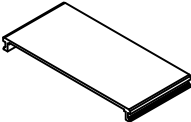

 



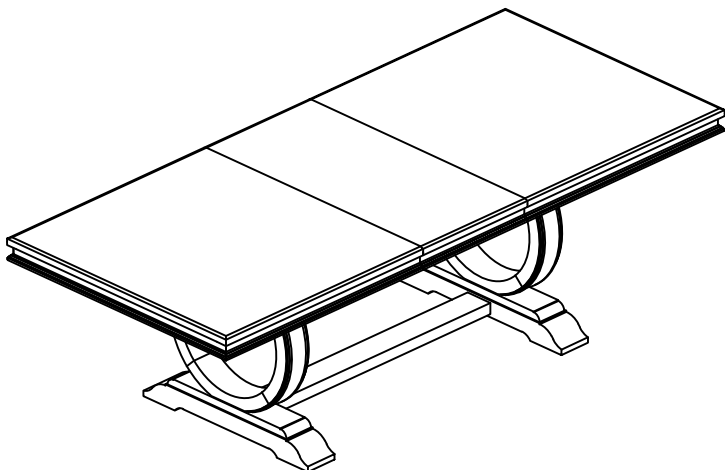


ASSEMBLY INSTRUCTIONS

DINING TABLE WITH LEAF


A Table Top  1 pc	B Table Leaf  1 pc	C Post  2 pcs	D Mounting Plate  2 pcs
E Center Stretcher  2 pcs	F Center Cross Bar  1 pc	G Bolt 5/16" x 2"  6 pcs	H Lock Washer 5/16" x 12mm  6 pcs
I Flat Washer 5/16" x 19mm  6 pcs	J Bolt 1/4" x 2"  8 pcs	K Bolt 1/4" x 1-1/2"  4 pcs	L Lock Washer 1/4" x 10mm  12 pcs
M Flat Washer 1/4" x 19mm  12 pcs	N Allen Wrench 4mm  1 pc		



This page lists all the contents included in the box. Please take the time to identify the hardware as well as the individual components to this product. As you unpack and prepare for assembly, place the contents on a carpeted or padded area to protect them from damage.


1

Attach the Mounting Plate (D) to the Post (C) using Bolt (G), Lock Washer (H) and Flat Washer (I) with the Allen Wrench (N).

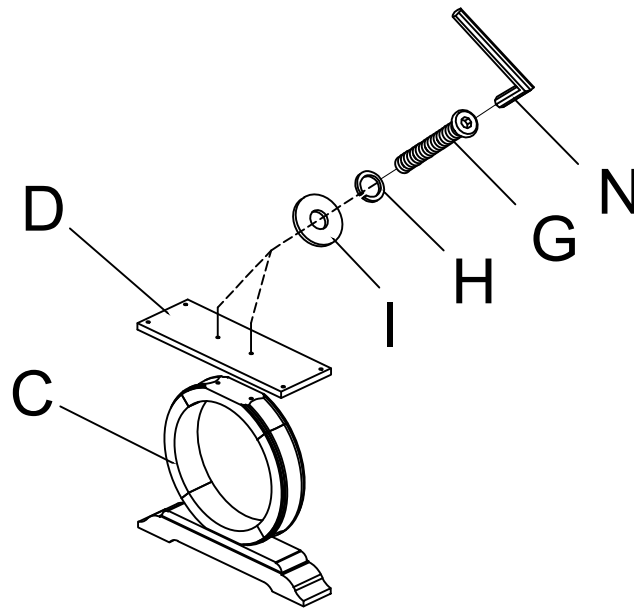**2**


Place the Table Top (A) upside down on the smooth carpeted surface.

- (i) Attach the Mounting Plate (D) to the Table Top (A) using Bolt (J), Lock Washer (L) and Flat Washer (M) with the Allen Wrench (N).
- (ii) Attach the Center Stretcher (E) to the Table Top (A) using Bolt (K), Lock Washer (L) and Flat Washer (M) with the Allen Wrench (N).
- (iii) Attach the Center Cross Bar (F) to the Post (C) using Bolt (G), Lock Washer (H) and Flat Washer (I) with the Allen Wrench (N).

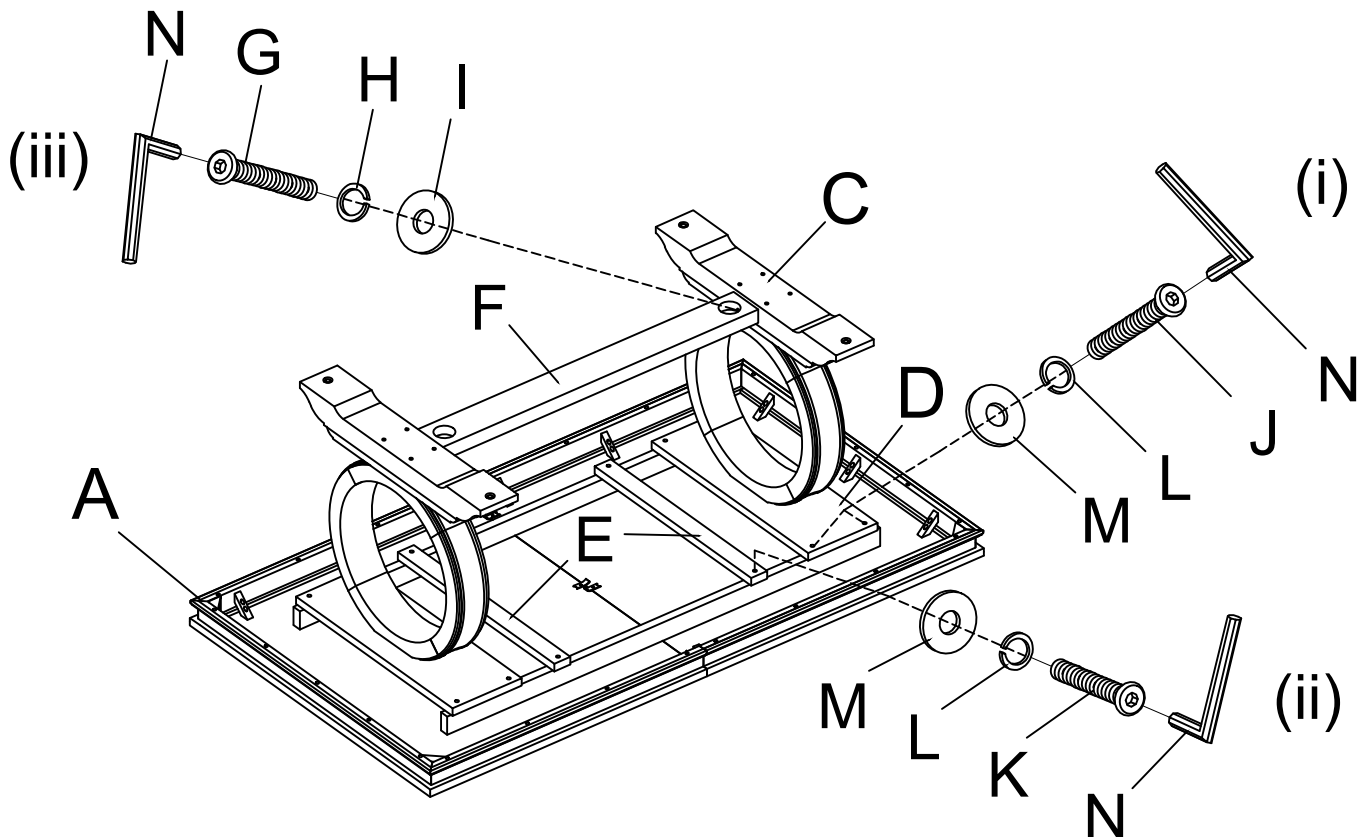


3

Open the Table Top (A) and put the Table Leaf (B) on the slides.

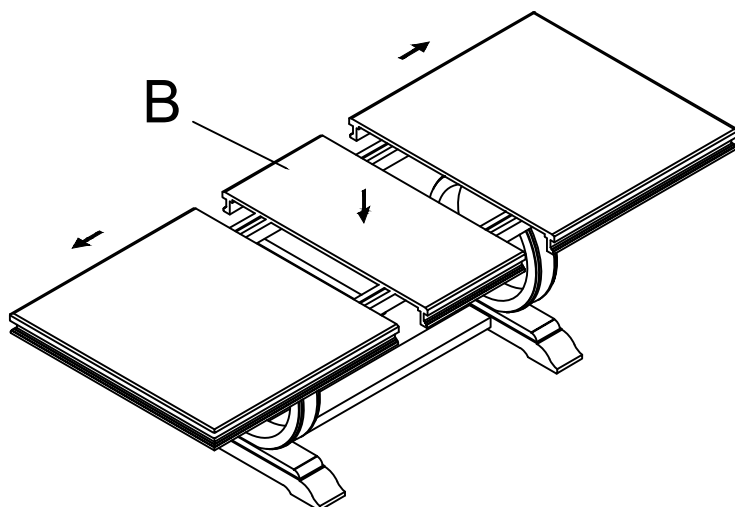**4**


Close the Table Top (A).

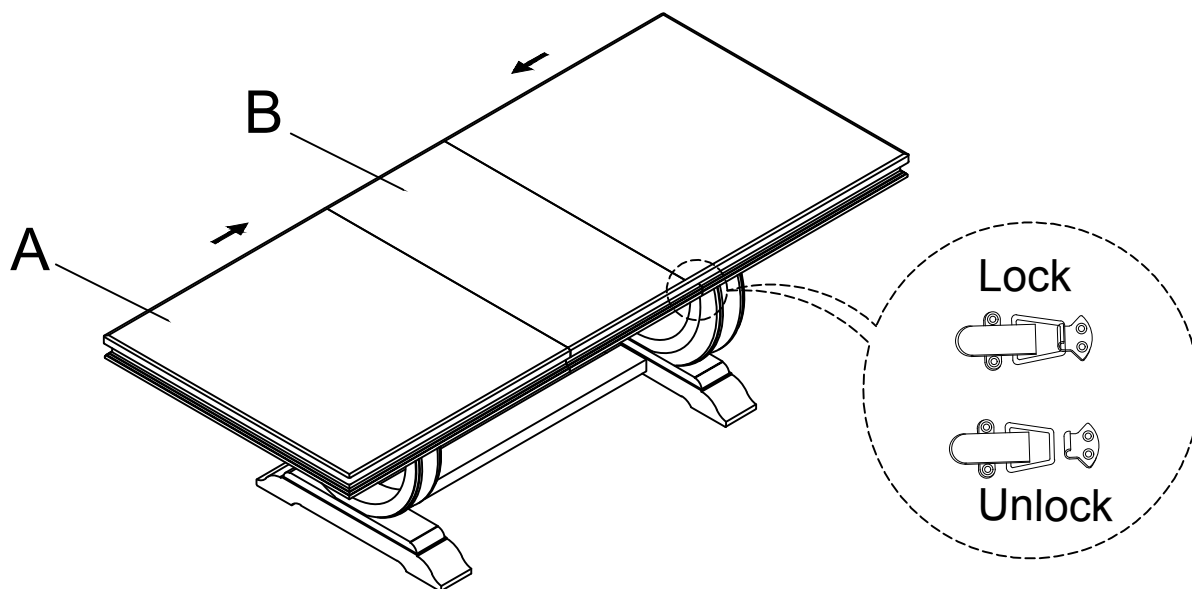

Adjust the spike to balance table.

5

The Table Leaf (B) can be stored inside the Table Top (A).


 
 
 
 
 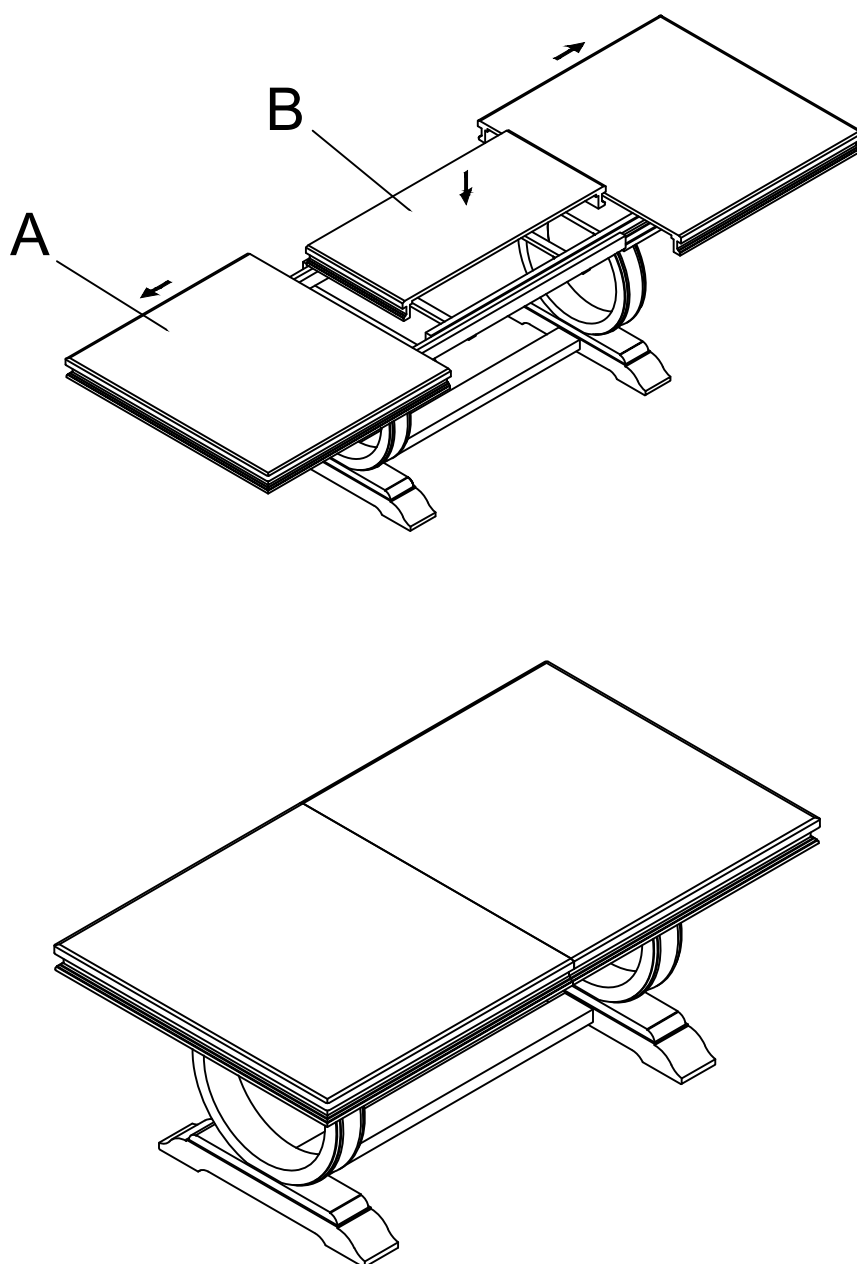





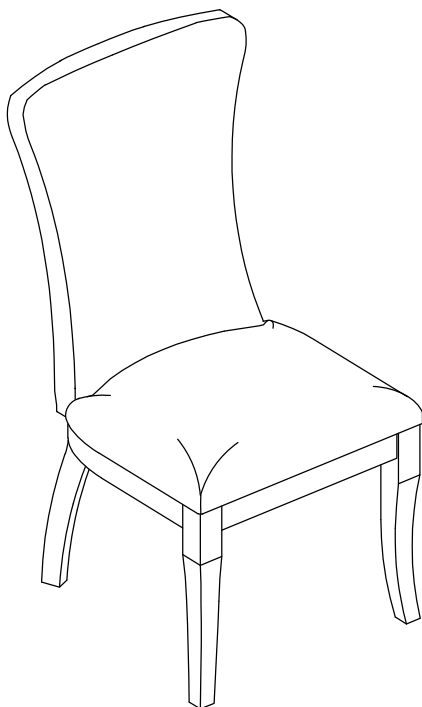
Cleaning & Care

Treat surfaces with care. Surfaces are resistant to scratches but are not scratch resistant. Clean surfaces with a dry or damp soft cloth. Do not use abrasive cleaners. Hardware may loosen over time. Periodically check that all connections are tight.

ASSEMBLY INSTRUCTIONS

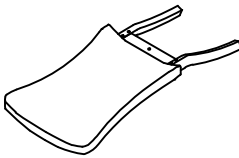
DINING CHAIR

A	Chair Back	B	Seat	C	Front Leg	D	Bolt 1/4" x 1-1/2"
							
1 pc		1 pc		2 pcs		1 pc	
E	Bolt 1/4" x 2"	F	Bolt 1/4" x 2-1/2"	G	Lock Washer 1/4" x 10mm	H	Flat Washer 1/4" x 19mm
							
4 pcs		4 pcs		9 pcs		9 pcs	
I	Allen Wrench 4mm						
							
1 pc							




This page lists all the contents included in the box. Please take the time to identify the hardware as well as the individual components to this product. As you unpack and prepare for assembly, place the contents on a carpeted or padded area to protect them from damage.

- 1** Place the Chair Back (A) upside down on the smooth carpeted surface. Attach the Seat (B) to the Chair Back (A) using Bolt (D), Lock Washer (G) and Flat Washer (H) into the middle holes, and using Bolt (F), Lock Washer (G) and Flat Washer (H) into the corner holes, tightening with the Allen Wrench (I).

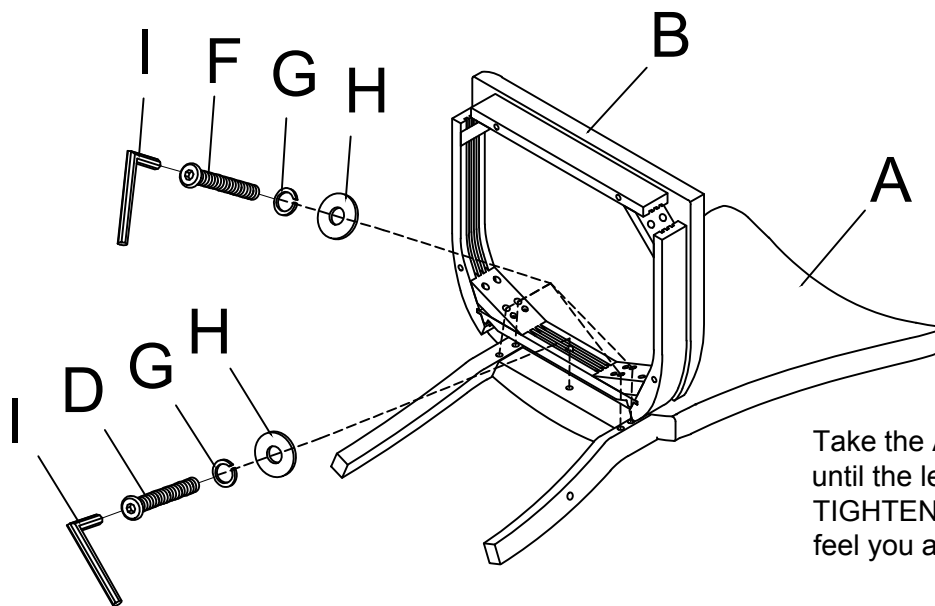

Take the Allen Wrench, and turn the bolts until the legs are secured. DO NOT TIGHTEN COMPLETELY. Stop when you feel you are adding force to tighten the bolt.

- 2** Attach the Front Leg (C) to the Seat (B) using Bolt (E), Lock Washer (G) and Flat Washer (H) with the Allen Wrench (I).

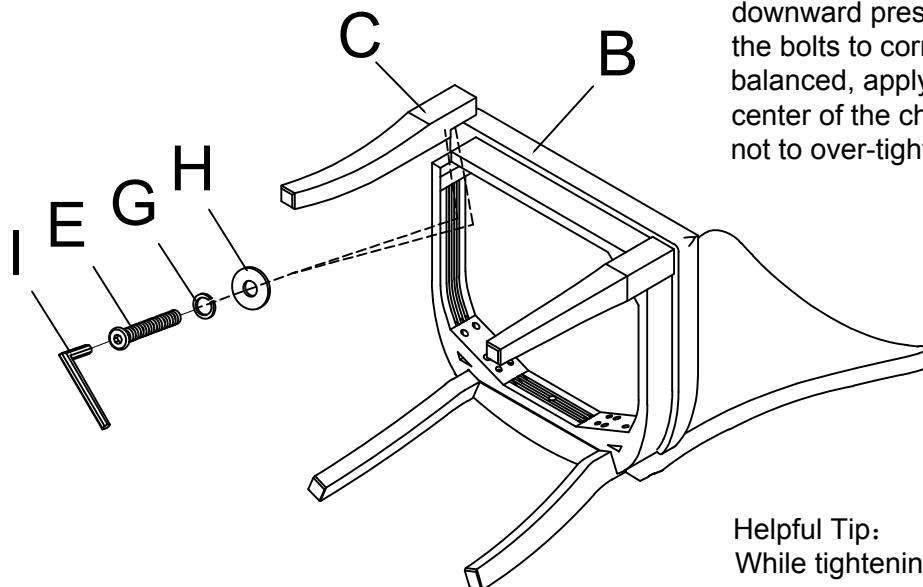

Stand the chair on an even surface and check for balance. If the chair wobbles slightly, apply downward pressure on the uneven leg and tighten the bolts to correct the imbalance. Once the chair is balanced, apply downward pressure evenly in the center of the chair and tighten all bolts, being careful not to over-tighten beyond the hole depth.

Helpful Tip:
While tightening the bolts from underneath, have someone sit in the chair.

Cleaning & Care

Treat surfaces with care. Surfaces are resistant to scratches but are not scratch resistant. Clean surfaces with a dry or damp soft cloth. Do not use abrasive cleaners. Hardware may loosen over time. Periodically check that all connections are tight.