
ASSEMBLY INSTRUCTION


BROWN FINISH END TABLE



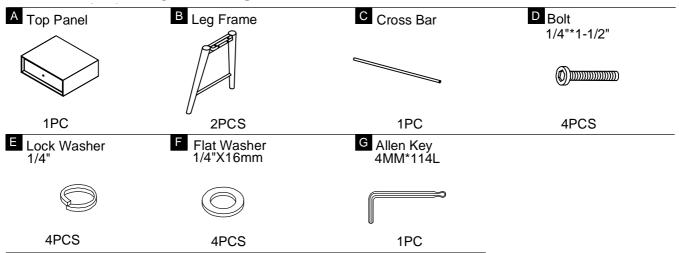


This page lists all the contents included in the box. Please take the time to identify the hardware as well as the individual components to this product. AS you unpack and prepare for assembly. place the contents on a carpeted or padded area to protect them from damage.

Attach 1pc Leg Frame (B) to the Table Top (A) by using Flat Washer (F), Lock Washer (E) and Bolt (D) with Allen Key (G), and Insert the Cross Bar (C) to the attached Leg Frame (B) and then fix another Leg Frame (B).

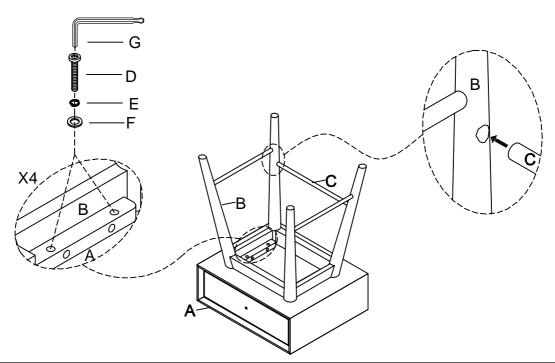

Remove the knob from the inside of the drawer and then attached the Kob to the front drawer.

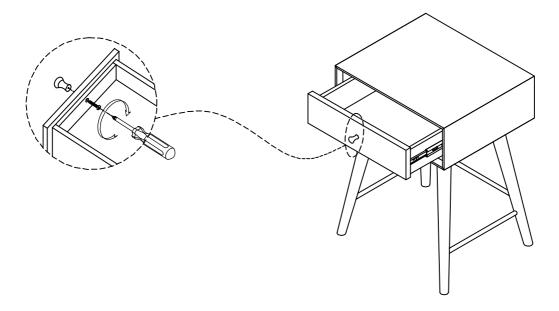



Cleaning & Care

Treat surface with care. Surface is resistant to scratches but is not scratch resistant. Clean surfaces with a dry or damp soft cloth. Do not use abrasive cleaners. Hardware may loosen over time. Periodically check that all connections are tight.

ASSEMBLY INSTRUCTION


BROWN FINISH COCKTAIL TABLE

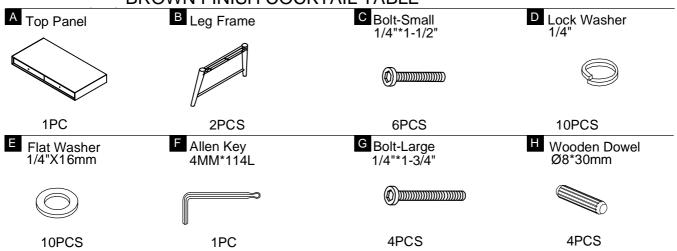


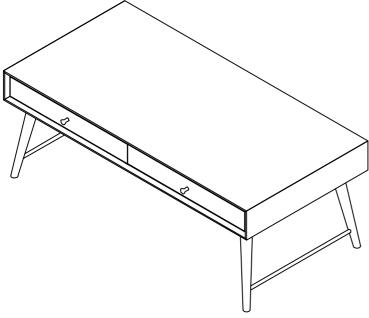

This page lists all the contents included in the box. Please take the time to identify the hardware as well as the individual components to this product. AS you unpack and prepare for assembly. place the contents on a carpeted or padded area to protect them from damage.

Attach the Leg Frame (B) to the Table Top (A) by using Flat Washer (E), Lock Washer (D) and Bolt-Small (C) with Allen Key (F), and by using Wood Dowel (H), Flat Washer (E), Lock Washer (D) and Bolt-Large (G) with Allen Key (F).

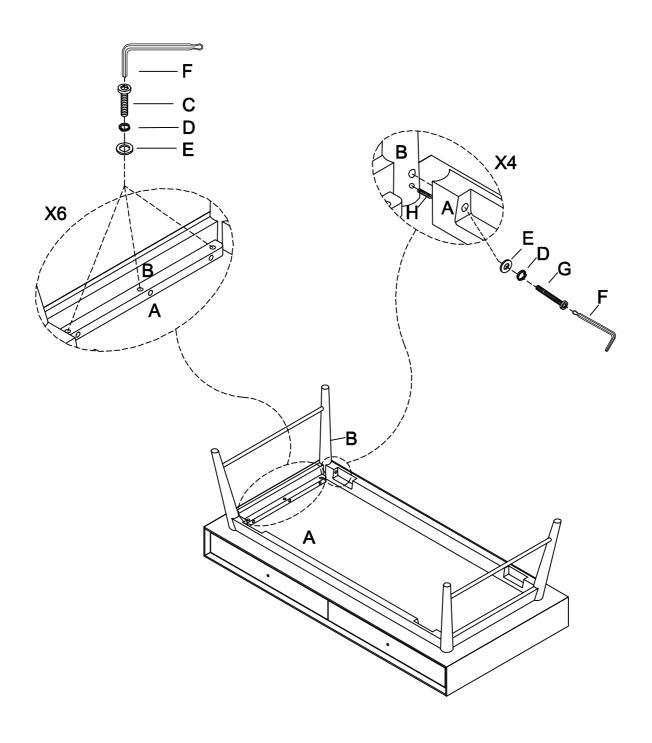


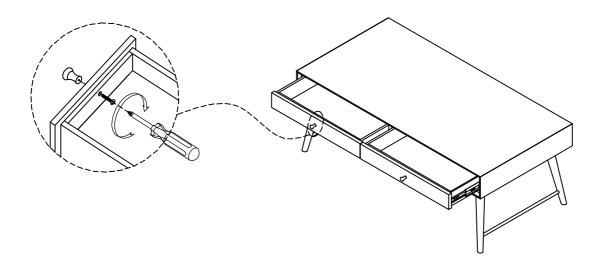

Cleaning & Care

Treat surface with care. Surface is resistant to scratches but is not scratch resistant. Clean surfaces with a dry or damp soft cloth. Do not use abrasive cleaners. Hardware may loosen over time. Periodically check that all connections are tight.

ASSEMBLY INSTRUCTION

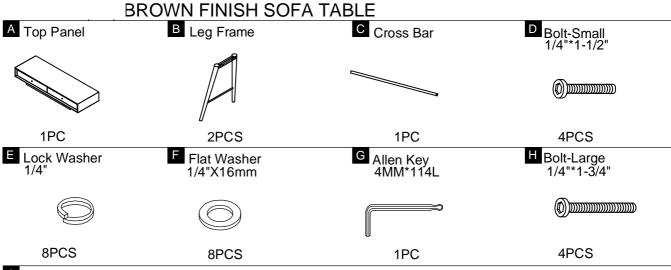






4PCS




This page lists all the contents included in the box. Please take the time to identify the hardware as well as the individual components to this product. AS you unpack and prepare for assembly. place the contents on a carpeted or padded area to protect them from damage.

Attach the Leg Frame (B) to the Table Top (A) by using Flat Washer (F), Lock Washer (E) and Bolt-Small (D) with Allen Key (G), and by using Wood Dowel (I), Flat Washer (F), Lock Washer (E) and Bolt-Middle (H) with Allen Key (G), and Insert the Cross Bar (C) to the attached Leg Frame (B) and then fix another Leg Frame (B).

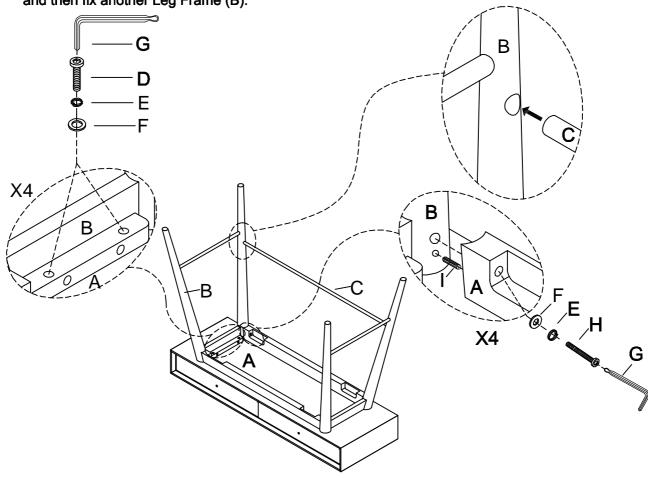

2 Remove the knob from the inside of the drawer and then attached the Knob to the front drawer.

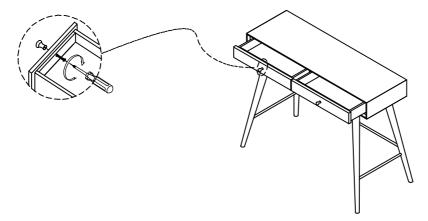

Cleaning & Care

Treat surface with care. Surface is resistant to scratches but is not scratch resistant. Clean surfaces with a dry or damp soft cloth. Do not use abrasive cleaners. Hardware may loosen over time. Periodically check that all connections are tight.