

# ASSEMBLY INSTRUCTIONS

## 42" ROUND DINING TABLE

---

<b>A</b> Table Top	<b>B</b> Upper Frame	<b>C</b> Lower Frame	<b>D</b> Table Leg
--------------------	----------------------	----------------------	--------------------

 
---



1 pc



1 pc



1 pc



4 pcs

---

**E** X-Bracket  
3,2/5"



 
2 pcs

**F** Bolt with  
Lock Washer  
and Flat  
Washer  
1/4", 5/8"




24 pcs

**G** Allen Wrench  
2 3/4", 1/4"



1 pc


---

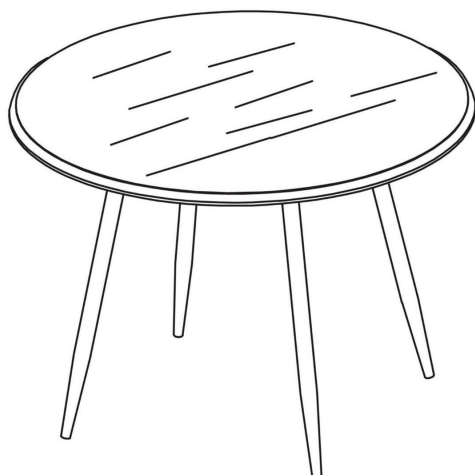

This page lists all the contents included in the box. Please take the time to identify the hardware as well as the individual components to this product. As you unpack and prepare for assembly, place the contents on a carpeted or padded area to protect them from damage.


1

Insert Lower Frame ( C ) into Upper Frame ( B ). Then, attach X-Bracket ( E ) to the assembled frame ( B & C ) using Bolt with Lock Washer and Flat Washer ( F ) with Allen Wrench ( G ).

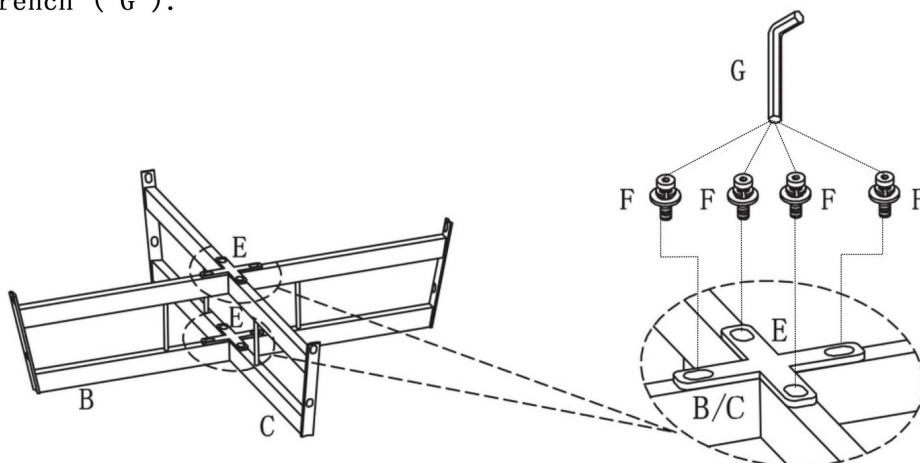


2

Align and attach Table Leg ( D ) to the assembled frame ( B & C ) using Bolt with Lock Washer and Flat Washer ( F ) with Allen Wrench ( G ).

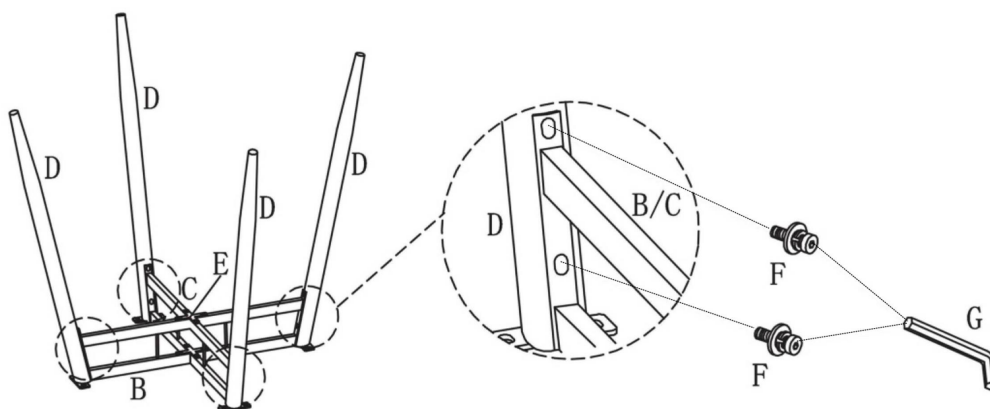

3

Place Table Top ( A ) upside down on a stable, smooth and carpeted surface. Then, attach Table Leg ( D ) to Table Top ( A ) using Bolt with Lock Washer and Flat Washer ( F ) with Allen Wrench ( G ).

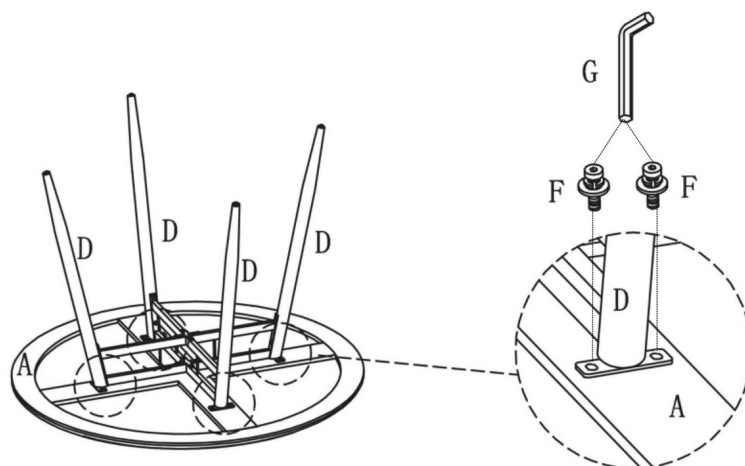

## Cleaning & Care

Treat surfaces with care. Surfaces are resistant to scratches but are not scratch resistant. Clean surfaces with a dry or damp soft cloth. Do not use abrasive cleaners. Hardware may loosen over time. Periodically check that all connections are tight.