 
 
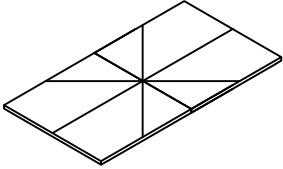 
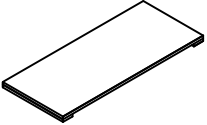 
 


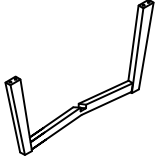

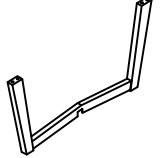


ASSEMBLY INSTRUCTION


18" LEAF DINING TABLE

A Table Top  1 pc	B Leaf  1 pc	C Mounting Plate  2 pcs	D Leg (Up)  1 pc	E Leg (Down)  1 pc
F Allen Bolt Ø5/16"x45mm  17 pcs	G Lock Washer Ø5/16"x11mm  17 pcs	H Flat Washer Ø5/16"x19x1.5mm  17 pcs	I Allen Key 4mm  1 pc	

 
This page lists all the contents included in the box. Please take the time to identify the hardware as well as the individual components to this product. As you unpack and prepare for assembly, place the contents on a carpeted or padded area to protect them from damage.

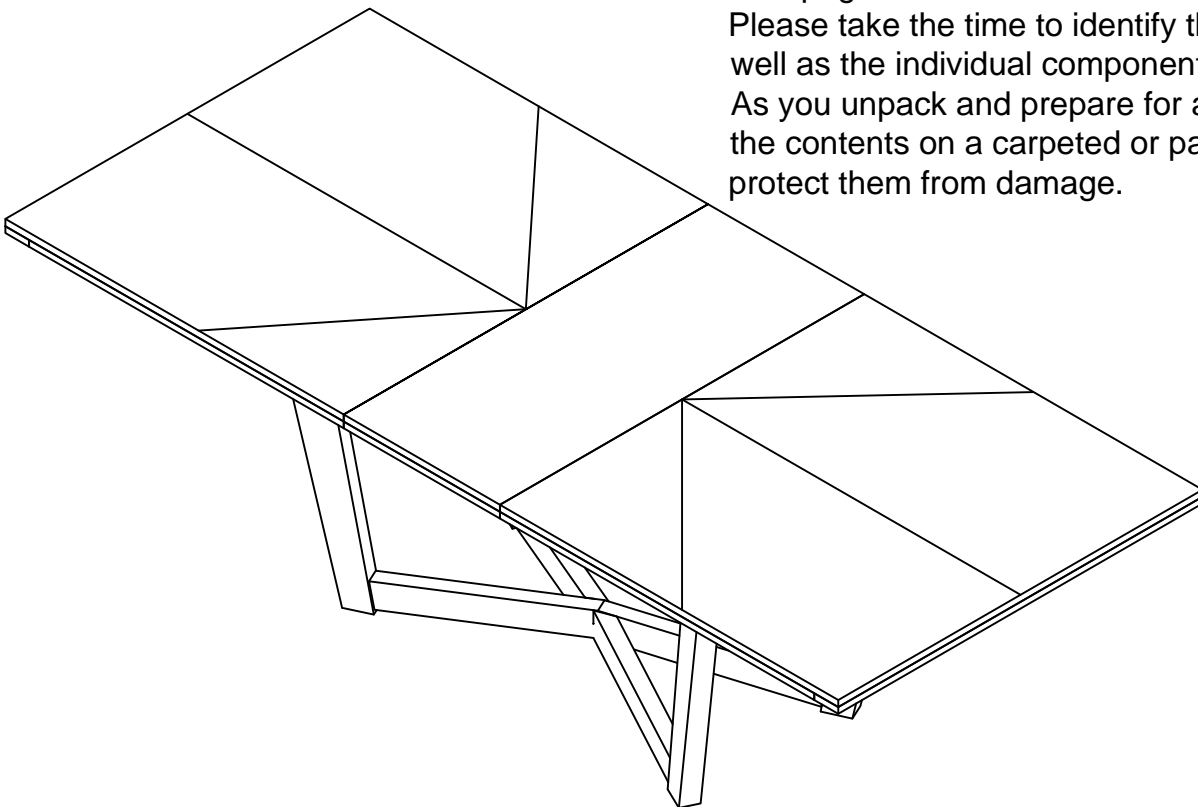

 
- 1** Attached Leg Up(D) and Leg Down(E) to the Mounting Plate(C). Use Allen Bolt(F) Lock Washer(G) and Flat Washer(H) on holes of Leg Frame(C). Turn the Allen Key(I) in Allen Bolt(F).

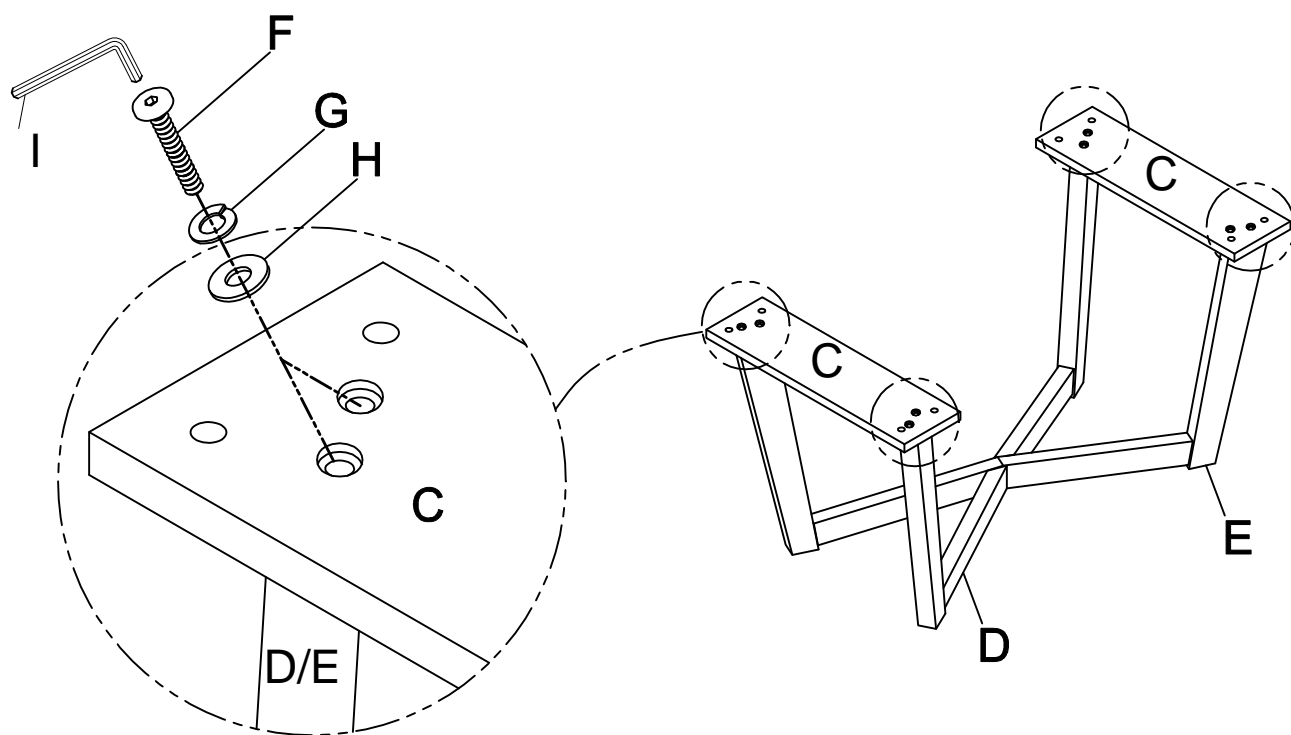

 
- 2** Use Allen Bolt(F) Lock Washer(G) and Flat Washer(H) on holes of Leg Down(D). Turn the Allen Key(I) in Allen Bolt(F).

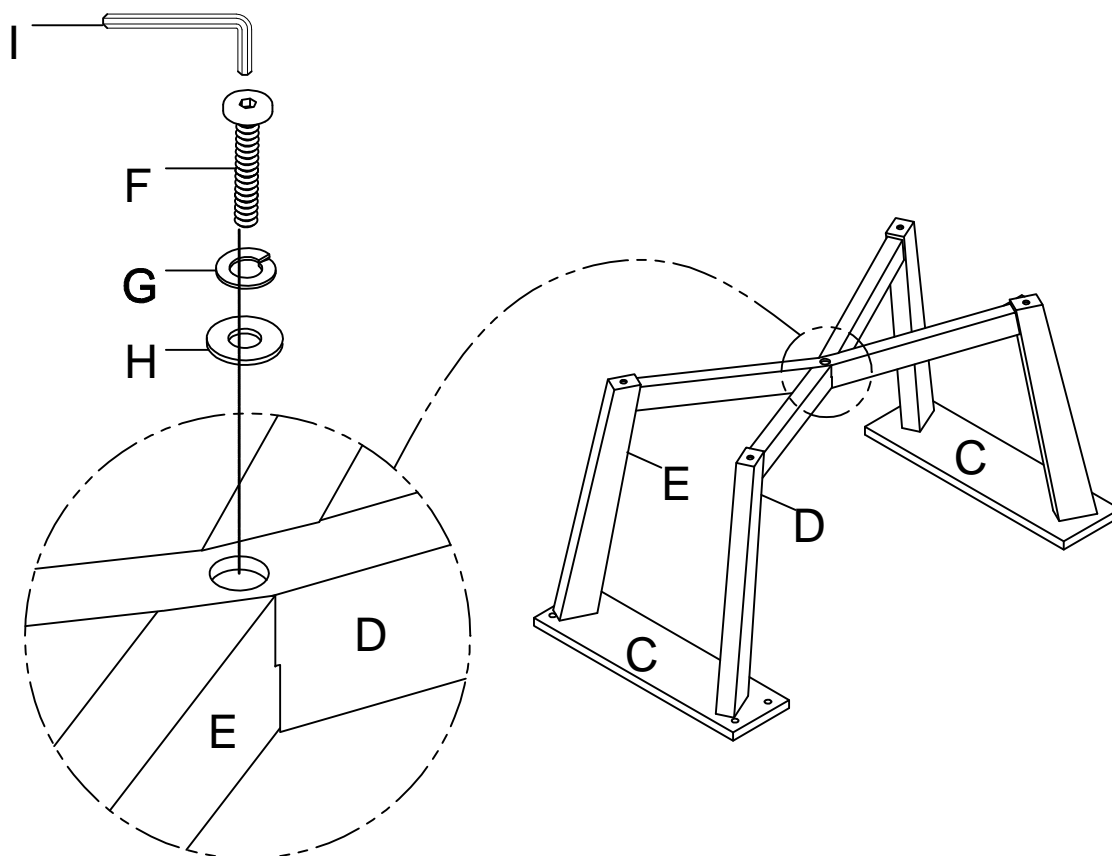


3 Attached Mounting Plate(C) to the Table Top(A). Use Allen Bolt(F) Lock Washer(G) and Flat Washer(H) on holes of Table Top(A). Turn the Allen Key(I) in Allen Bolt(F).

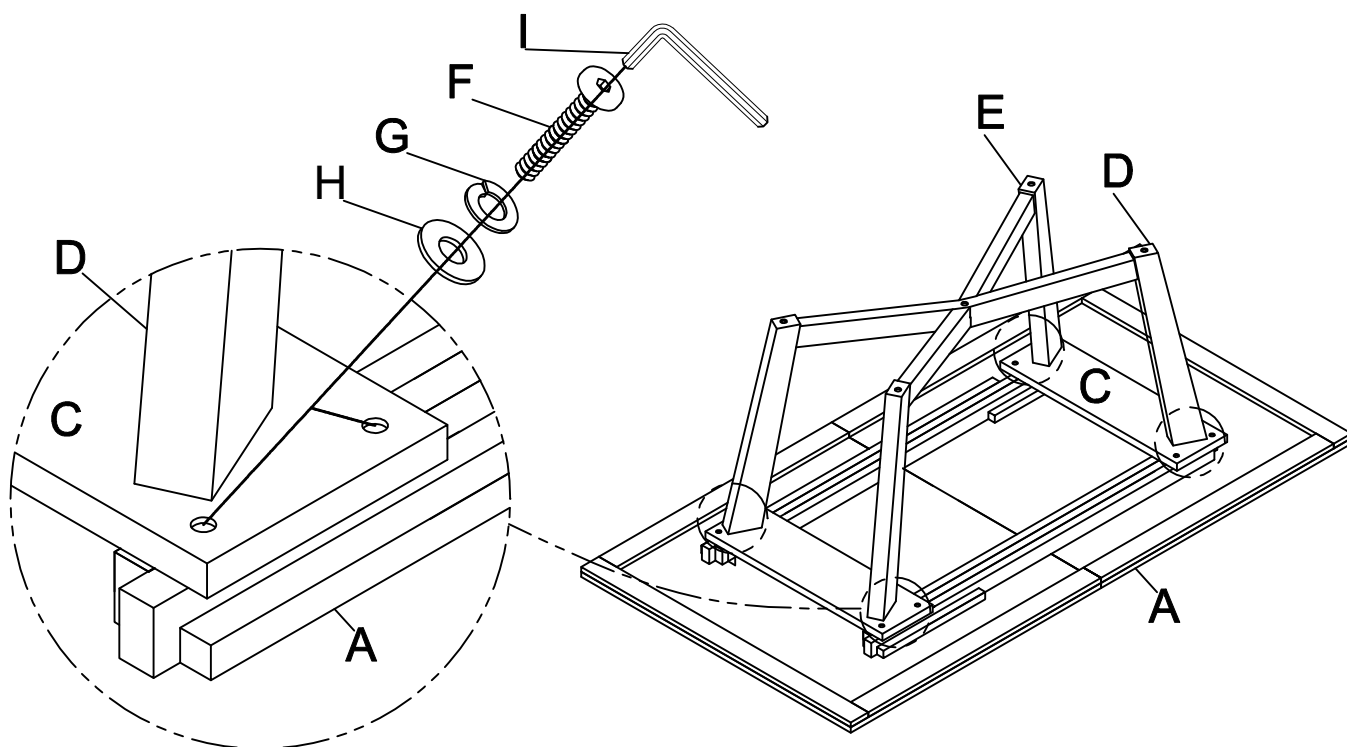 


4 Open the Sash Lock.

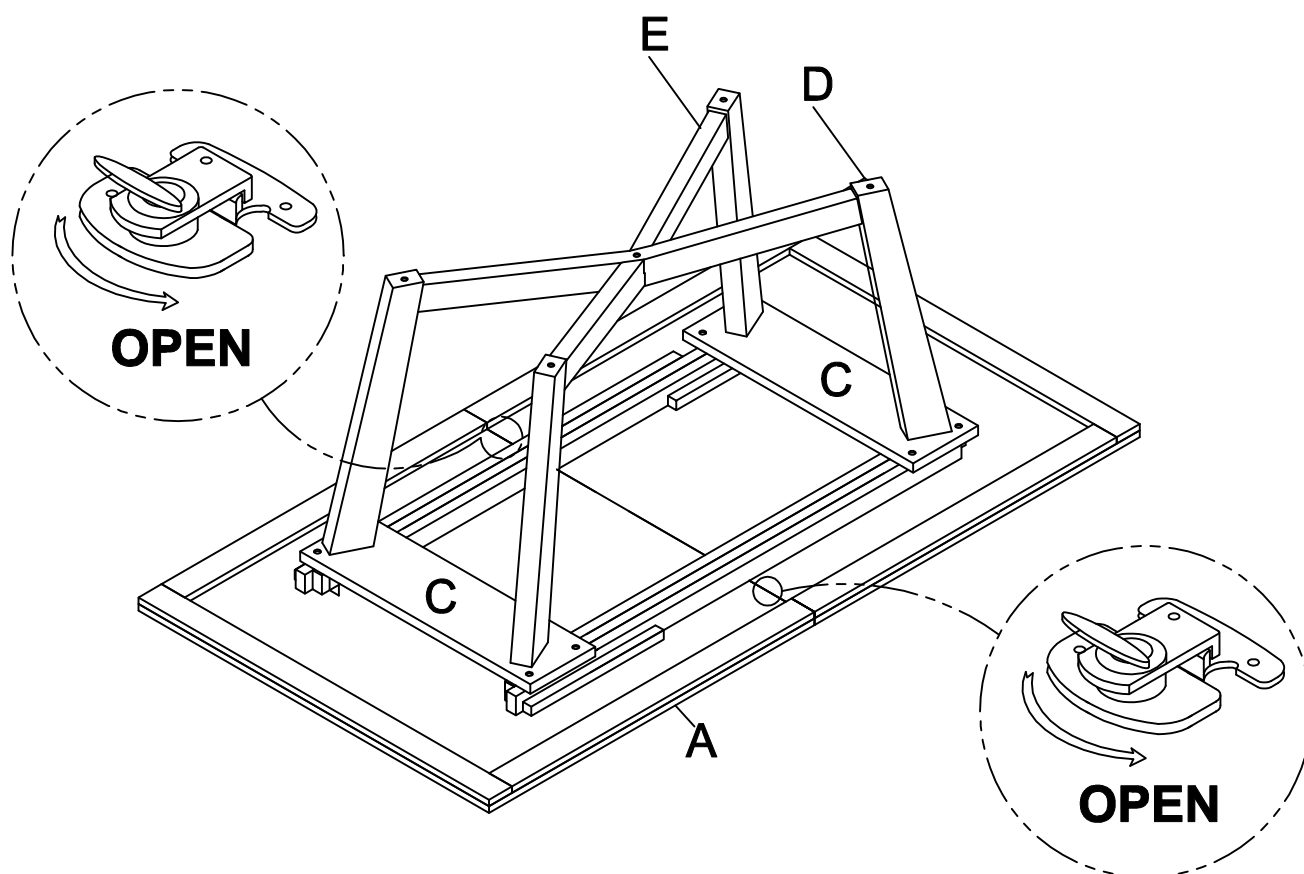 


5 Put out Table Top(A) each side.

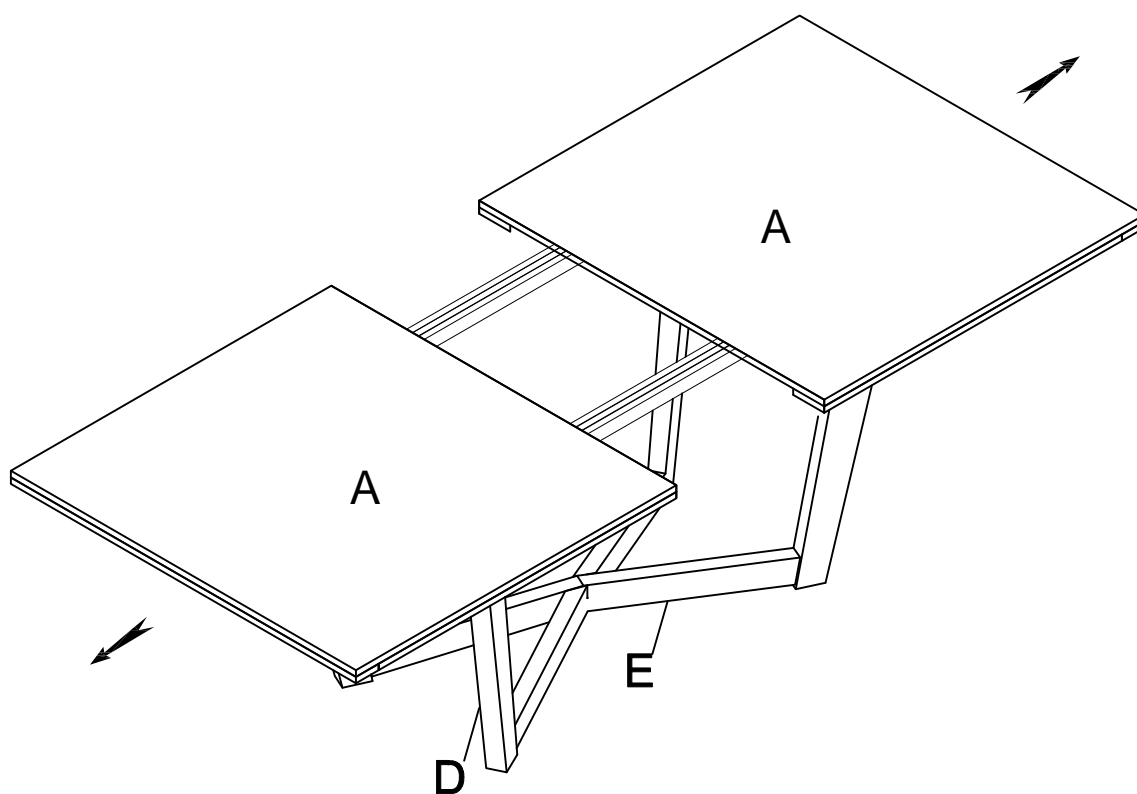 


6 Attached Leaf(B) to Table Top(A),push two side tops that reach this leaf .

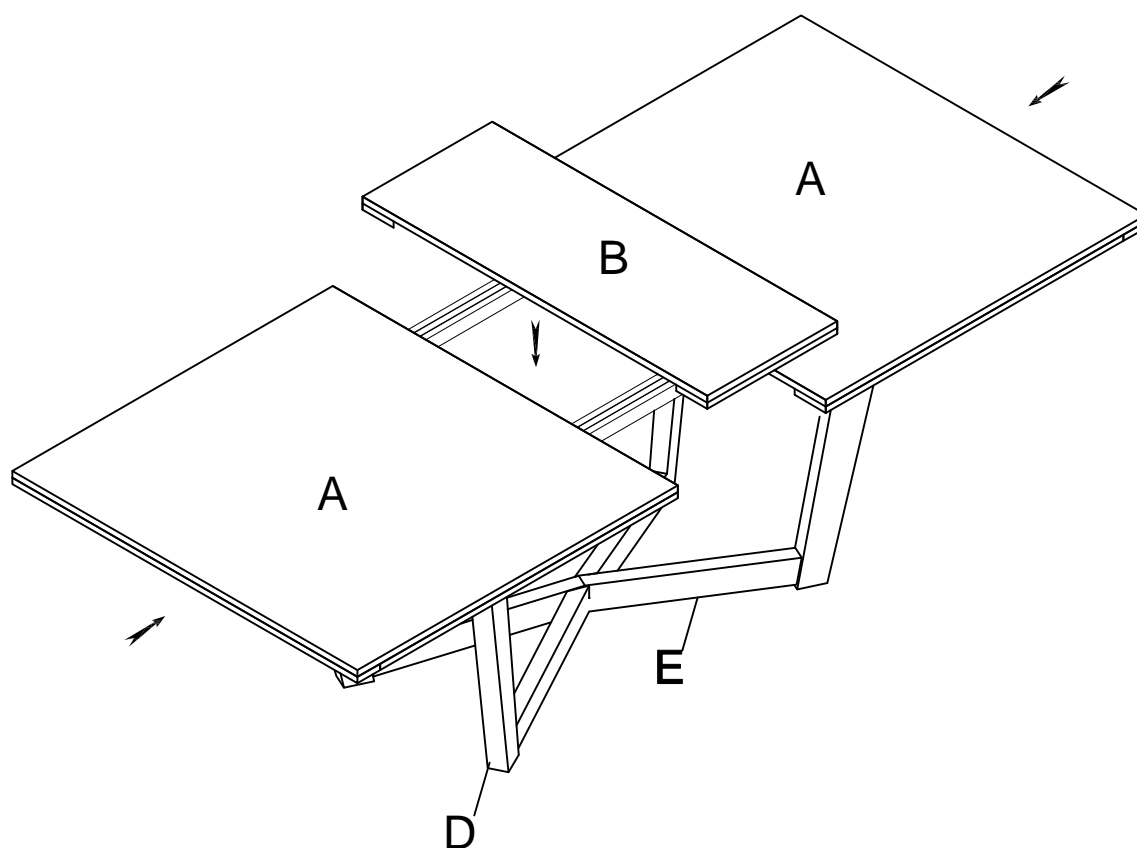 

7 Lock the Leaf(B) by using Sash Lock.

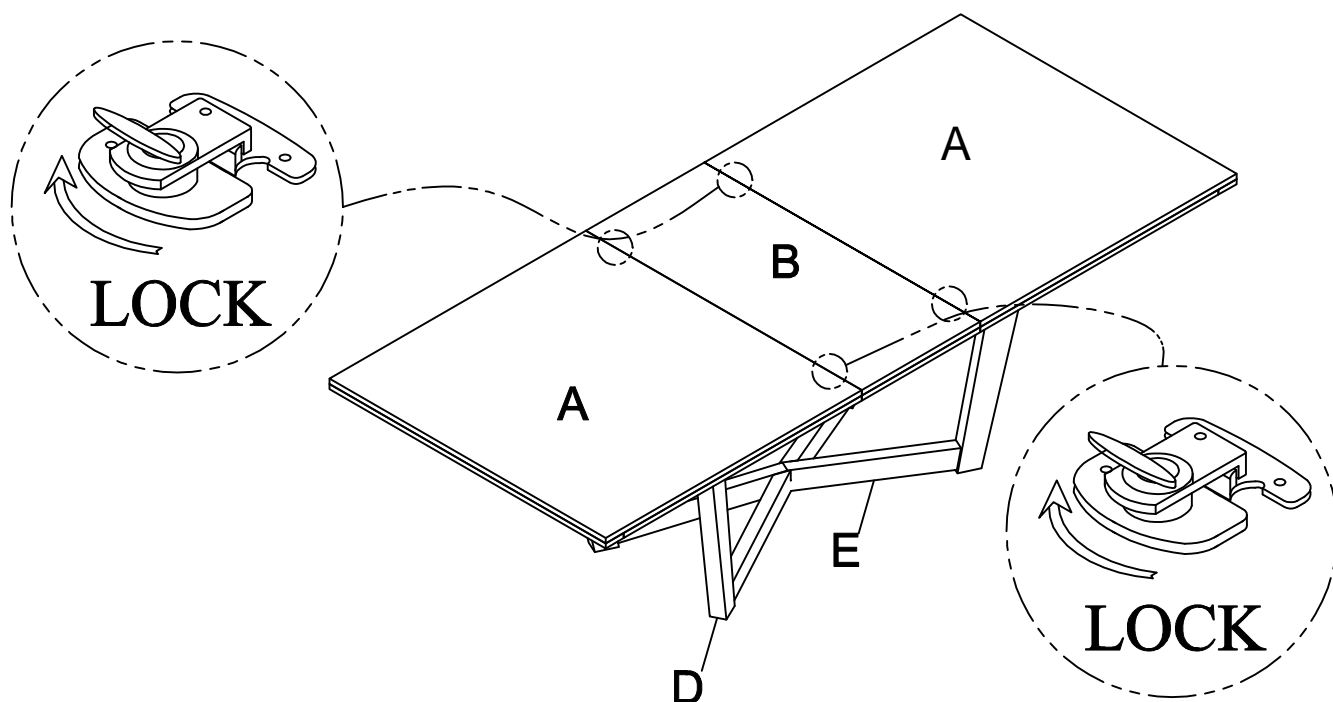 

 8 Adjusted the Leveler at the bottom of Leg(D,E), to keep the table level.

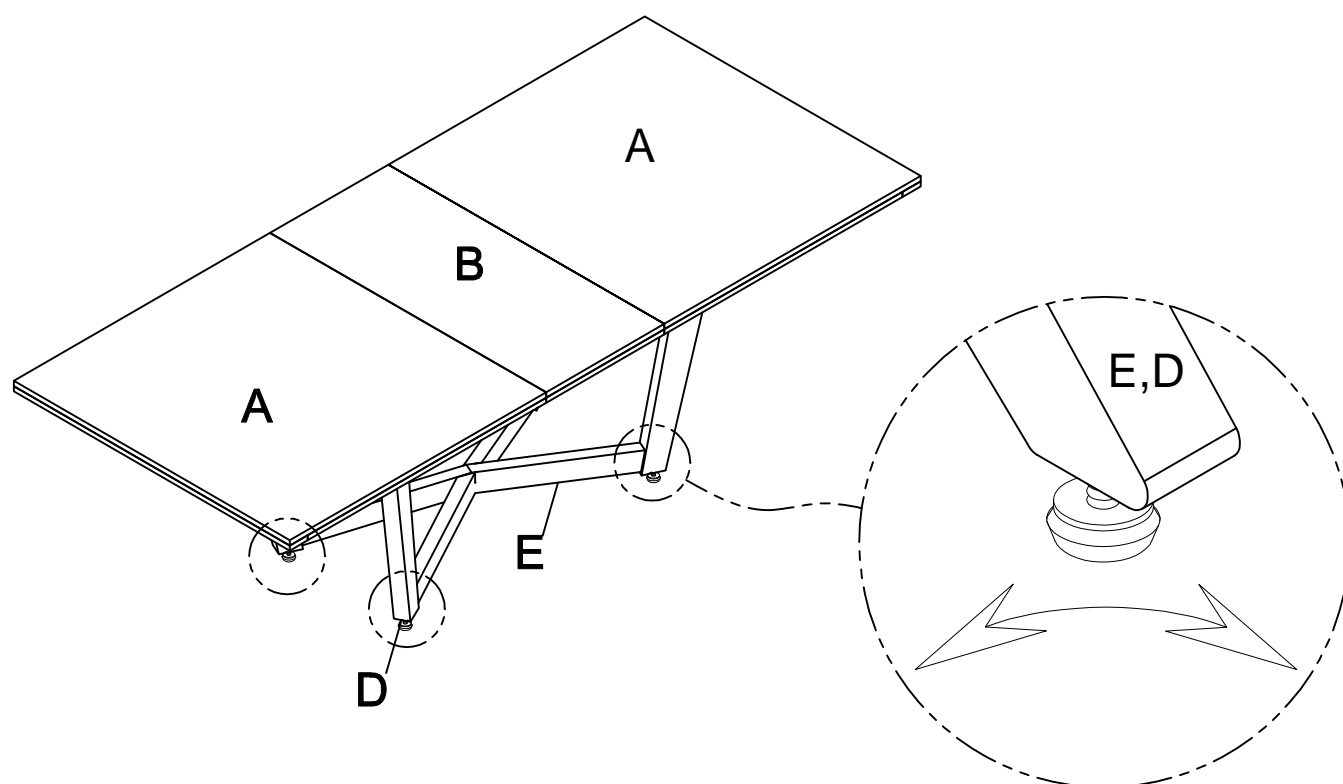

Cleaning & Care

Treat surface with care. Surface is resistant to scratches but is not scratch resistant. Clean surfaces with a dry or damp soft cloth. Do not use abrasive cleaners. Hardware may loosen over time. Periodically check that all connections are tight.