 
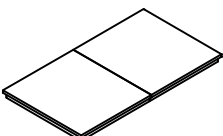 
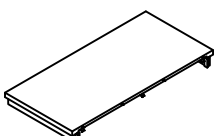 
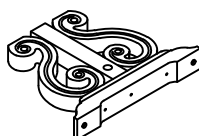 
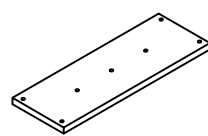 
 


ASSEMBLY INSTRUCTIONS


DINING TABLE

A Table Top  1 pc	B Table Leaf  1 pc	C Leg  2 pcs	D Mounting Plate  2 pcs
E Stretcher  1 pc	F Trim (Locked on both sides of the E)  2 pcs	G Bolt 5/16" x 2"  6 pcs	H Lock Washer 5/16" x 12mm  6 pcs
I Flat Washer 5/16" x 19mm  6 pcs	J Bolt 1/4" x 2"  8 pcs	K Lock Washer 1/4" x 10mm  8 pcs	L Flat Washer 1/4" x 19mm  8 pcs
M Allen Wrench 4mm  1 pc			

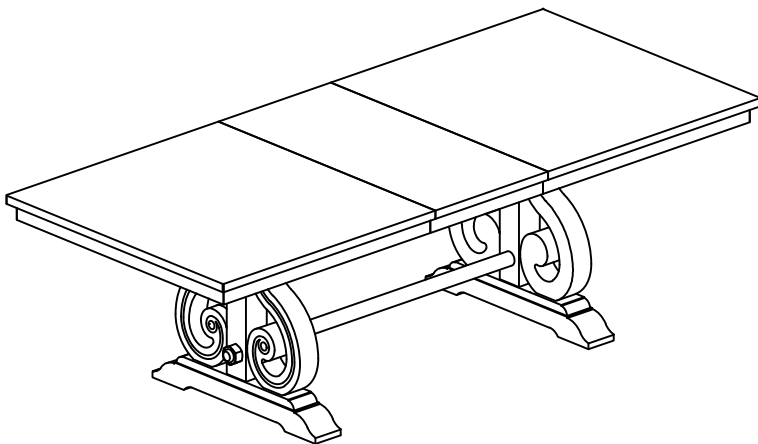


This page lists all the contents included in the box. Please take the time to identify the hardware as well as the individual components to this product. As you unpack and prepare for assembly, place the contents on a carpeted or padded area to protect them from damage.

 
- 1** Place the Leg (C) down on a smooth carpeted surface. Attach the Mounting Plate (D) to the Leg (C) by using Bolt (G), Lock Washer (H) and Flat Washer (I) with the Allen Wrench (M). Then, remove the Trim (F) from both sides of the Stretcher (E).

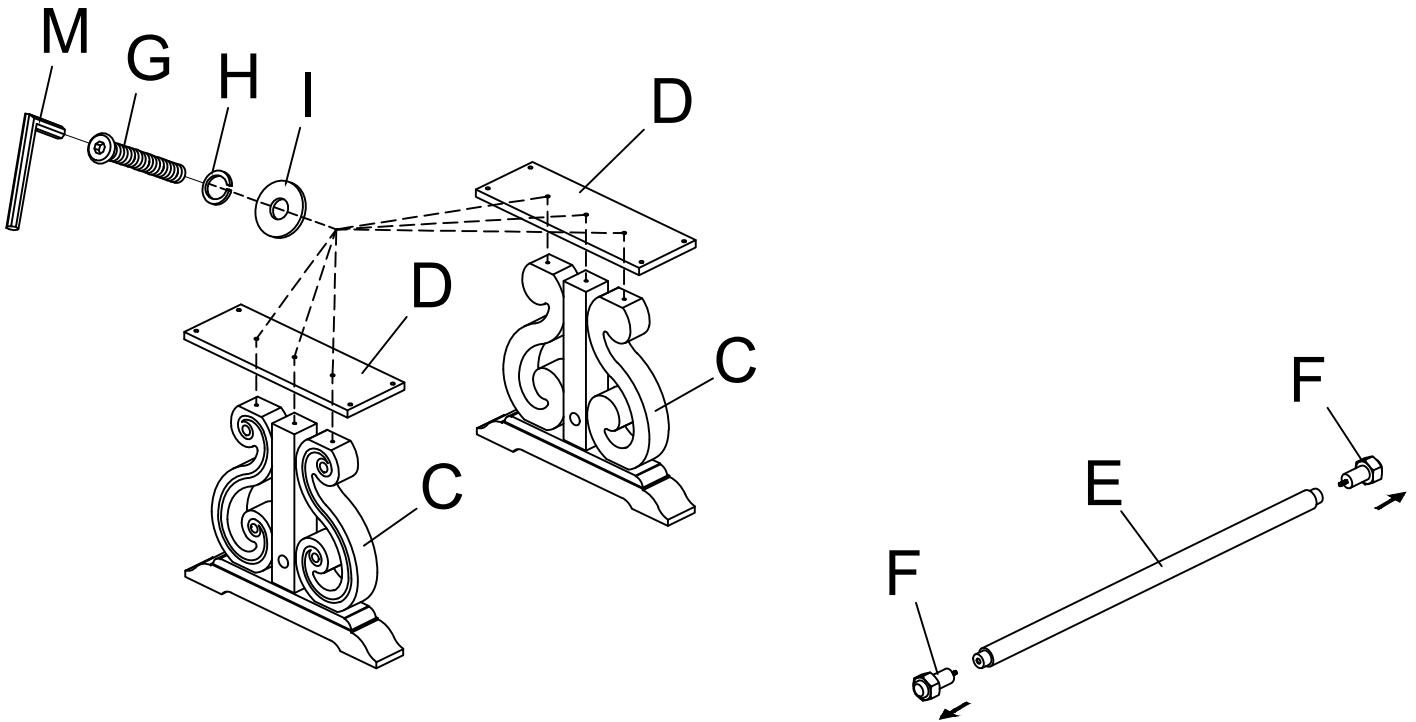

 
- 2** Place the Table Top (A) upside down on a smooth carpeted surface. Attach the Mounting Plate (D) to the Table Top (A) by using Bolt (J), Lock Washer (K) and Flat Washer (L) with the Allen Wrench (M).

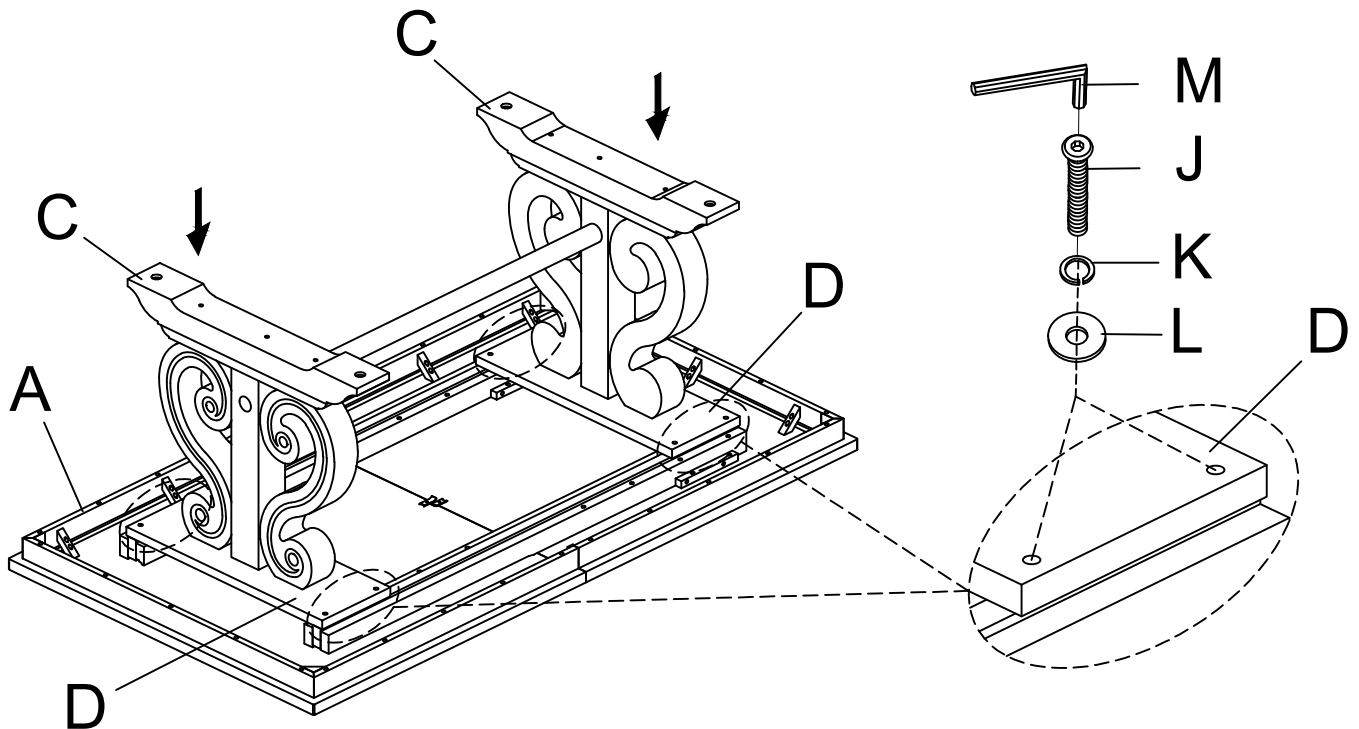

 -
- 3** Place the Stretcher (E) between the Leg (C) and secure it with the Trim (F).

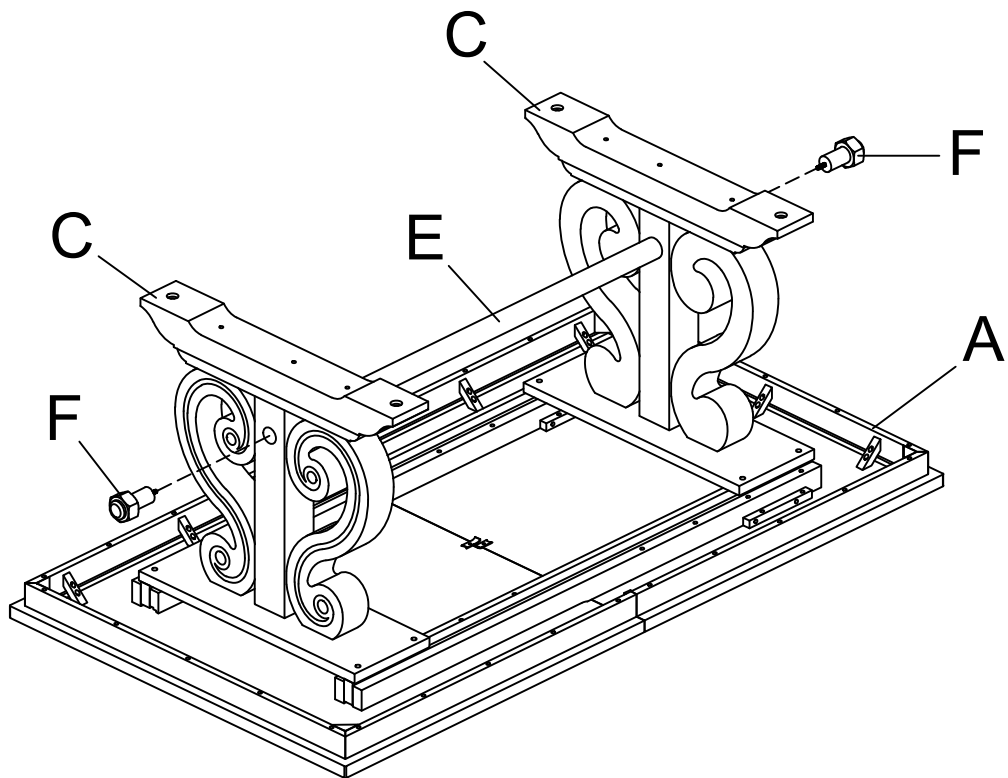

 -
- 4** Open the Table Top (A) and place the Table Leaf (B) on the slides.

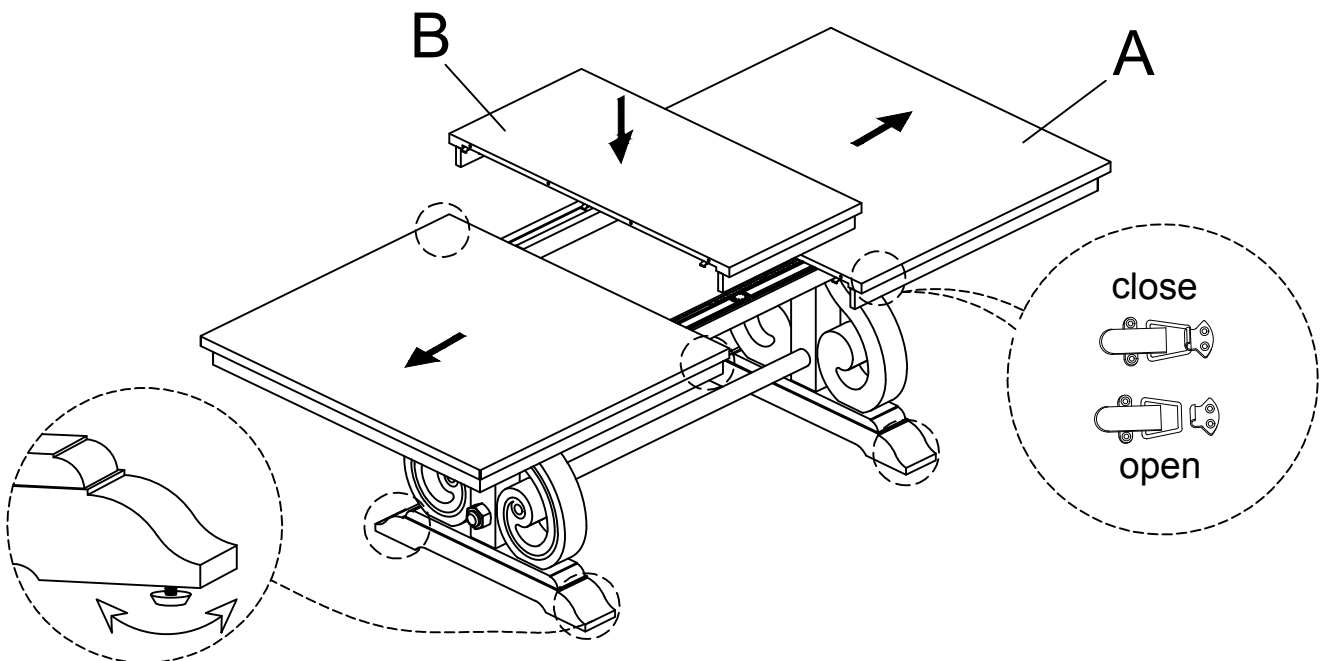







Adjust the levelers to balance the table.


Cleaning & Care

Treat surfaces with care. Surfaces are resistant to scratches but are not scratch resistant. Clean surfaces with a dry or damp soft cloth. Do not use abrasive cleaners. Hardware may loosen over time. Periodically check that all connections are tight.

ASSEMBLY INSTRUCTIONS

      
DINING CHAIR

A Chair Back  1 pc	B Seat  1 pc	C Left Front Leg  1 pc	D Right Front Leg  1 pc
E Left Stretcher  1 pc	F Right Stretcher  1 pc	G Bolt 1/4 " x 3"  4 pcs	H Bolt 1/4" x 2"  4 pcs
I Bolt 1/4" x 1-1/2"  1 pc	J Lock Washer 1/4" x 10mm  9 pcs	K Flat Washer 1/4" x 19mm  9 pcs	L Screw #8 x 38mmL  4 pcs
M Allen Wrench 4mm  1 pc			

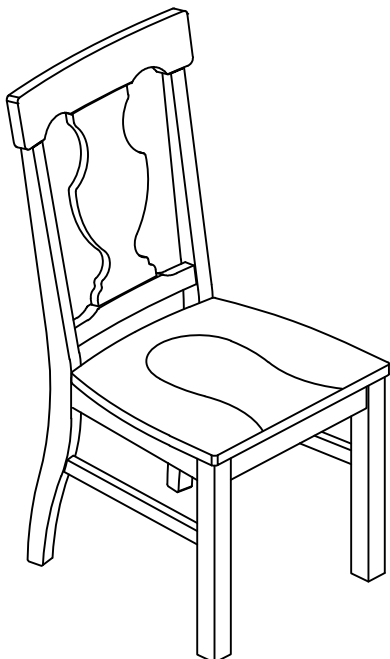 


This page lists all the contents included in the box. Please take the time to identify the hardware as well as the individual components to this product. As you unpack and prepare for assembly, place the contents on a carpeted or padded area to protect them from damage.

 - 1** Place the Seat (B) upside down on a smooth carpeted surface. Attach the Left & Right Front Leg (C & D) to the corner blocks of the Seat (B) by using Bolt (H), Lock Washer (J) and Flat Washer (K) with the Allen Wrench (M).

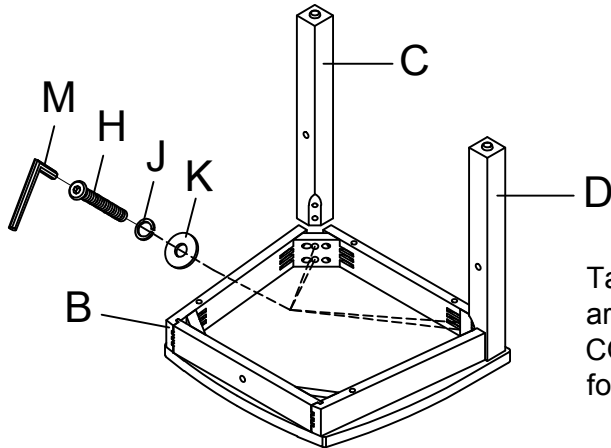


Take the Allen Wrench and turn the bolts until the legs are secured. **DO NOT TIGHTEN THE BOLTS COMPLETELY.** Stop when you feel you are adding force to tighten the bolts.

 - 2** While placing the Left & Right Stretcher (E & F) between the front and back legs, attach the Seat (B) to the Back Frame (A) by using Bolt (G) (corners) and Bolt (I) (center), along with Lock Washer (J) and Flat Washer (K) with the Allen Wrench (M).

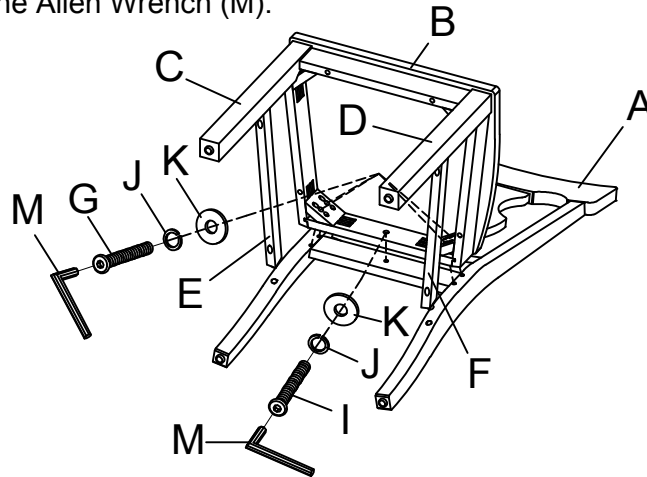

 - 3** Fix the Left & Right Stretcher (E & F) to the legs by using Screw (L) with a screwdriver (not provided).

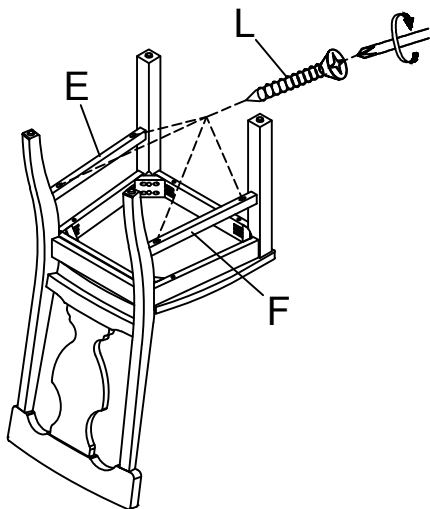

Stand the chair on an even surface and check for balance. If it wobbles, apply downward pressure on the uneven leg and tighten the bolts. Once the chair is balanced, apply pressure evenly to the center and tighten all bolts, ensuring not to over-tighten beyond the hole depth.

 
 
 
 
 
Helpful Tip: While tightening the bolts from underneath, have someone sit in the chair.


Cleaning & Care

Treat surfaces with care. Surfaces are resistant to scratches but are not scratch resistant. Clean surfaces with a dry or damp soft cloth. Do not use abrasive cleaners. Hardware may loosen over time. Periodically check that all connections are tight.

ASSEMBLY INSTRUCTIONS


BENCH WITH CURVED ARMS

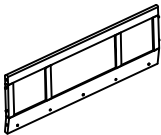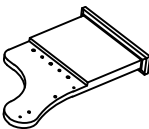A Back Rest  1 pc	B Seat  1 pc	C Right Leg  1 pc	D Left Leg  1 pc
E Bolt 1/4 " x 2"  9 pcs	F Bolt 1/4" x 1 1/2"  4 pcs	G Lock Washer 1/4" x 10mm  9 pcs	H Flat Washer 1/4" x 19mm  9 pcs
I Trim Ø14.5 x 8mmH  4 pcs	J Allen Wrench 4mm  1 pc		

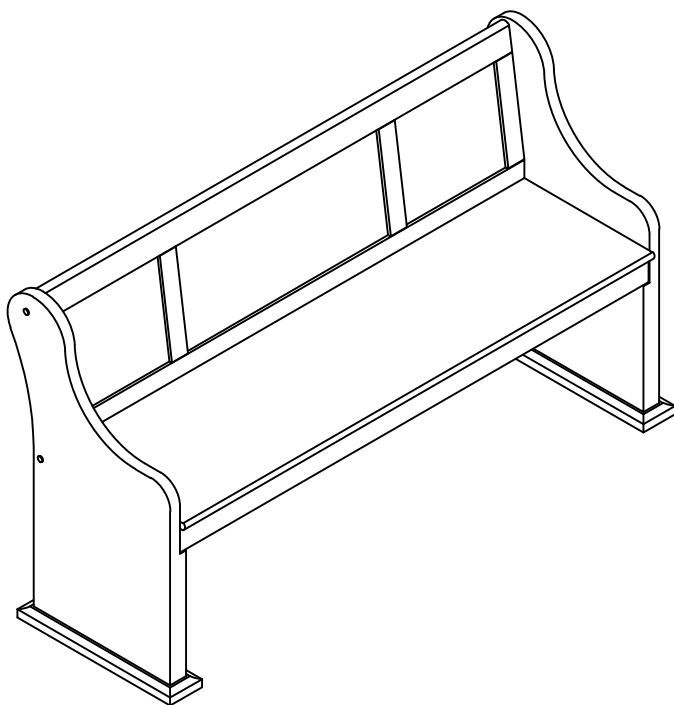 


This page lists all the contents included in the box. Please take the time to identify the hardware as well as the individual components to this product. As you unpack and prepare for assembly, place the contents on a carpeted or padded area to protect them from damage.

 - 1** Place the Back Rest (A) on a smooth carpeted surface. Attach the Seat (B) to the Back Rest (A) by using Bolt (E), Lock Washer (G) and Flat Washer (H) with the Allen Wrench (J).

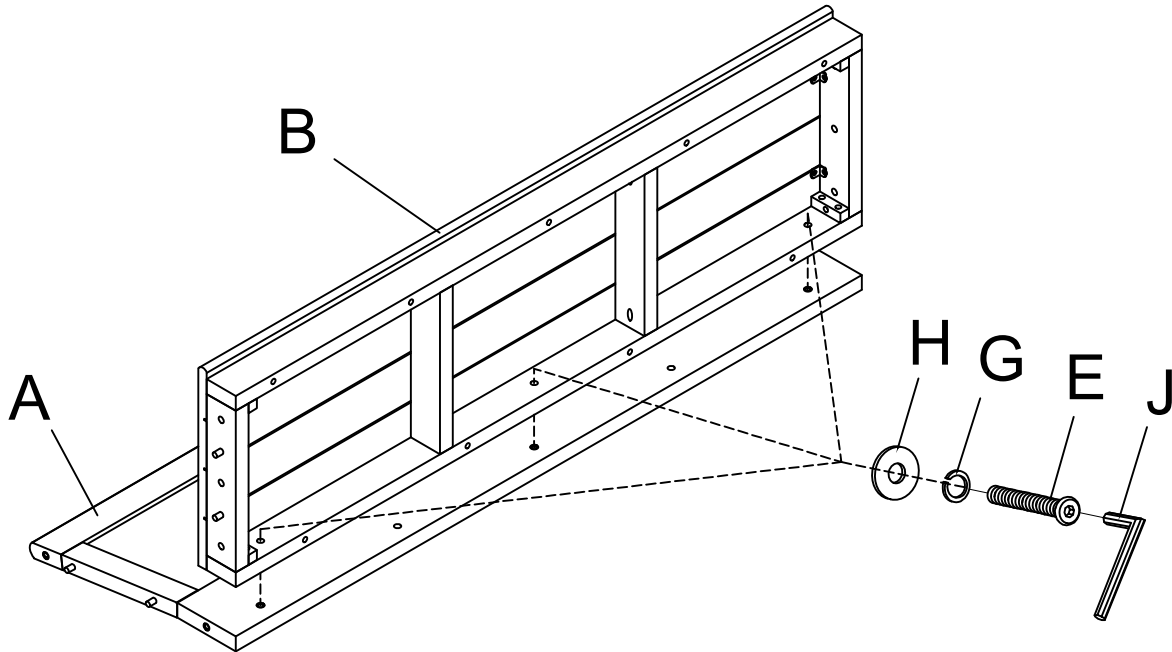


 - 2**
- (i) Attach the Leg (C & D) to the Back Rest (A) by using Bolt (F) with the Allen Wrench (J).
 - (ii) Attach the Seat (B) to the Leg (C & D) by using Bolt (E), Lock Washer (G) and Flat Washer (H) with the Allen Wrench (J).

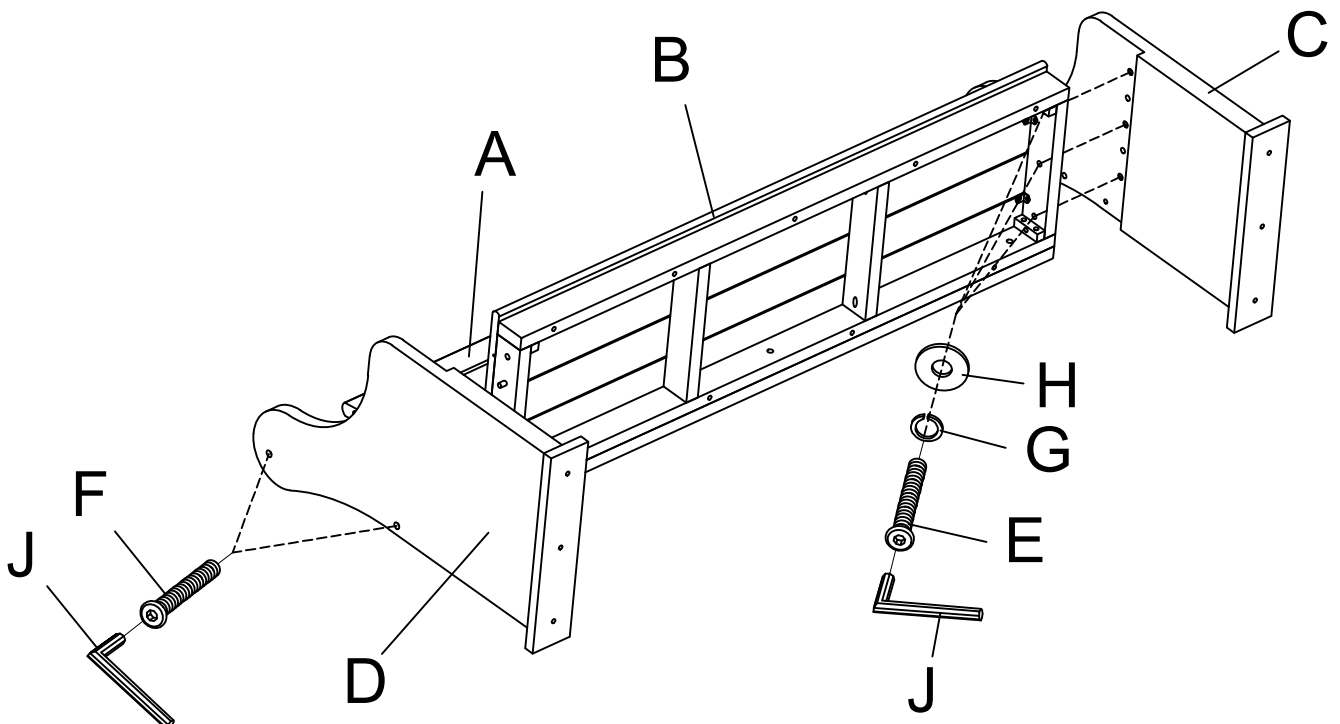

3

 Insert the Trim (I) into the Leg (C & D).

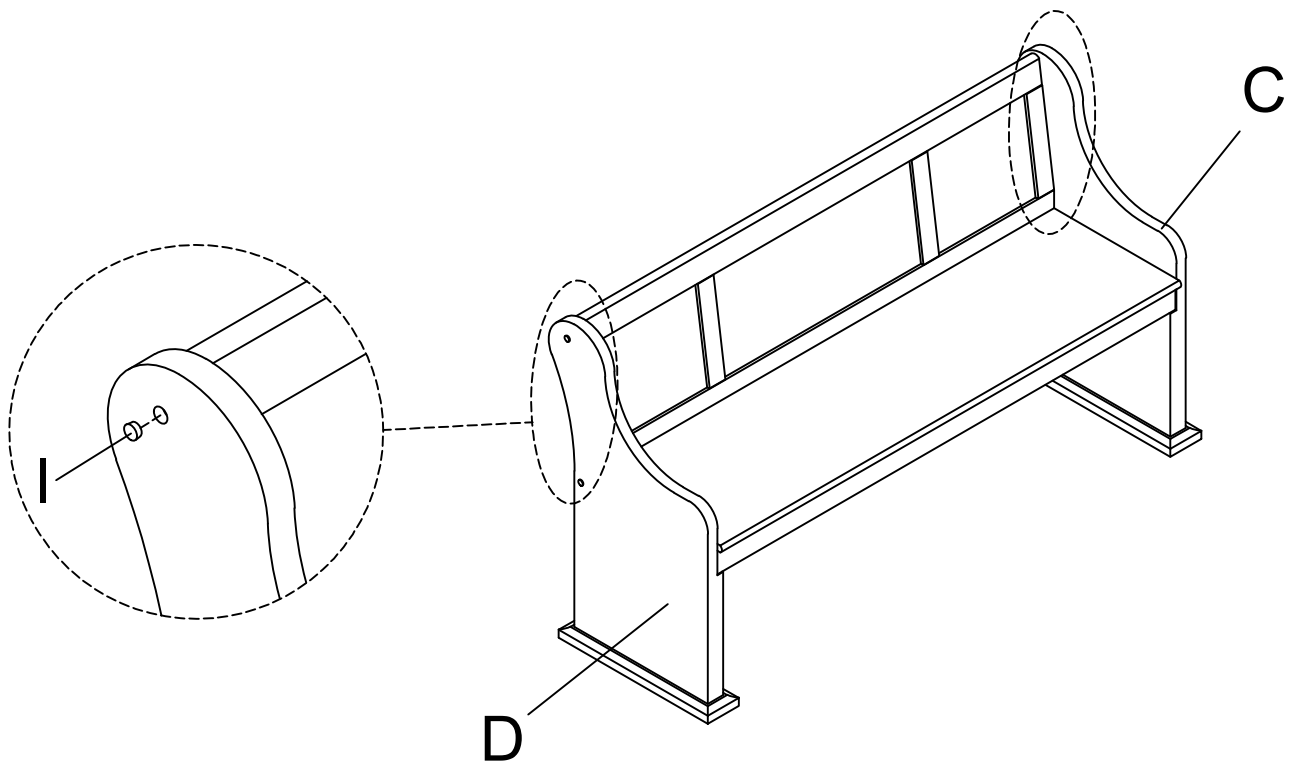

Cleaning & Care

Treat surfaces with care. Surfaces are resistant to scratches but are not scratch resistant. Clean surfaces with a dry or damp soft cloth. Do not use abrasive cleaners. Hardware may loosen over time. Periodically check that all connections are tight.