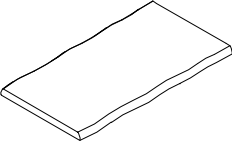
 

 
 



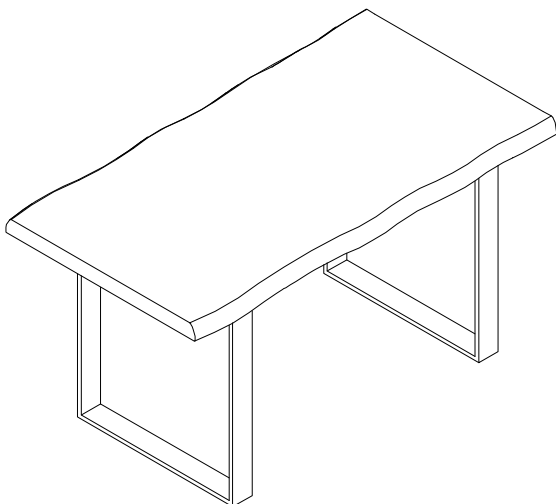


# ASSEMBLY INSTRUCTION

## METAL BASE DINING TABLE

<b>A</b> TOP PANEL	<b>B</b> LEG	<b>C</b> support block	<b>D</b> BOLT 1/4*1-1/4"
			
1PC	2PCS	2PCS	8PCS
<b>E</b> BOLT 1/4*5/8"	<b>F</b> LOCK WASHER 1/4"	<b>G</b> FLAT WASHER 1/4**19MM	<b>H</b> ALLEN WRENCH 4MM
			
16PCS	24PCS	24PCS	1PC

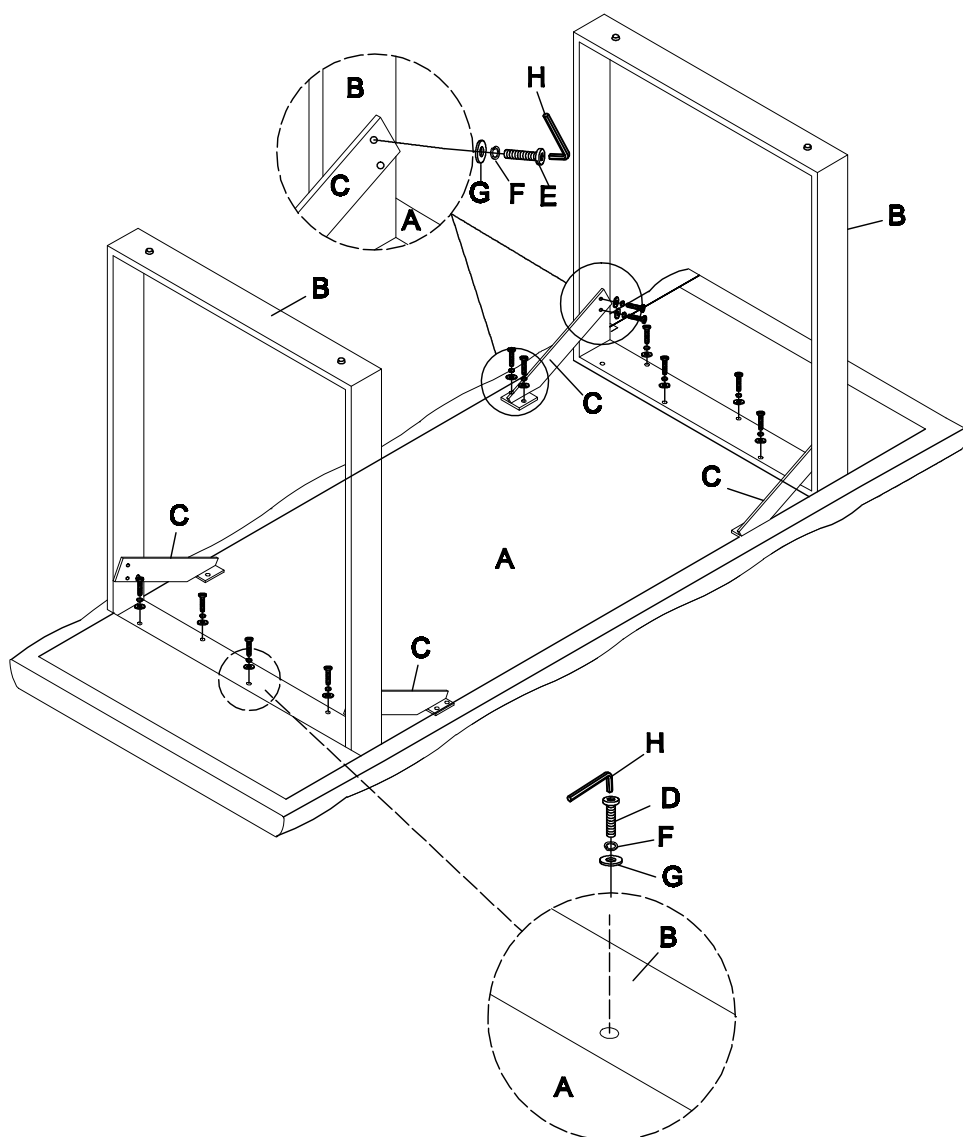


This page lists all the contents included in the box. Please take the time to identify the hardware as well as the individual components to this product. As you unpack and prepare for assembly, place the contents on a carpeted or padded area to protect them from damage.

- 
- 1** Upside down the top panel (A) on a smooth surface, assemble the leg (B) to the top panel (A) using bolt (D), lock washer (F) and flat washer (G). Do not tight the bolts until the other steps are processed. Repeat the other leg.

Assemble the support block (C). Using allen wrench (H) by fastening bolt (E), lock washer (F) and flat washer (G) to the top back and leg sides, Do not tight the bolts until the other steps are processed. Repeat the other leg.

Repeat step 2 for other support blocks (C). After all bolts started, tighten all bolts, upside the table and finish the table assmby.



---

### Cleaning & Care

Treat surface with care. Surface is resistant to scratches but is not scratch resistant. Clean surfaces with a dry or damp soft cloth. Do not use abrasive cleaners. Hardware may loosen over time. Periodically check that all connections are tight.