


ASSEMBLY INSTRUCTION


COUNTER HEIGHT TABLE WITH FAUX MARBLE TOP

A Table Leg Frame

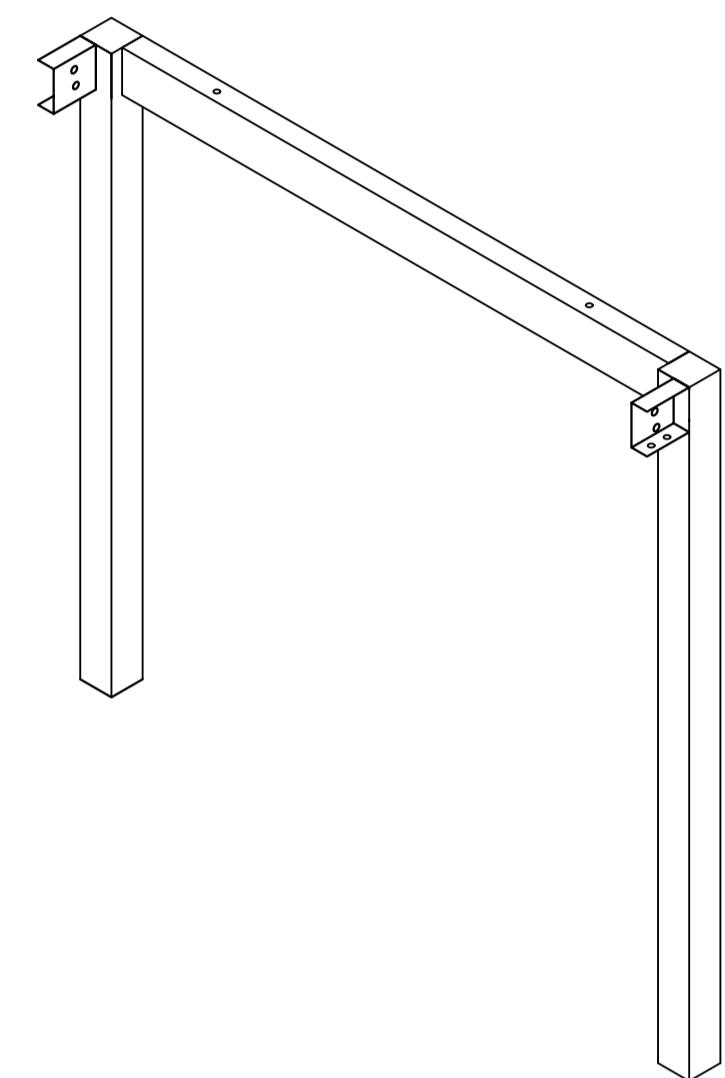


2PCS

B Table Top

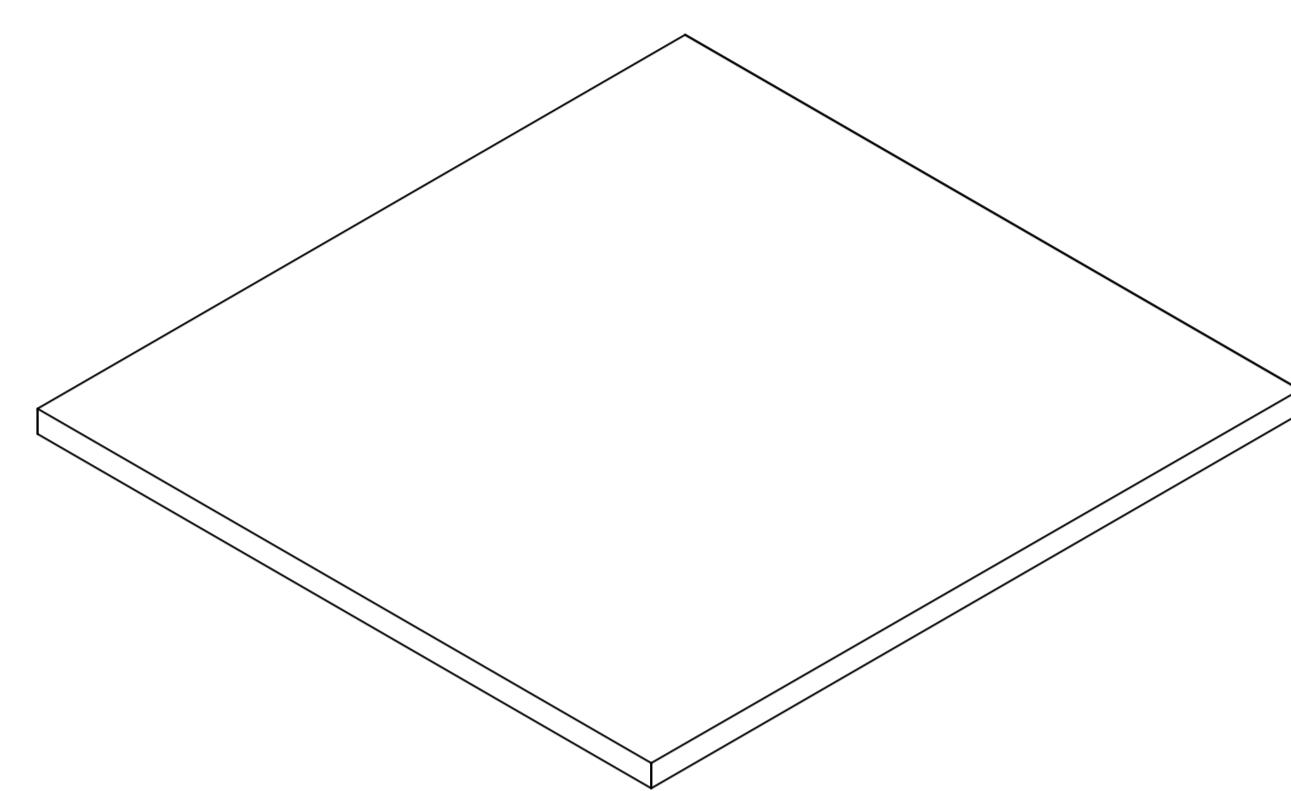


1PC

C Table Apron

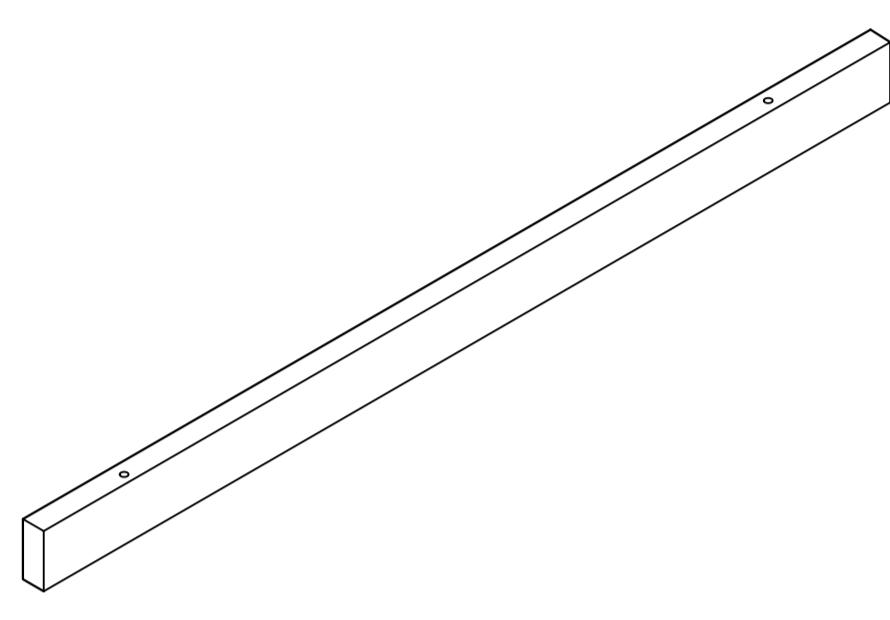


2PCS

D Cross Bar

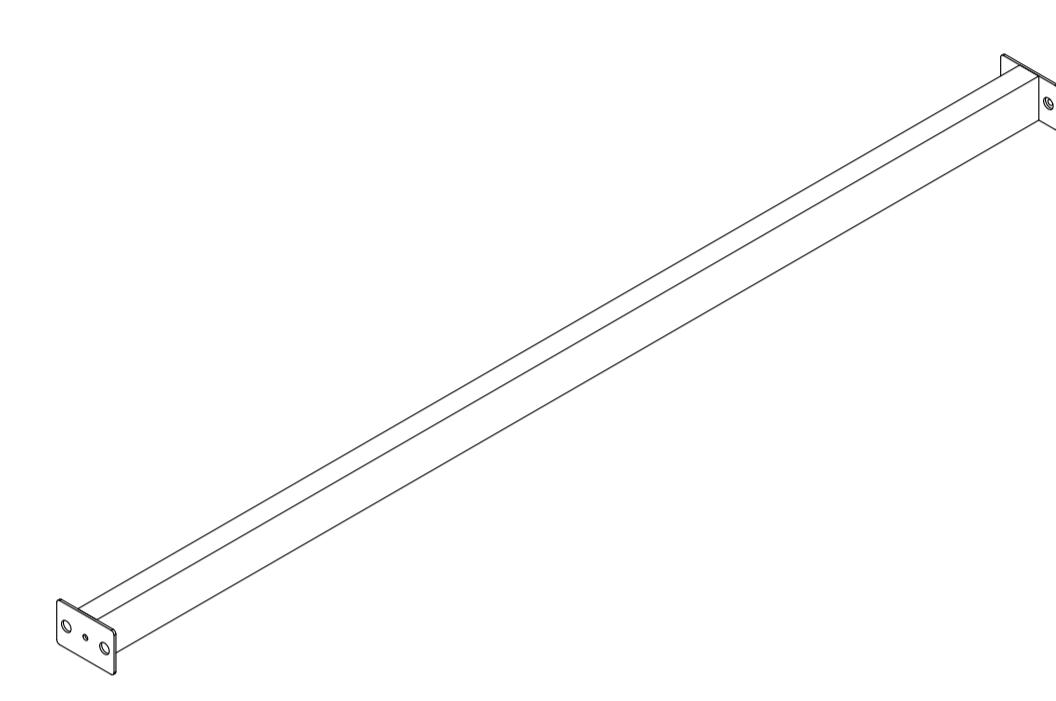


1PC

E Bolt
1/4" * 16mm

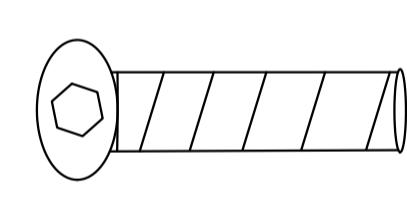


20PCS

F Screw
5mm * 70mm

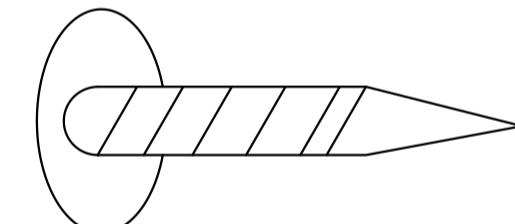


8PCS

G L-Allen Key
4mm

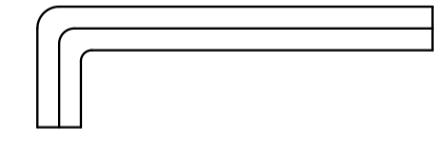


1PC

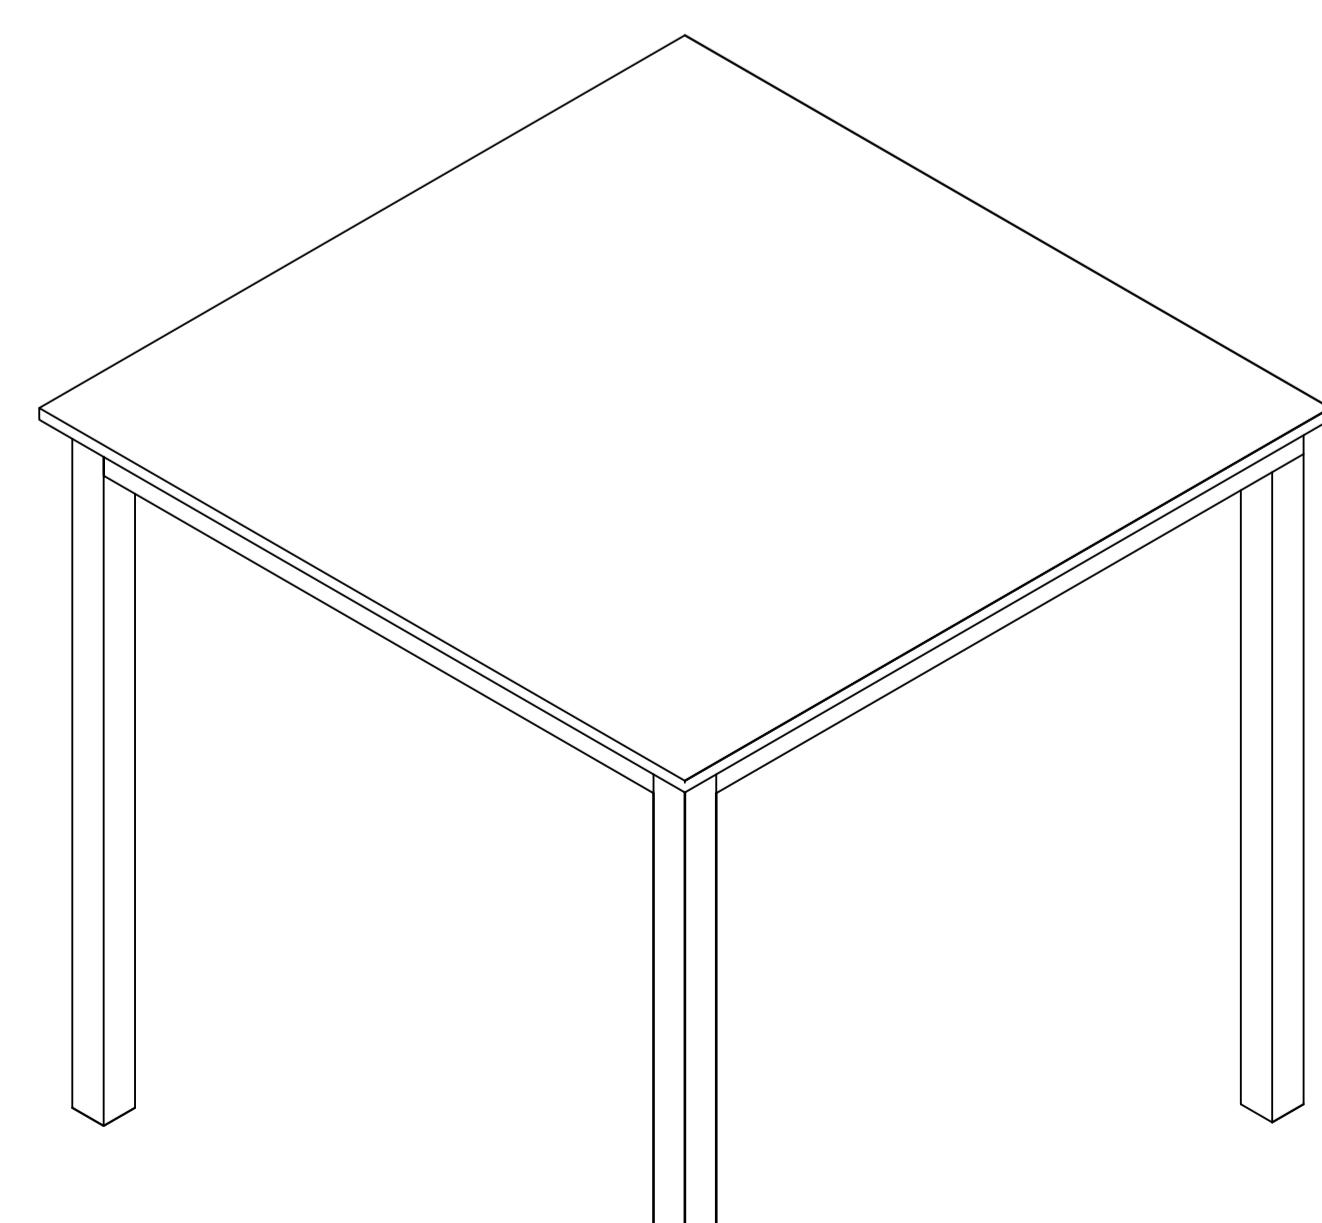


This page lists all the contents included in the box. Please take the time to identify the hardware as well as the individual components to this product. As you unpack and prepare for assembly, place the contents assembly, place the contents on a carpeted or padded area to protect them from damage.

1

Align the Table Leg Frame(A) to Table Apron(C) and Cross Bar(D) and tighten with Bolts(E). Turn the L-Allen Key(G) to tighten them.

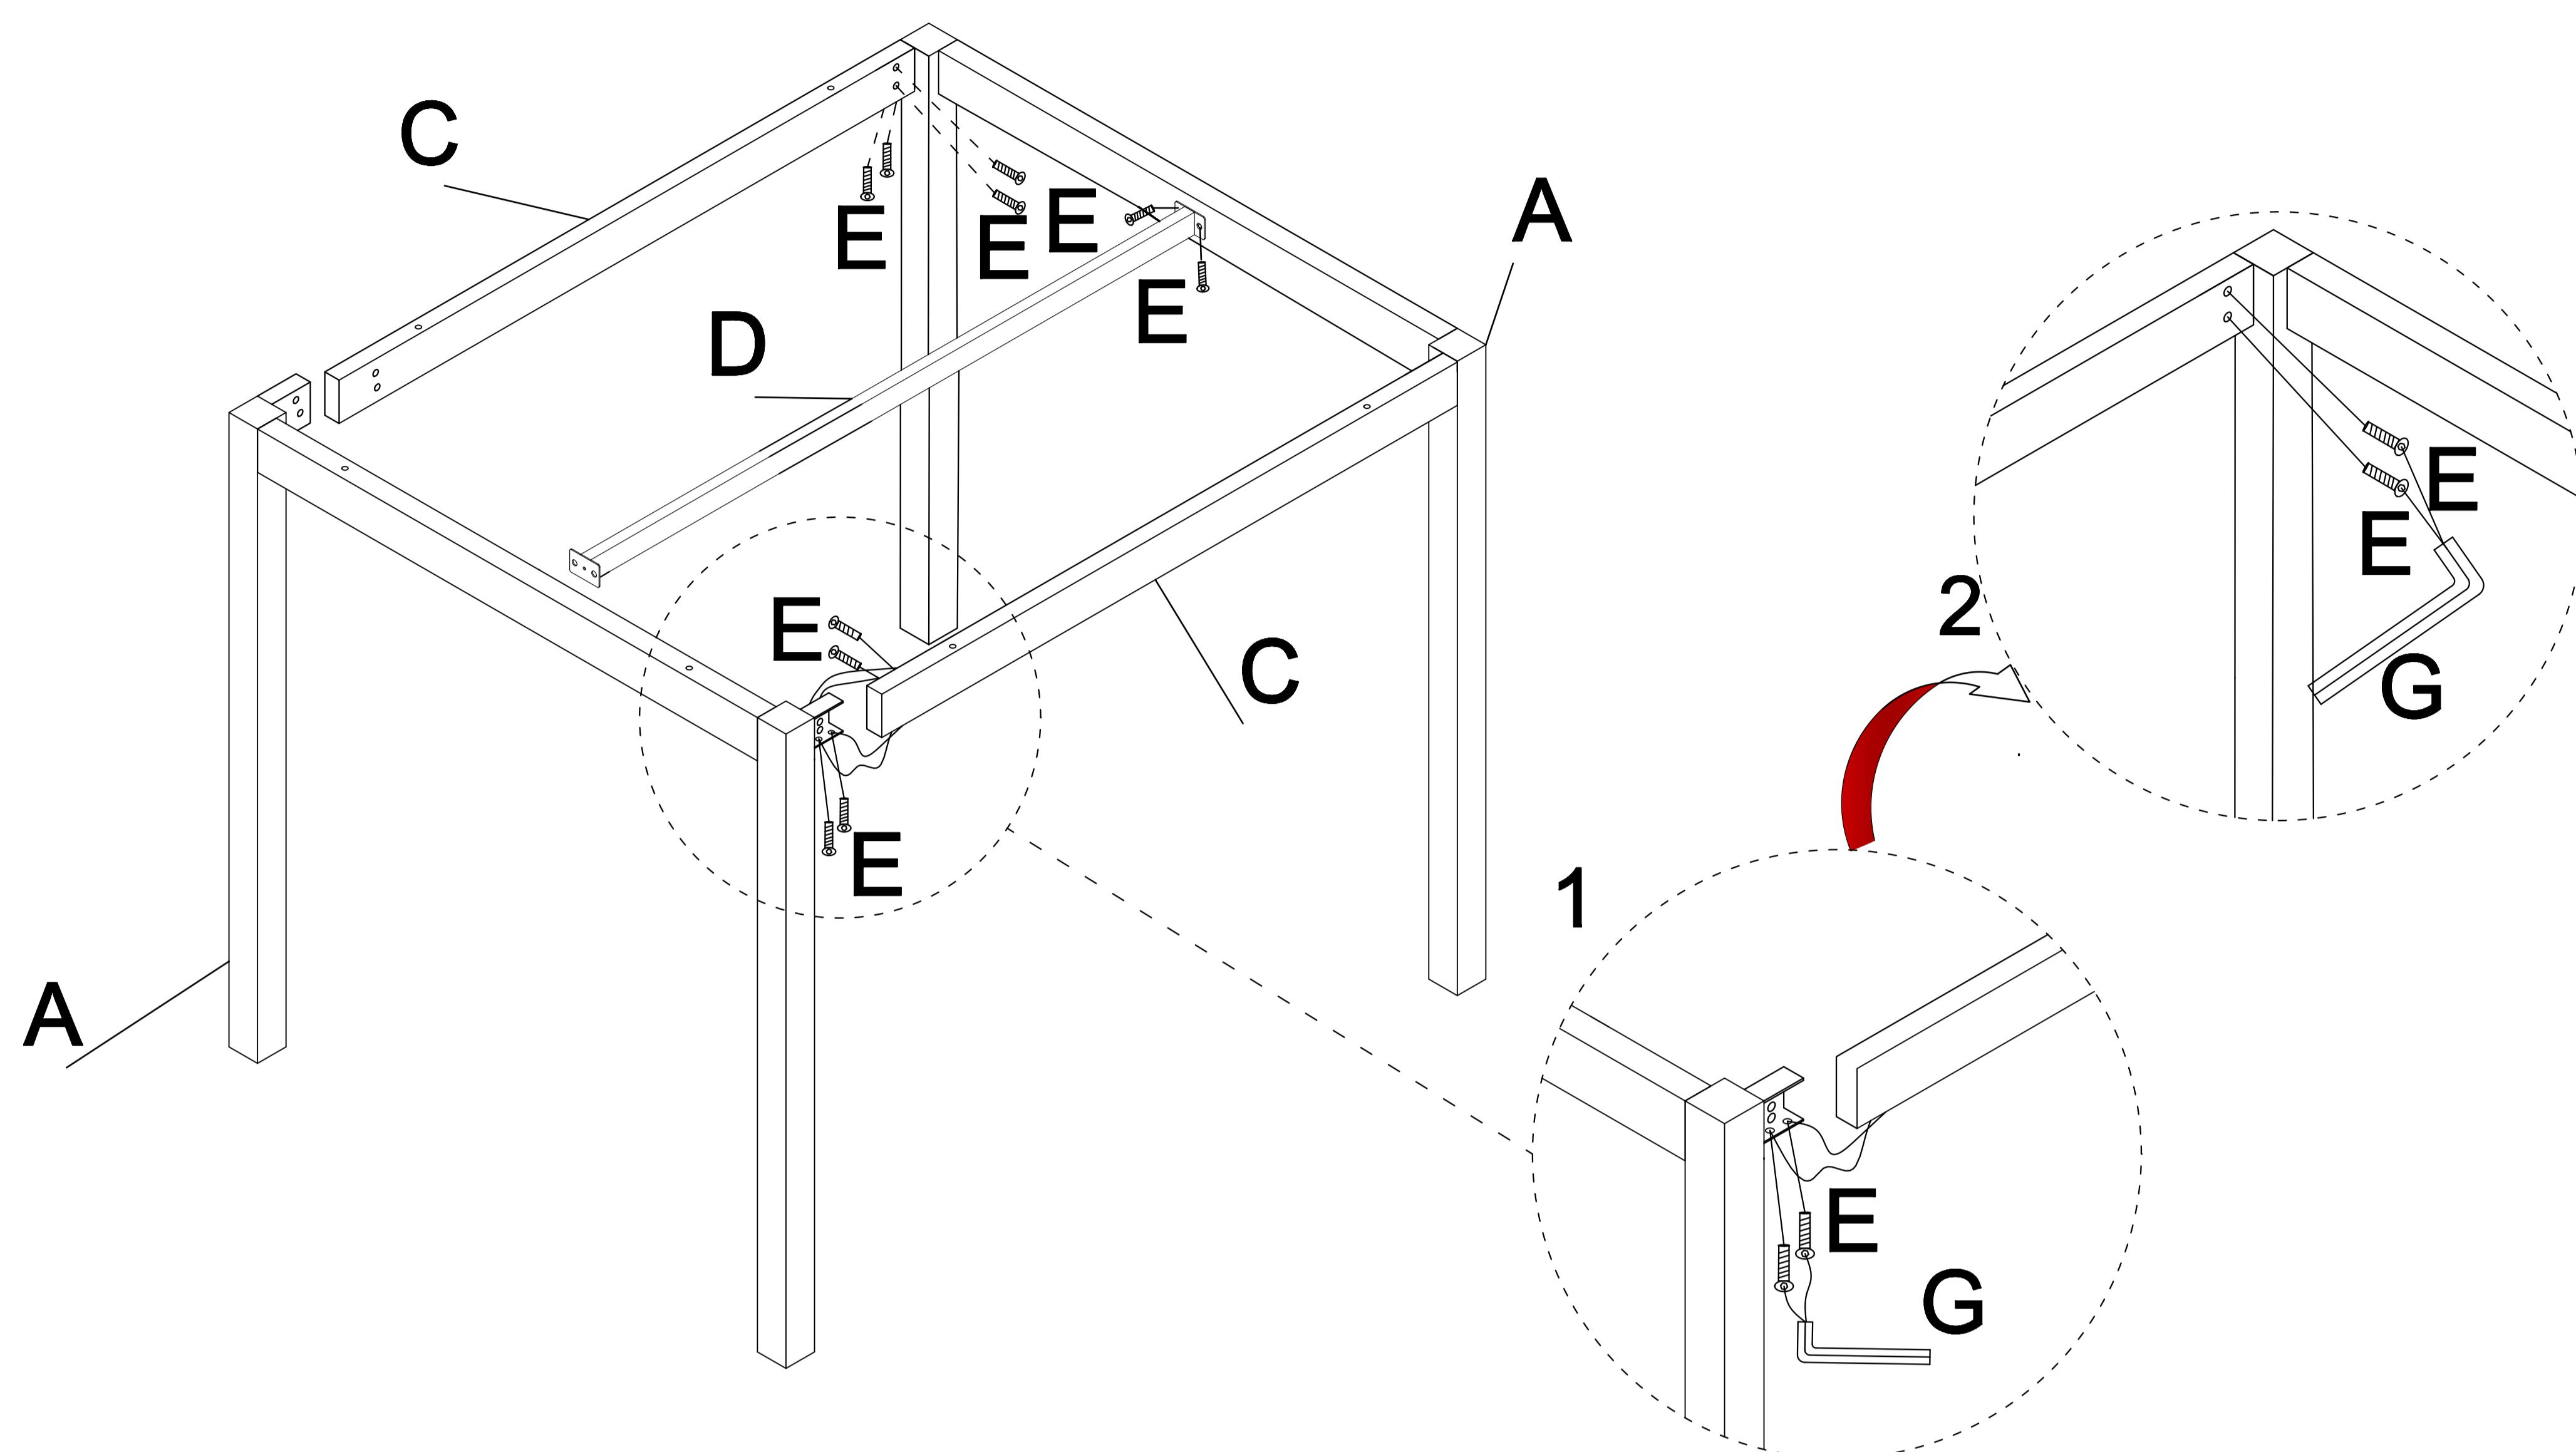**2**

Place the Table Top(B) on the smooth and the stable carpeted or padded surface. Tighten attached table frame to table top with Screws(F).

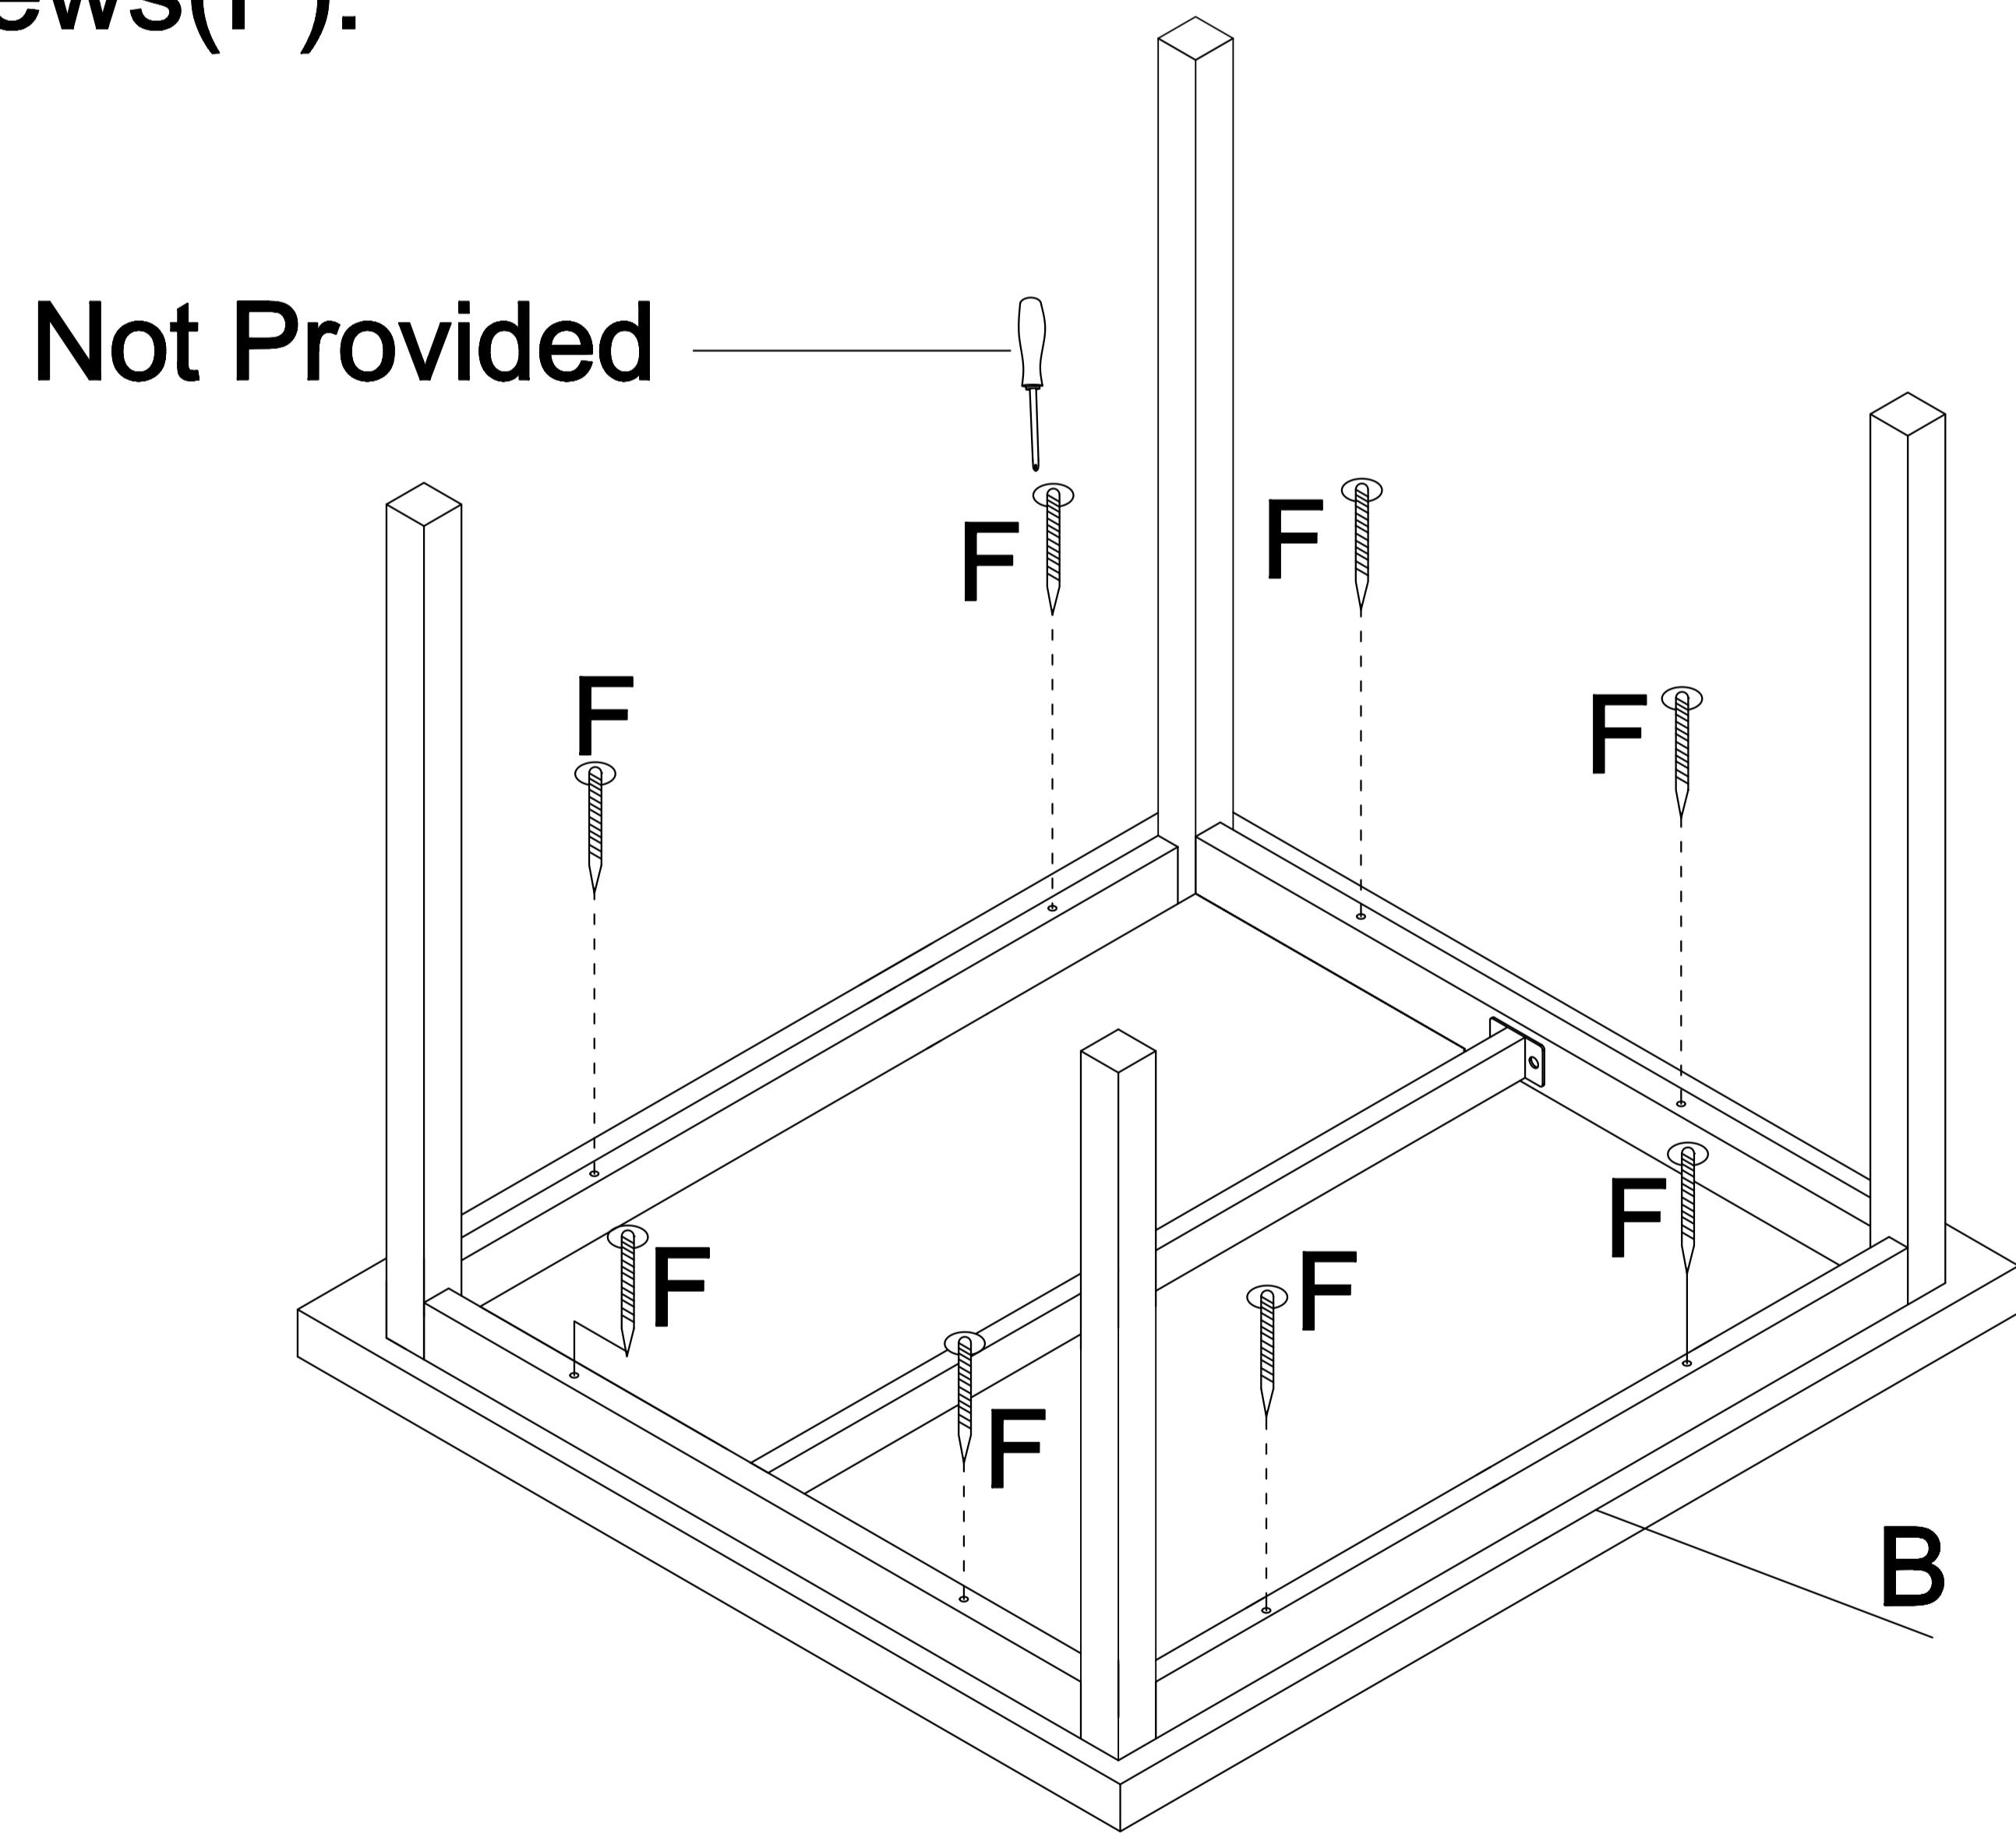


Cleaning & Care

Treat surface with care. Surface is resistant to scratches but is not scratchresistant. Clean surfaces with a dry or damp soft cloth. Do not use abrasive cleaners. Hardware may loosen over time. Periodically check that all connections are tight.

ASSEMBLY INSTRUCTIONS

COUNTER HEIGHT CHAIR


A Chair Frame L & R

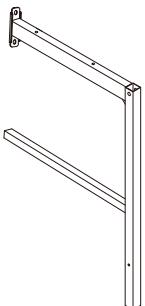


B Chair Back



 C Front Top Rail




D Front Stretcher

 

2PCS


E Seat Cushion

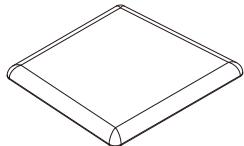

1PC

F Bolt

 
1/4" x 43mm



1PC

G Bolt

 
1/4" x 38mm



1PC

H Bolt

 1/4" x 19mm



1PC

I Screw
5mm x 56mm



2PCS

J Allen Key
4mm




4PCS

4PCS

4PCS


1PC

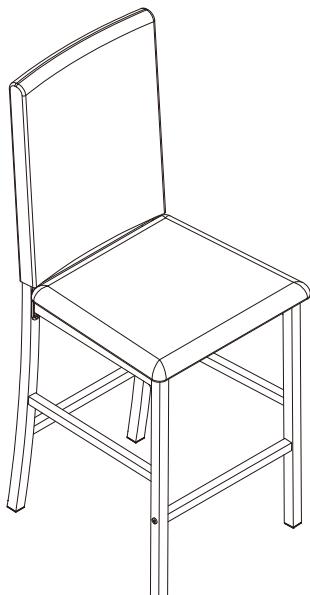

This page lists all the contents included in the box. Please take the time to identify the hardware as well as the individual components to this product. As you unpack and prepare for assembly, place the contents on a carpeted or padded area to protect them from damage.


1

Attach the Chair Frame L & R (A) to the Front Top Rail (C) and Front Stretcher (D) using Bolt (F & G) with the Allen Key (J).

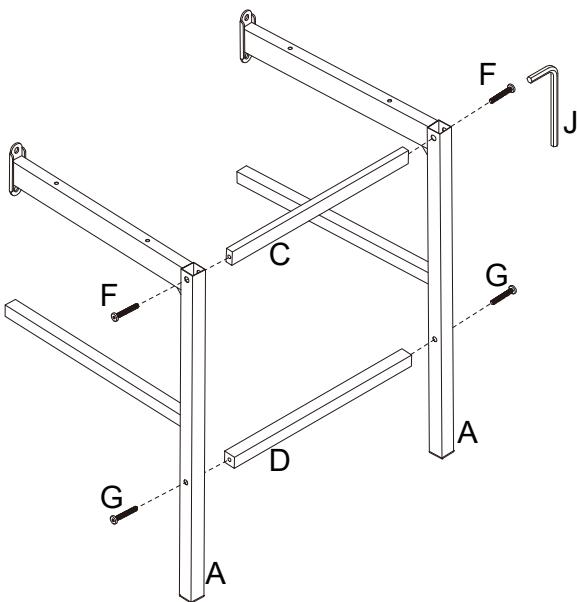**2**

Attach the Chair Frame L & R (A) to the Chair Back (B) using Bolt (G & H) with the Allen Key (J).


Take the Allen Key and turn the bolts until the legs are secured.
DO NOT TIGHTEN THE BOLTS COMPLETELY. Stop when you feel you are adding force to tighten the bolt.

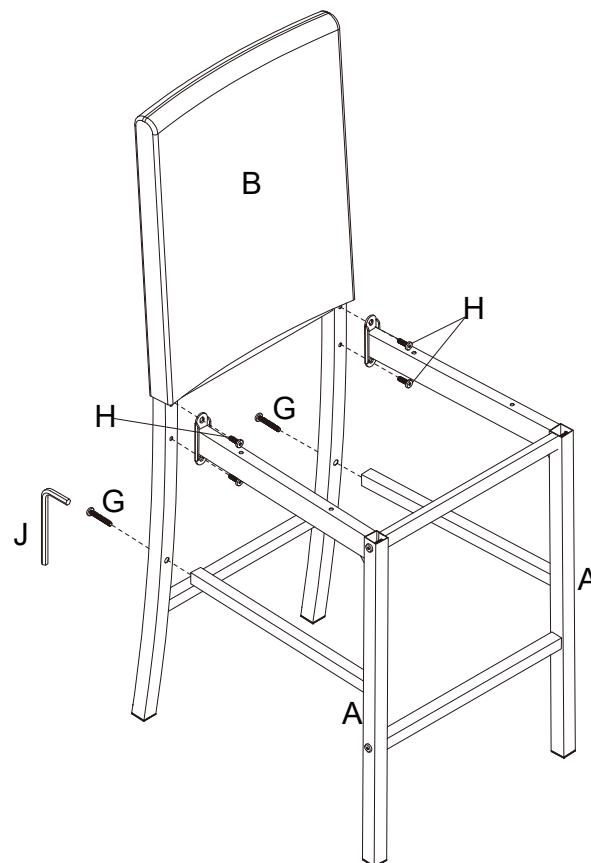

3

Attach the Seat Cushion (E) to the Chair Frame L & R (A) using Screw (I) with a screwdriver (not provided).

Stand the chair on an even surface and check for balance. If the chair wobbles slightly, apply downward pressure on the uneven leg and tighten the bolts to correct the imbalance. Once the chair is balanced, apply downward pressure evenly in the center of the chair and tighten all bolts, being careful not to over-tighten beyond the hole depth.

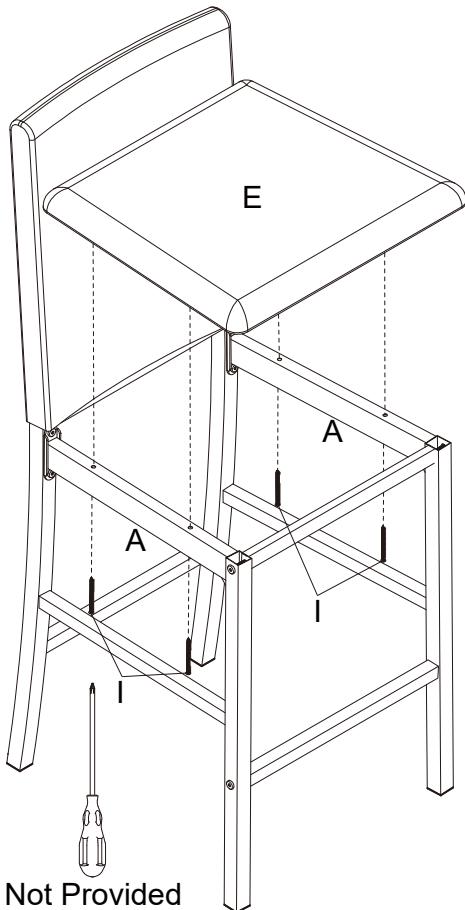

Helpful Tip:

While tightening the bolts from underneath, have someone sit in the chair.

Cleaning & Care

Treat surfaces with care. Surfaces are resistant to scratches but are not scratch resistant. Clean surfaces with a dry or damp soft cloth. Do not use abrasive cleaners. Hardware may loosen over time. Periodically check that all connections are tight.