


Operating Instructions

Caution: You must read this before you proceed


Table

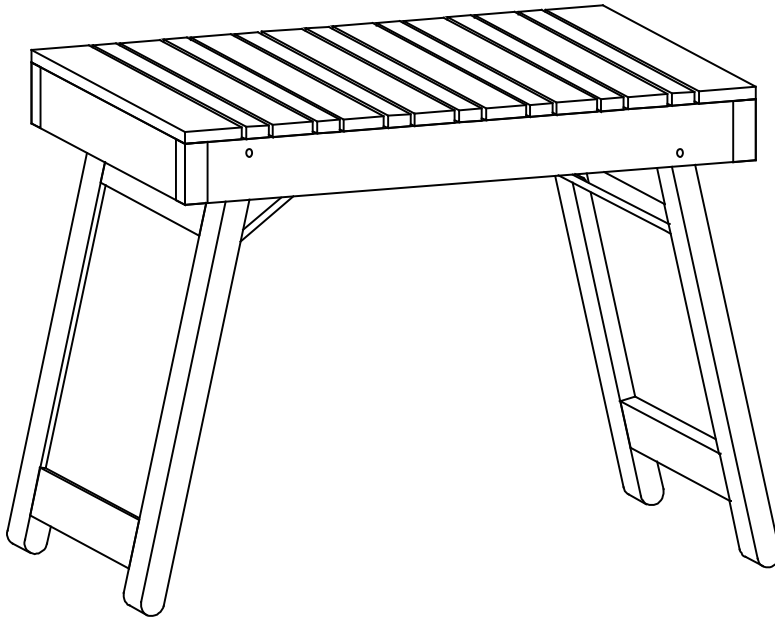

Caution: This Table is NOT a TOY.
Keep your child/children at bay when opening or folding the Table.

Operating Instructions

Step 1

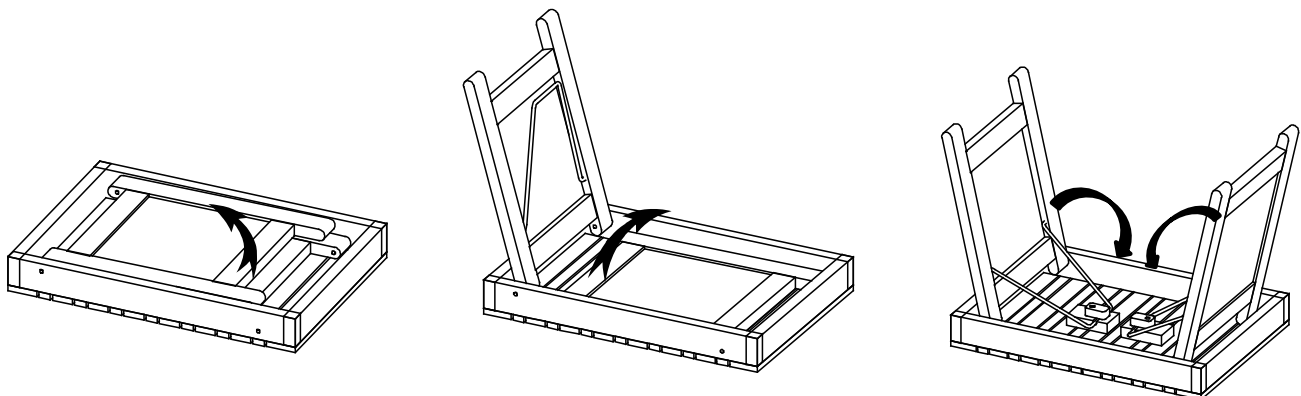


Place the Table facedown on a clean, non-marring surface.

To open:


Lift the Leg Frame upward and outward by hand until the frame folds out, then pull Leg Supports into position as indicated by the arrows.

Step 2

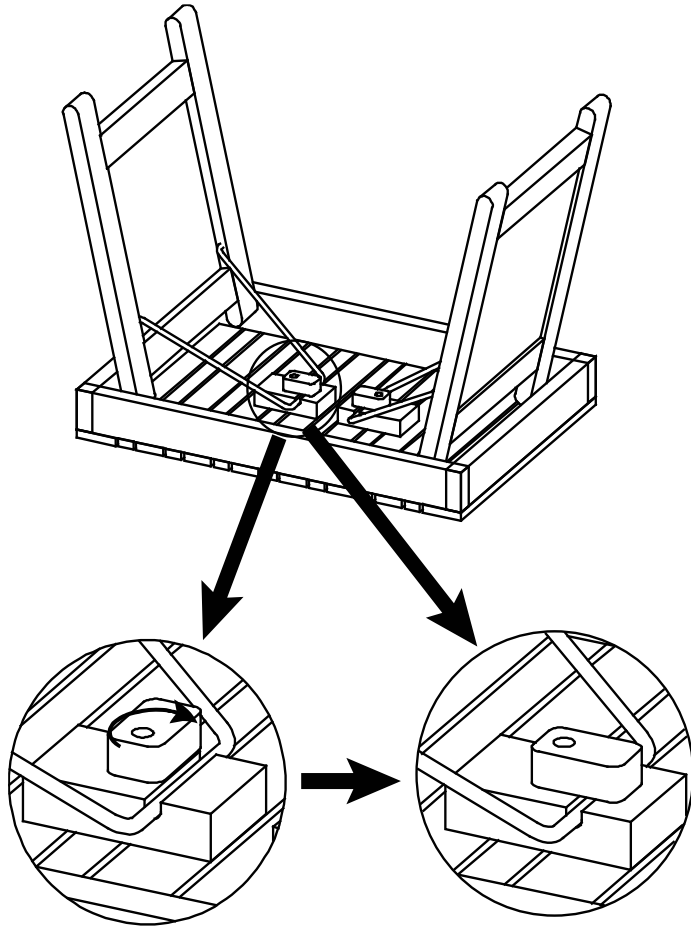



Rotate the Wooden Locks 90 degrees to lock Leg Supports into position.

Step 3

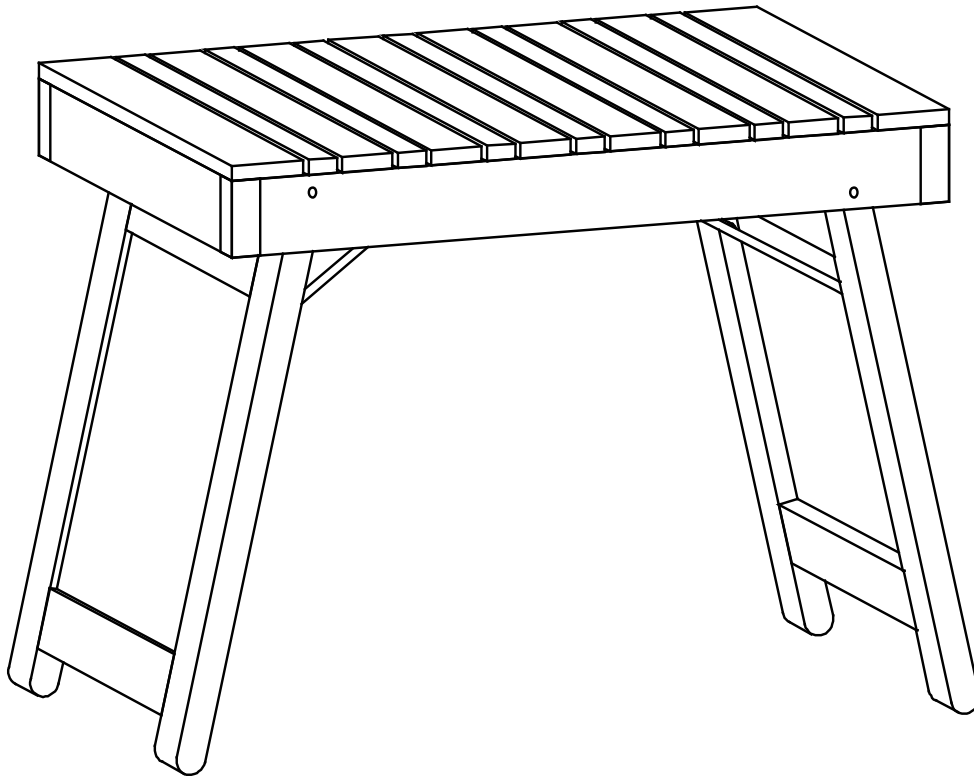

Your Table is ready for use.
This Table can only be used on a flat, level surface.



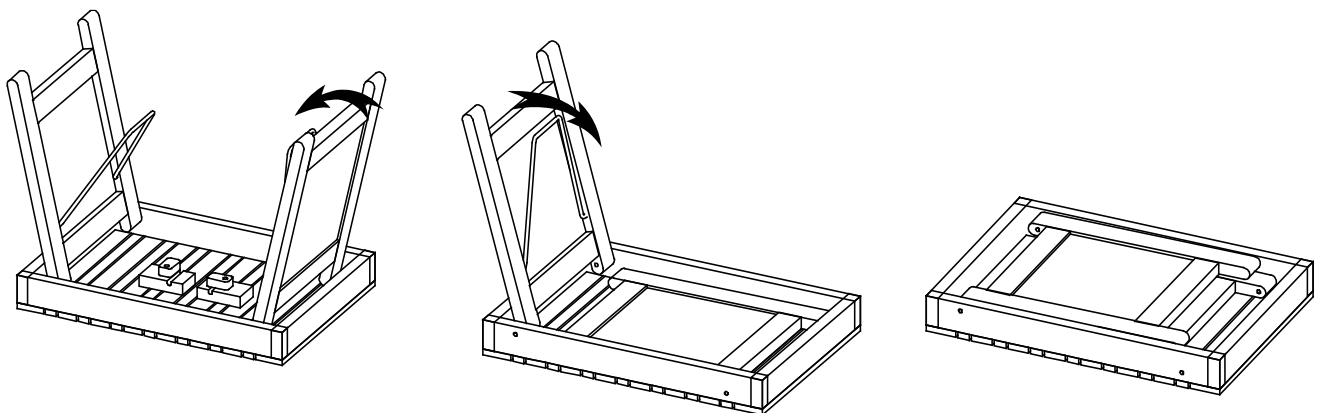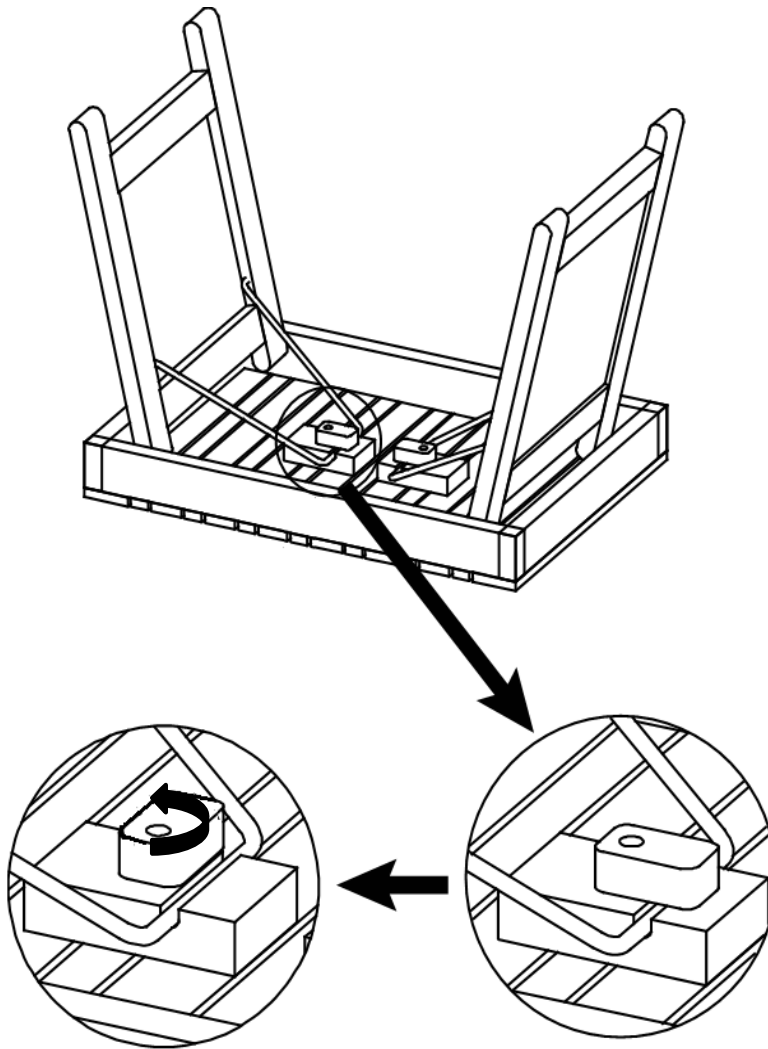







Step 4



To close:

Place the table facedown. Unlock Wooden Locks by rotating 90 degrees.
Pull Leg Supports up and fold down the Legs.

Care & Maintenance

-  ● Do not put hot items directly on furniture surface
 -  ● Do not clean furniture with harsh cleansers or polish.
 -  ● To obtain the longest lifespan of your outdoor products, minimizing exposure to direct sunlight is recommended.
 -  ● Children should not climb or jump on the furniture.
 -  ● Do not write on furniture without a padded barrier to protect the surface.
 -  ● To obtain the longest lifespan of your outdoor products, avoid extended and lengthy exposure to rain, snow, and direct sunshine. Whenever possible cover the product and /or place under patio or awnings.
 -  ● Not for commercial use. For residential use only .
 -  ● Stains may be removed with mild soap solution and damp cloth.
 -  ● Keep away from sources of ignition.
-
-  ● Dust and pick-up spills using a clean, non-colored, lint-free cloth.