 
 
 
 
 

 


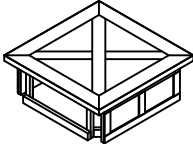


# ASSEMBLY INSTRUCTION


## END TABLE
 
<b>A</b> Table Top	<b>B</b> Leg B	<b>C</b> Leg C	<b>D</b> Bottom Panel
			
1PC	2PCS	2PCS	1PC
<b>E</b> Drawer	<b>F</b> Bolt 5/16"x3"	<b>G</b> Lock Washer 5/16"	<b>H</b> Flat Washer 5/16"x19mm
			
1PC	12PCS	12PCS	12PCS
<b>I</b> Allen Key 5mm			
			
1PC			

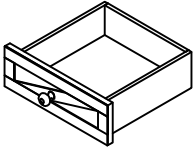


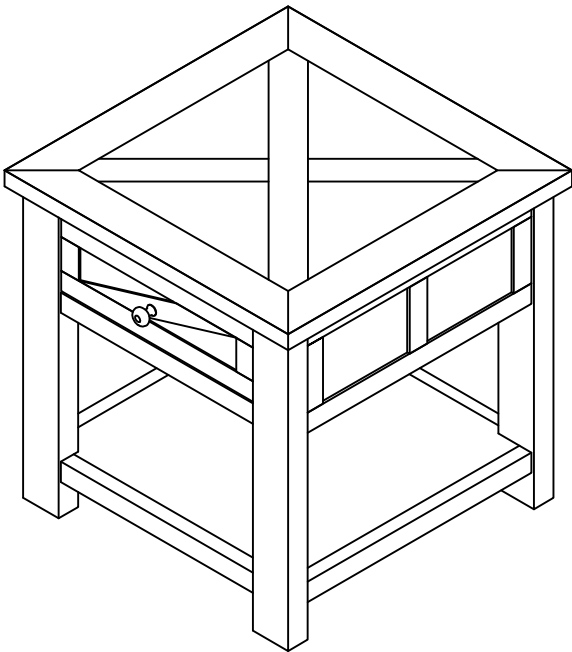This page lists all the contents included in the box. Please take the time to identify the hardware as well as the individual components to this product. As you unpack and prepare for assembly, place the contents on a carpeted or padded area to protect them from damage.

 
- 
- 1** Turn over the Table Top (A) and pull out the Drawer (E) as shown below.

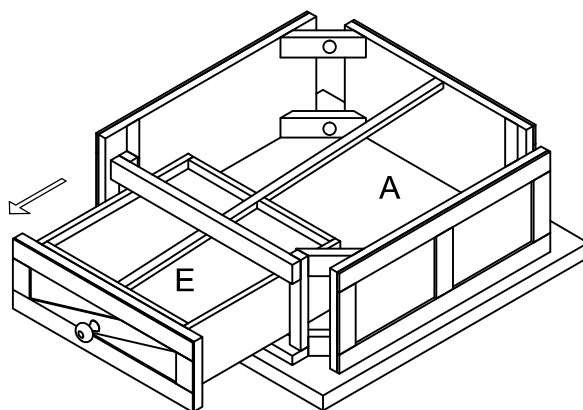

 
- 
- 2** Attach 3pcs Leg (B&C) to the Table Top (A) by using Flat Washer (H), Lock Washer (G) and Bolt (F) with Allen Key (I).

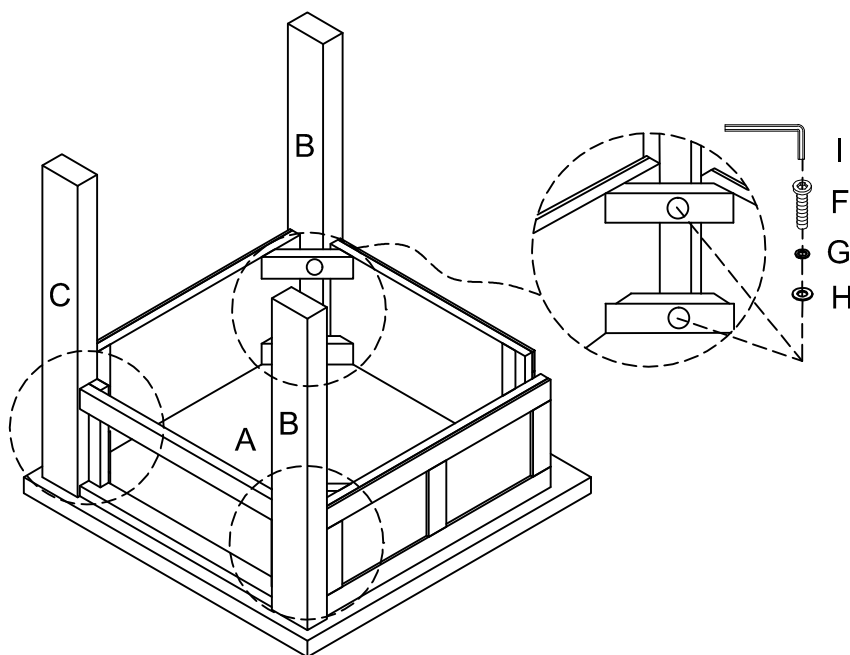

 - 
- 3** Attach Bottom Panel (D) to 3pcs Leg (B&C) by using Flat Washer (H), Lock Washer (G) and Bolt (F) with Allen Key (I). Then attach the other Leg (C) to Table Top (A) and Bottom Panel (D) as shown below.

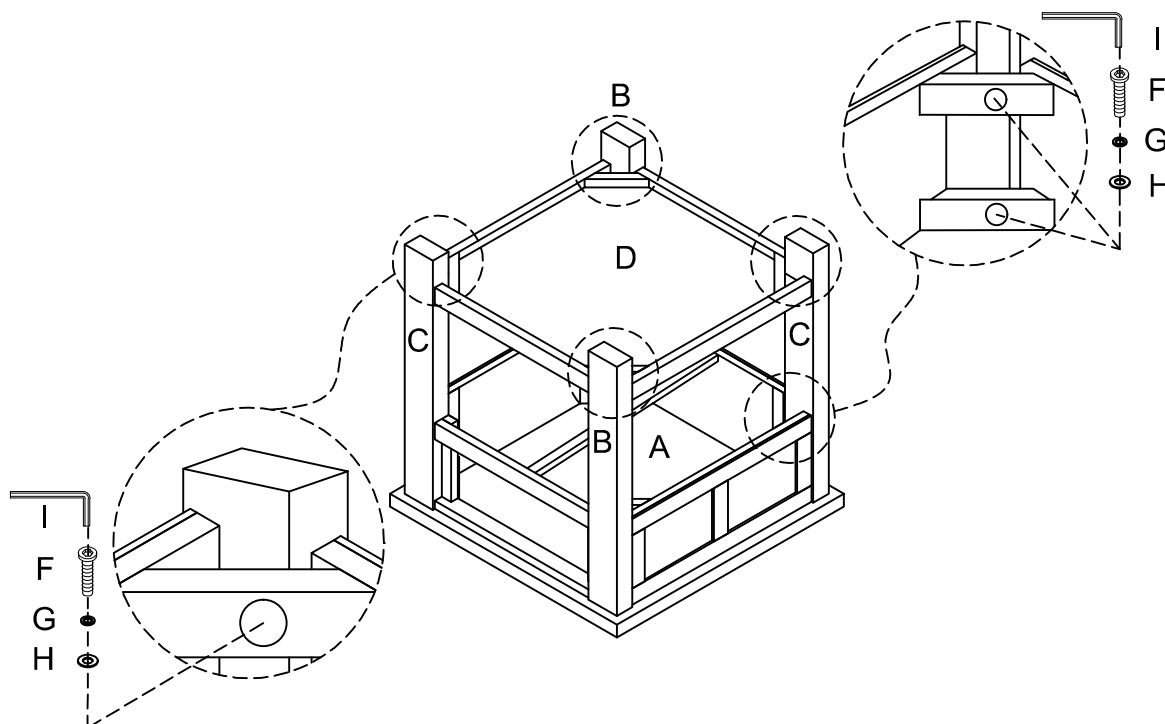

 - 
- 4** Stand the table up and push back Drawer (E) as shown below.

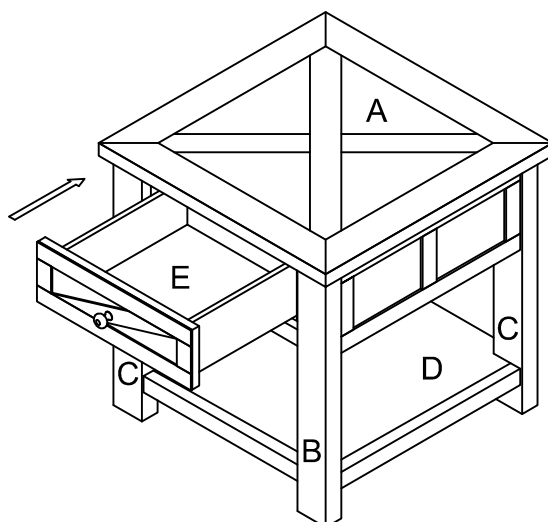

 
 
 
 
 

 





---


#### Cleaning & Care

 Treat surfaces with care. Surfaces are resistant to scratches but are not scratch resistant. Clean surfaces with a dry or damp soft cloth. Do not use abrasive cleaners. Hardware may loosen over time. Periodically check that all connections are tight.
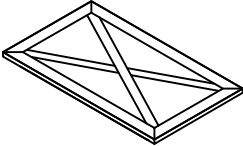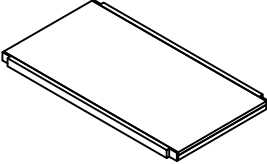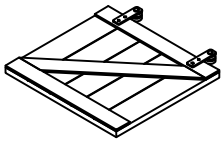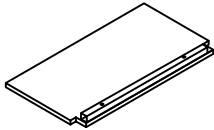
# ASSEMBLY INSTRUCTION


## COFFEE TABLE

<b>A</b> Top Panel	<b>B</b> Leg	<b>C</b> Bottom Panel	<b>D</b> Door Panel
			
1PC	2PCS	1PC	4PCS
<b>E</b> Vertical Panel	<b>F</b> Bolt 1/4"x1-1/2"	<b>G</b> Lock Washer 1/4"	<b>H</b> Flat Washer 1/4"x16mm
			
2PCS	24PCS	24PCS	24PCS
<b>I</b> Allen Key 4mm	<b>J</b> Caster 2"	<b>K</b> Screw #8x5/8"	<b>L</b> Metal Plate 45x30x10mm
			
1PC	4PCS	24PCS	4PCS

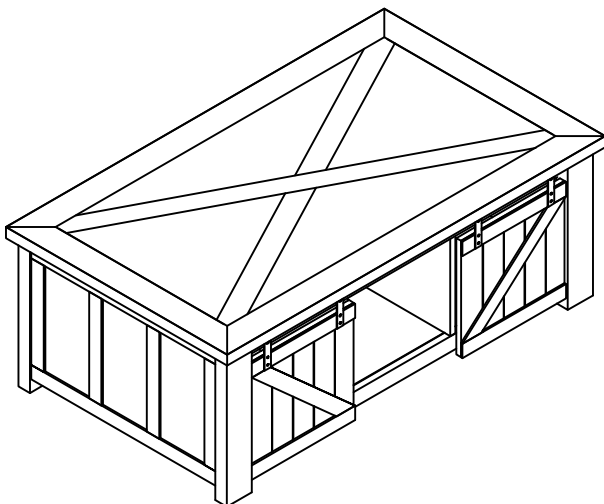


This page lists all the contents included in the box. Please take the time to identify the hardware as well as the individual components to this product. As you unpack and prepare for assembly, place the contents on a carpeted or padded area to protect them from damage.

 
- 
- 1** Attach 2pcs Vertical Panel (E) to Top Panel (A) by using Bolt (F), Lock Washer (G) and Flat Washer (H) with Allen Key (I).

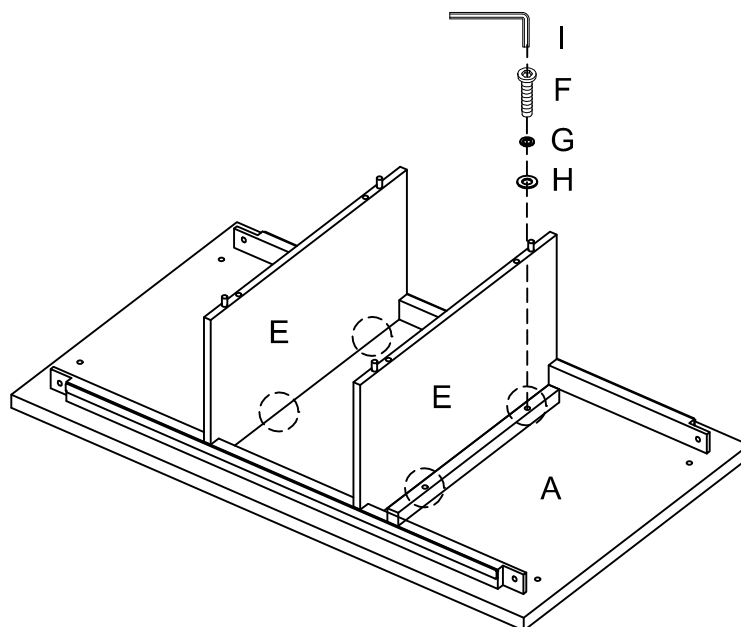

 
- 
- 2** Attach Bottom Panel (C) to Vertical Panel (E) by using Bolt (F), Lock Washer (G) and Flat Washer (H) with Allen Key (I).

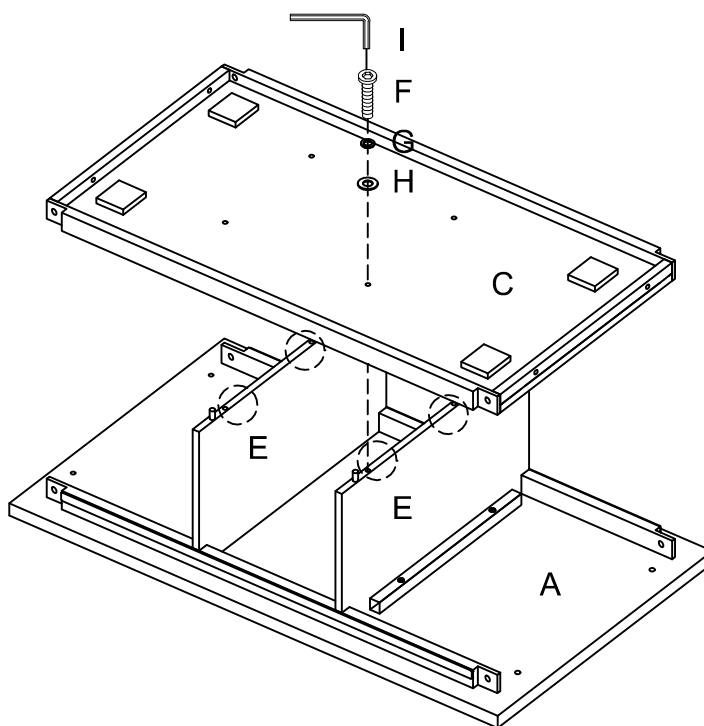

 
- 3** Insert 4pcs Door Panel (D) to Top Panel (A) and Bottom Panel (C) as shown below.

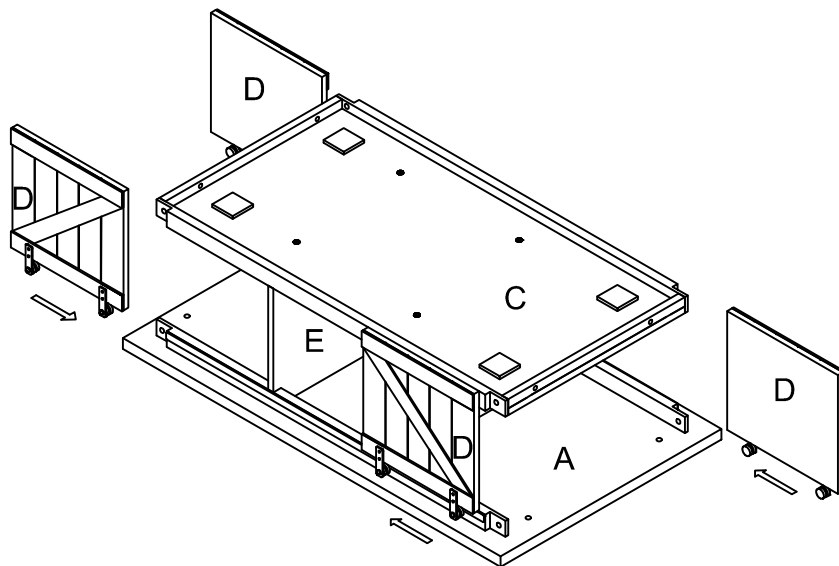

 
- 4** Attach Metal Plate (L) to Bottom Panel (C) by using Screw (K) with Screwdriver (not provided) as shown below.

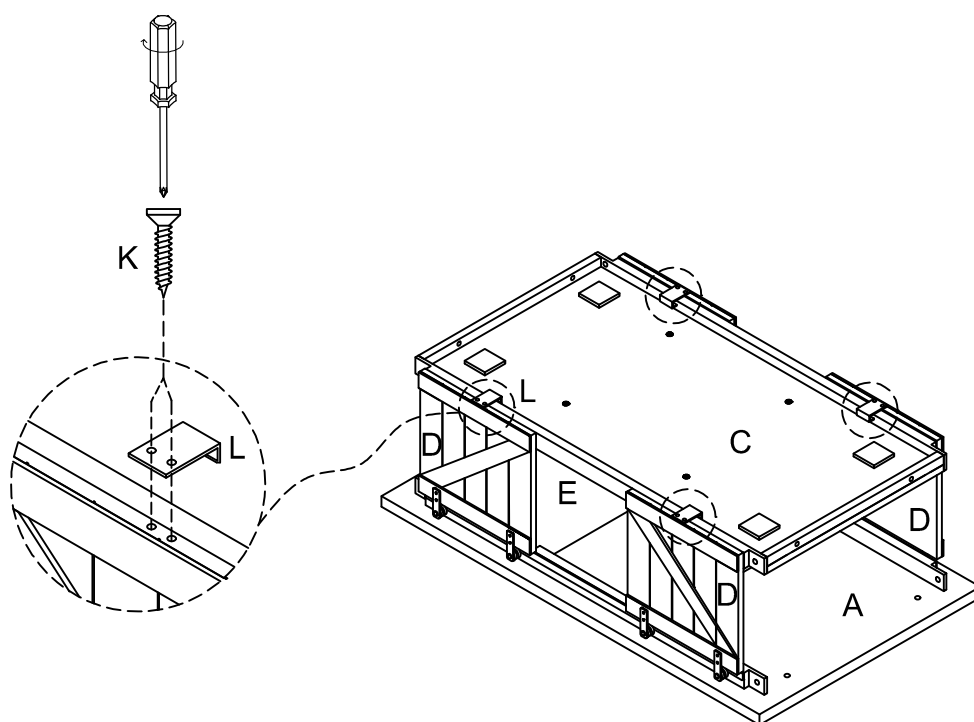

 - 
- 5** Attach 2pcs Leg (B) to Top Panel (A) and Bottom Panel (C) by using Bolt (F), Lock Washer (G) and Flat Washer (H) with Allen Key (I).

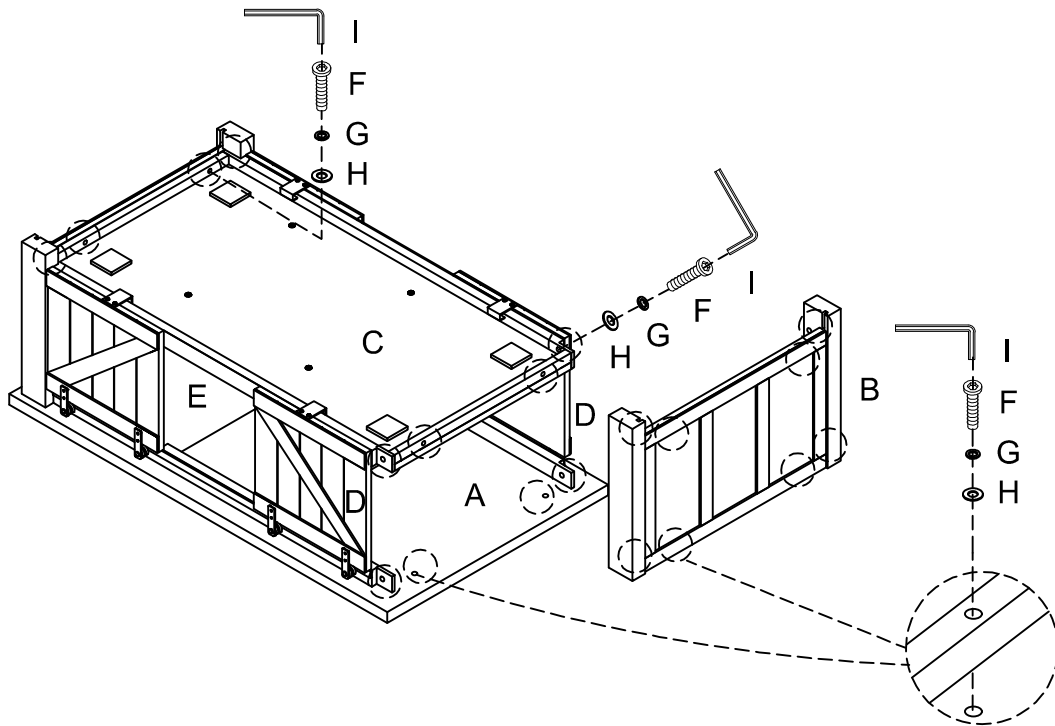

 - 6** Attach 4pcs Caster (J) to Bottom Panel (C) by using Screw (K) with Screwdriver (not provided).

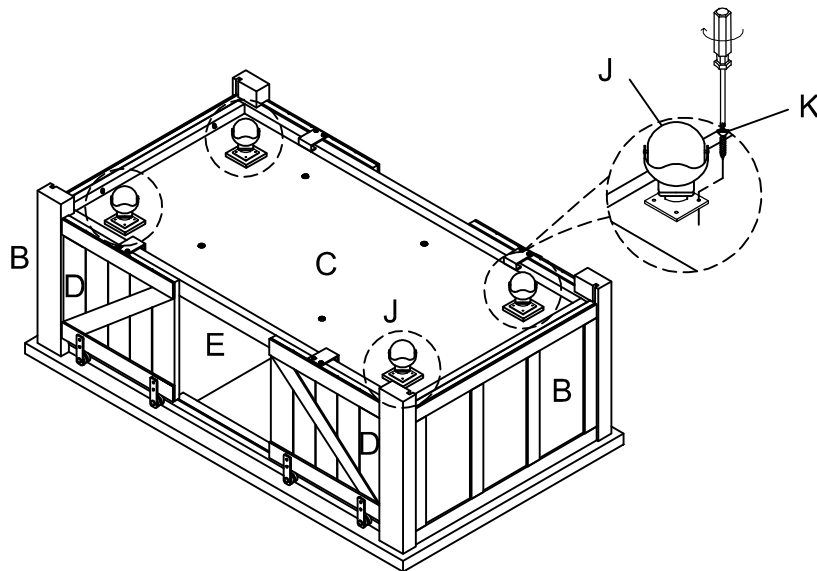

---

### Cleaning & Care

Treat surfaces with care. Surfaces are resistant to scratches but are not scratch resistant. Clean surfaces with a dry or damp soft cloth. Do not use abrasive cleaners. Hardware may loosen over time. Periodically check that all connections are tight.