

## **ASSEMBLY INSTRUCTIONS**


## **DOUBLE PEDESTAL DINING TABLE WITH LEAF**

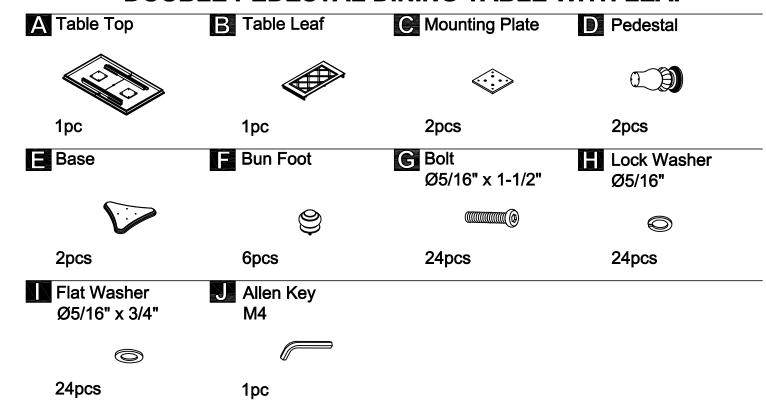

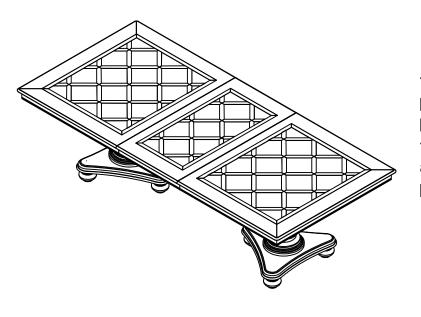


This page lists all the contents included in the box. Please take the time to identify the hardware as well as the individual components to this product. As you unpack and prepare for assembly, place the contents on a carpeted or padded area to protect them from damage.


Attach the Mounting Plate (C) to the Pedestal (D) using Bolt (G), Lock Washer (H) and Flat Washer (I) with the Allen Key (J).

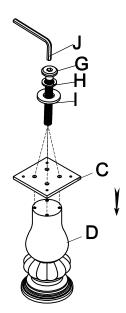


Place the assembled pedestal with mounting plate upside down. Attach the Base (E) to the Pedestal (D) using Bolt (G), Lock Washer (H) and Flat Washer (I) with the Allen Key (J).

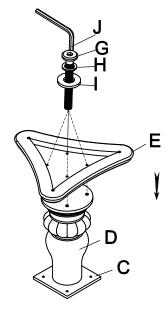


Attach the Bun Foot (F) to the Base (E).

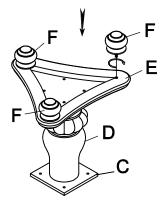


Place the Table Top (A) upside down on a smooth and carpeted surface. Attach the Mounting Plate (C) to the Table Top (A) using Bolt (G), Lock Washer (H) and Flat Washer (I) with the Allen Key (J). Open the lock underneath the Table Top (A).

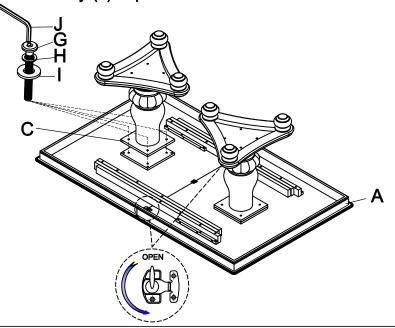

Stand the assembled table upright. Open the Table Top (A) and place the Table Leaf (B) on the slides.

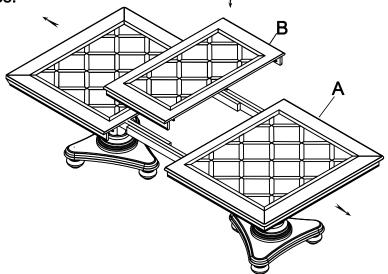

Close the Table Top (A). Secure the Table Top (A) and Table Leaf (B) using the lock.

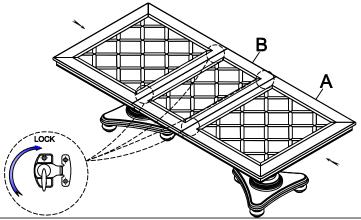

## Cleaning & Care

Treat surfaces with care. Surfaces are resistant to scratches but are not scratch resistant. Clean surfaces with a dry or damp soft cloth. Do not use abrasive cleaners. Hardware may loosen over time. Periodically check that all connections are tight.