 
 










 



ASSEMBLY INSTRUCTIONS


ARM CHAIR

A Chair Back	B Cushion Seat	C Left Front Leg	D Right Front Leg
			
1pc	1pc	1pc	1pc
E Left Arm	F Right Arm	G Bolt Ø5/16" x 3"	H Bolt Ø5/16" x 2-3/8"
			
1pc	1pc	4pcs	4pcs
I Bolt Ø5/16" x 1-3/4"	J Lock Washer Ø5/16"	K Flat Washer Ø5/16" x 3/4"	L Allen Key M4
			
6pcs	14pcs	14pcs	1pc
M Screw Ø5/16" x 1-13/16"			
			
2pcs			

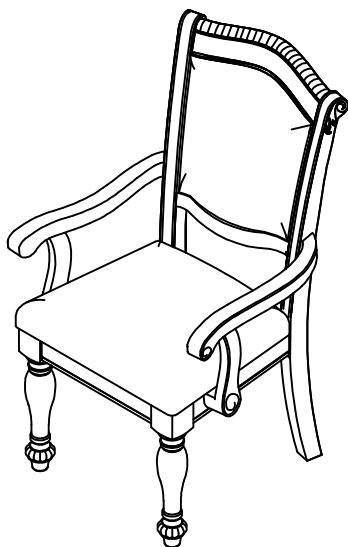


This page lists all the contents included in the box. Please take the time to identify the hardware as well as the individual components to this product. As you unpack and prepare for assembly, place the contents on a carpeted or padded area to protect them from damage.

- 1** Place the Chair Back (A) on a smooth and carpeted surface. Attach the Cushion Seat (B) to the Chair Back (A) using the wood tenon.

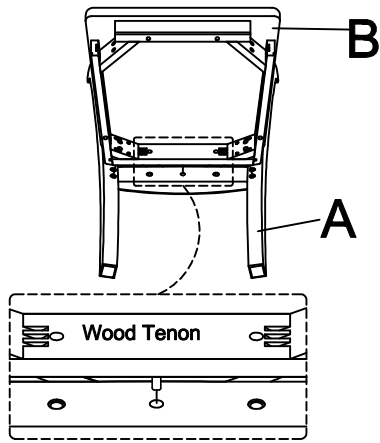


- 2** Attach the Cushion Seat (B) to the Chair Back (A) using Bolt (I) for the center holes and Bolt (G) for the corner holes, along with Lock Washer (J) and Flat Washer (K) with the Allen Key (L).

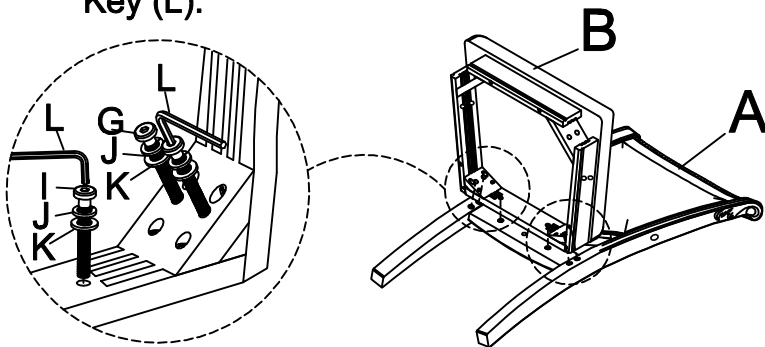


Take the Allen Key and turn the bolts until the legs are secured. **DO NOT TIGHTEN COMPLETELY.** Stop when you feel you are adding force to tighten the bolts.

- 3** Attach the Left & Right Front Leg (C & D) to the Cushion Seat (B) using Bolt (H), Lock Washer (J) and Flat Washer (K) with the Allen Key (L).

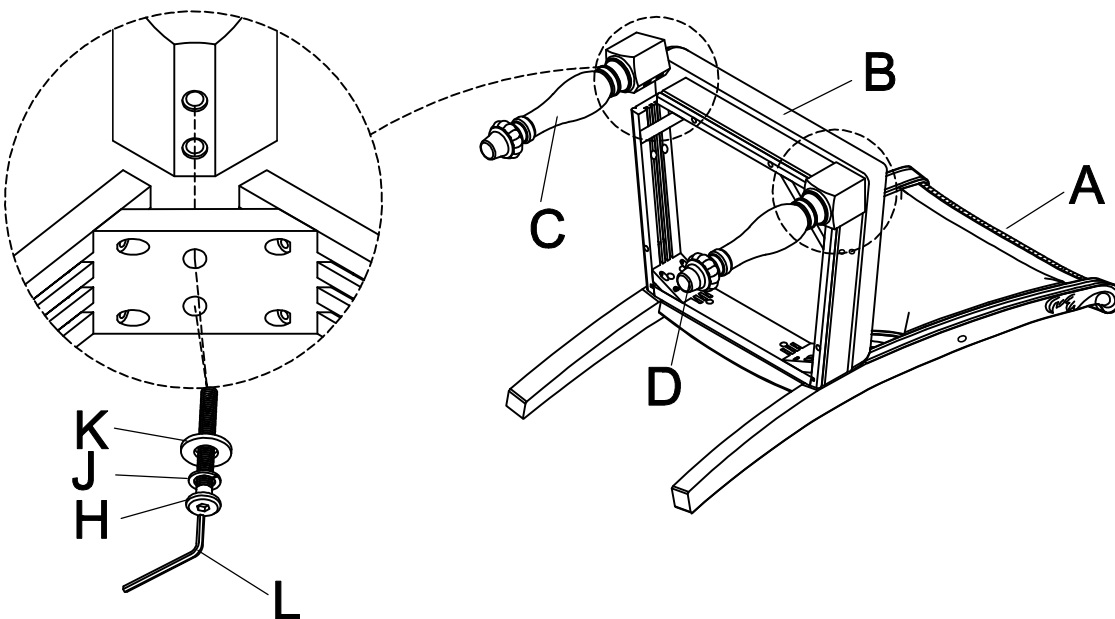

- 4** Attach the Left & Right Arm (E & F) to the Cushion Seat (B) using Bolt (I), Lock Washer (J) and Flat Washer (K) with the Allen Key (L). Then, attach the Left & Right Arm (E & F) to the Chair Back (A) using Screw (M) with a screwdriver (not provided).

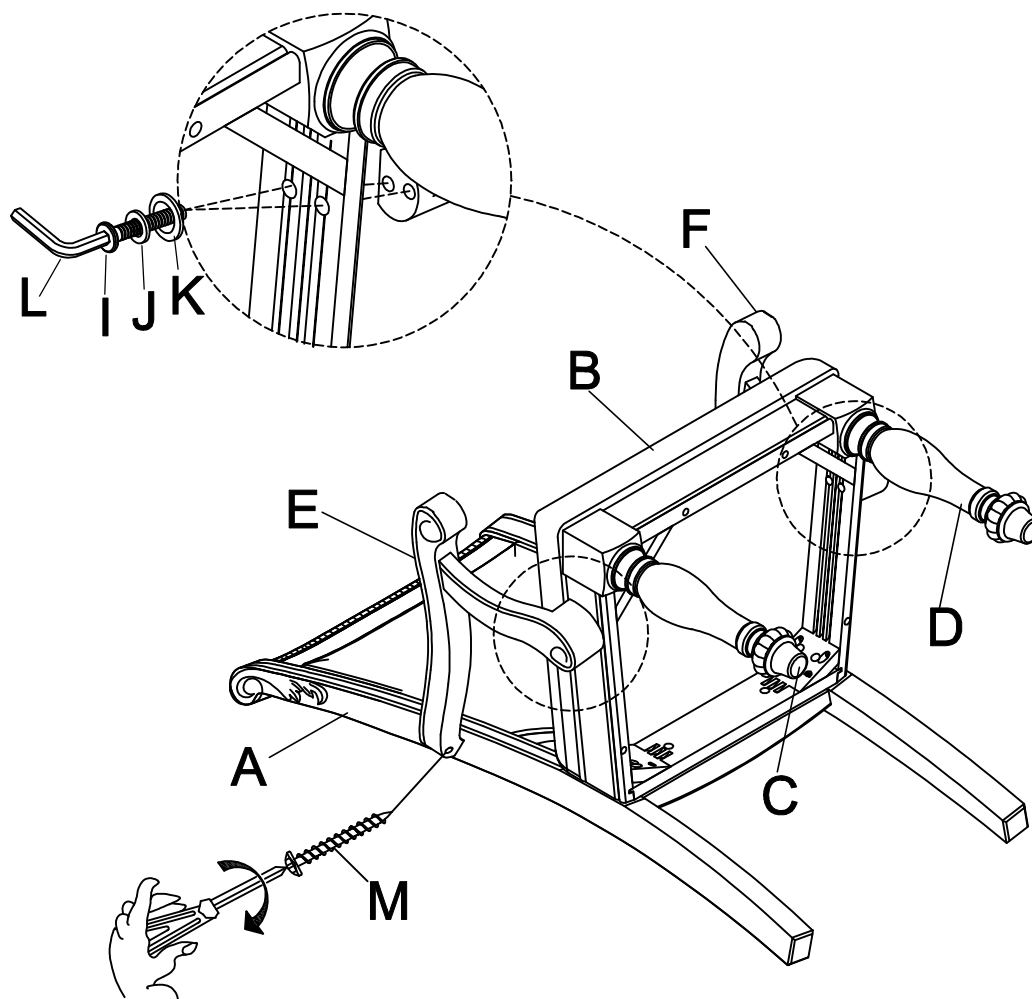

Stand the chair on an even surface and check for balance. If it wobbles, press down on the uneven leg and tighten the bolts. Once balanced, apply even pressure to the center and tighten all bolts without over-tightening.

Helpful Tip:

While tightening the bolts from underneath, have someone sit in the chair.

Cleaning & Care

Treat surfaces with care. Surfaces are resistant to scratches but are not scratch resistant. Clean surfaces with a dry or damp soft cloth. Do not use abrasive cleaners. Hardware may loosen over time. Periodically check that all connections are tight.