

ASSEMBLY INSTRUCTIONS

SIDE CHAIR

A Chair Back



1pc

B Cushion Seat



1pc

C Left Front Leg



1pc

D Right Front Leg



1pc

E Bolt

$\varnothing 5/16" \times 3"$



4pcs

F Bolt

$\varnothing 5/16" \times 2-3/8"$



4pcs

G Bolt

$\varnothing 5/16" \times 1-3/4"$



2pcs

H Lock Washer

$\varnothing 5/16"$



10pcs

I Flat Washer

$\varnothing 5/16" \times 3/4"$




10pcs

J Allen Key

M4




1pc

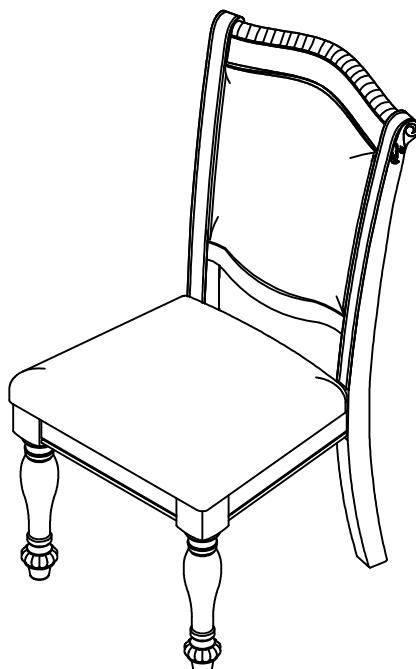


This page lists all the contents included in the box. Please take the time to identify the hardware as well as the individual components to this product. As you unpack and prepare for assembly, place the contents on a carpeted or padded area to protect them from damage.

1 Place the Chair Back (A) on a smooth and carpeted surface. Attach the Cushion Seat (B) to the Chair Back (A) using the wood tenon.

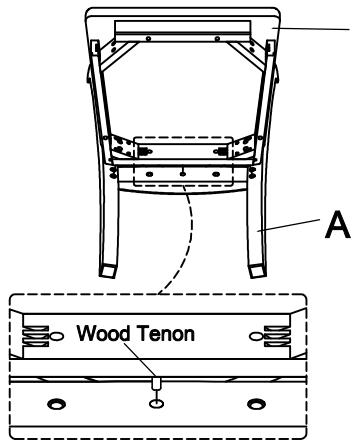


2 Attach the Cushion Seat (B) to the Chair Back (A) using Bolt (G) for the center holes and Bolt (E) for the corner holes, along with Lock Washer (H) and Flat Washer (I) with the Allen Key (J).

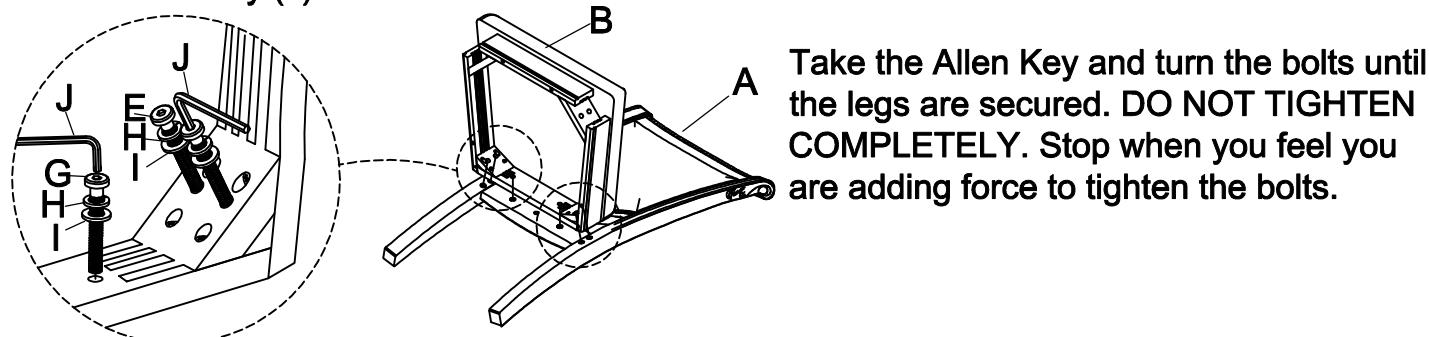

Take the Allen Key and turn the bolts until the legs are secured. DO NOT TIGHTEN COMPLETELY. Stop when you feel you are adding force to tighten the bolts.

3 Attach the Left & Right Front Leg (C & D) to the Cushion Seat (B) using Bolt (F), Lock Washer (H) and Flat Washer (I) with the Allen Key (J).

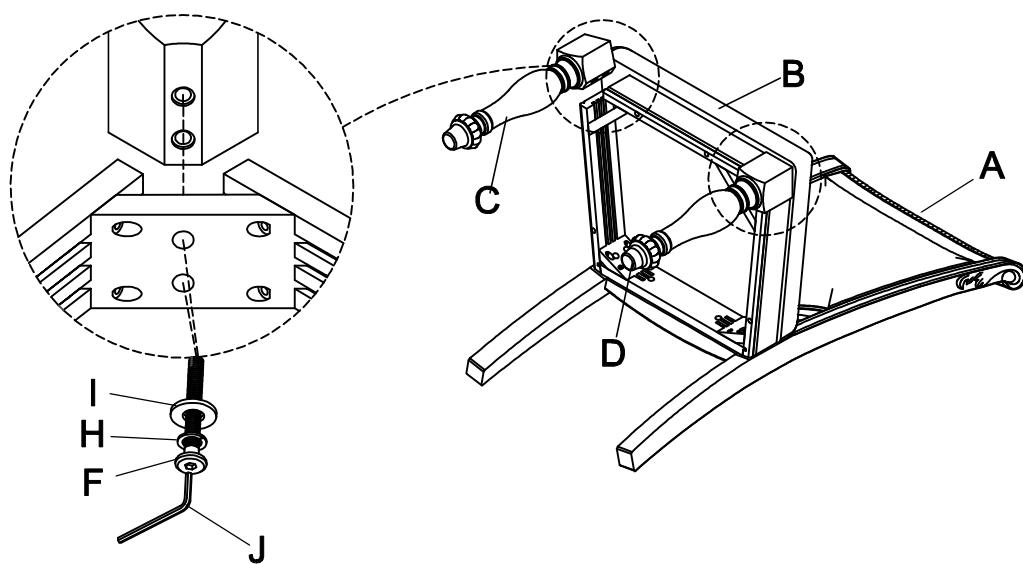

Stand the chair on an even surface and check for balance. If it wobbles, press down on the uneven leg and tighten the bolts. Once balanced, apply even pressure to the center and tighten all bolts without over-tightening.

Helpful Tip:
While tightening the bolts from underneath, have someone sit in the chair.

Cleaning & Care

Treat surfaces with care. Surfaces are resistant to scratches but are not scratch resistant. Clean surfaces with a dry or damp soft cloth. Do not use abrasive cleaners. Hardware may loosen over time. Periodically check that all connections are tight.