





**Important safety instructions:**

- Please read carefully all instructions before assembling.
- For your safety and ease, assembly by two or more adults is recommended.
- Keep instructions for future use.





**Pre-assembly:**

- Do not discard any content until assembly is completed to avoid accidentally discarding small parts or hardware.
- Remove all parts and hardware from box along with any protective packaging.

**Parts List**

Item	Description	DRAWING	QTY
P1	Chair seat		1
P2	Chair back		1
P3	Front Legs		2
P4	Chair Skirt		1

**Hardware List**


Item	Description	DRAWING	QTY
H1	Flat Washers φ5/16"		9
H2	Lock Washers φ5/16"		9
H3	Bolts φ5/16*2"		9
H4	Allen Wrench φ5/16"		1

**DISCLAIMER:**


WHEN PROPERLY ASSEMBLED, THIS ITEM IS SAFE FOR INTENDED USE. SELLER IS NOT LIABLE FOR AND DAMAGES RESULTING FROM ITEM BEING IMPROPERLY ASSEMBLED AFTER PURCHASE.

**Assembly Procedures:**


Step 1. Assemble the chair on a flat, soft surface such as carpet or cloth to prevent scratching the finish. Open the bottom cover, take out the legs and hardware.

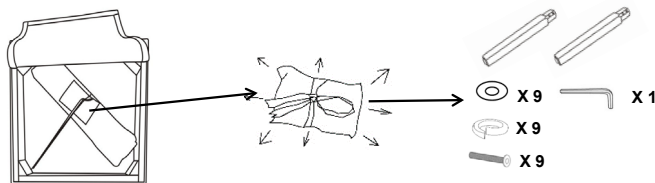

Step 2. Using 5pcs of bolts(H3), 5pcs of lock washers(H2), 5pcs of flat washers(H1), connect Back(P2) to Chair Seat(P1). Then use 4pcs of bolts(H3), 4pcs of lock washers(H2), 4pcs of flat washers(H1), connect Front legs(P3) to Chair Seat(P1). Tighten all bolts(H3) with Allen Wrench(H4).

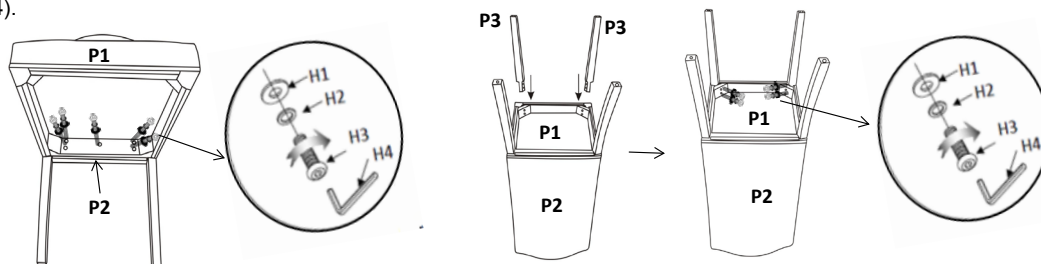

Step 3. Attach the skirt along the seat edge with velcro as shown, then level the dining chair and place the dining chair upright on a level surface.

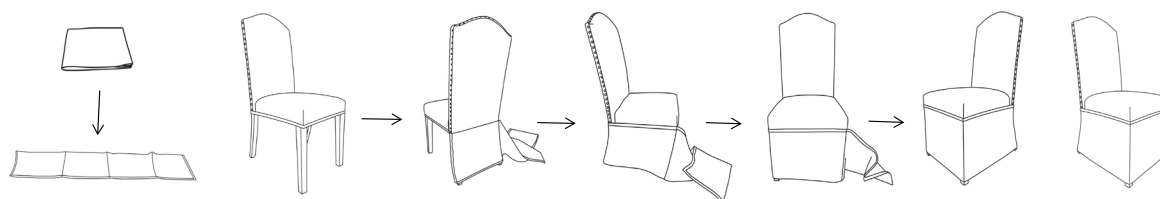

**ADDITIONAL NOTE ABOUT SAFETY: BOLTS MAY LOOSEN DURING NORMAL EVERYDAY USE. THEY SHOULD BE PERIODICALLY INSPECTED AND RE-TIGHTENED TO PREVENT DAMAGE OR INJURY. ALWAYS CHECK TO ENSURE THAT ALL HARDWARE IS KEPT TIGHTENED.**

Thank you for your purchase