

 
# LIBERTY FURNITURE

## ASSEMBLY INSTRUCTION



 
 
 


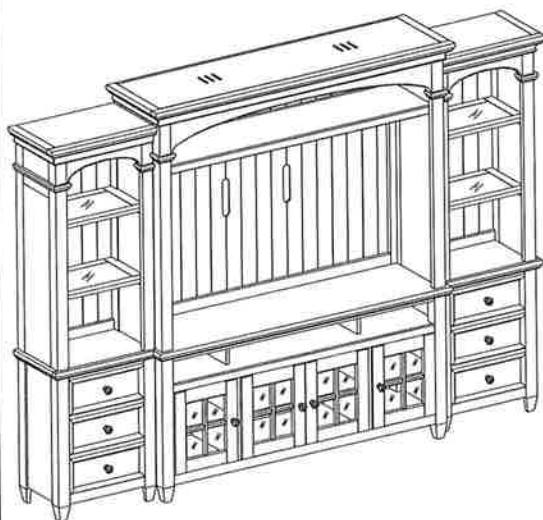

 
ITEM#: 824-EC68 / TV66 / EL78 / ER78

DESCRIPTION : ENTERTAINMENT HUTCH  
ENTERTAINMENT TV STAND  
LEFT PIER  
RIGHT PIER




Thank you for purchasing this quality product. Be sure to check all packing material carefully for small Hardware which may have come loose inside the carton during shipment. Identify and count all Hardware and compare with the Hardware List Below.









 


 



 
 
### Hutch Parts List

① 	② 
Light Bridge : 1pc	Adjustable Shelf : 1pc
③ 	④ 
LSF Frame : 1pc	RSF Frame : 1pc
⑤ 	⑥ 
Top Back Rail : 1pc	Bottom Back Rail : 1pc
⑦ 	⑧ 
Top Back Rail Support : 1pc	Bottom Back Rail Support : 1pc
⑨ 	⑩ 
Side Back Panel Frame : 2 pcs	Center Back Panel Frame : 1pc

### Parts List

Description	
 Glass Shelf : 2pcs	 Glass Shelf : 2pcs
Left Pier : 1pc	Right Pier : 1pc
	
TV Stand : 1pc	

### Assembly Hardware Pack

 
 
 
 
⑪			
No.	Description	Hardware	Qty.
(A)	JCBC Screw Ø1/4" x 40mm		22 pcs
(B)	Spring Washer Ø1/4"		22 pcs
(C)	Flat Washer Ø1/4" x 13mm		6 pcs
(D)	Allen Key M4		1 pc
(E)	Wood Cap		6 pcs
(F)	Flat Washer Ø1/4" x 19mm		16 pcs
(G)	Hanger Bolt Ø5/16" x 89mm		6 pcs
(H)	Round Half Washer Ø5/16"		6 pcs
(K)	Hange nut Ø5/16"		6 pcs
(I)	Wrench		1 pc
(J)	PH Screw M4 x 32mm		7 pcs
(M)	CBS Screw M4 x 20mm		4 pcs
(N)	CBS Screw M3.5 x 12mm		4 pcs
(O)	Shelf Pin		4 pcs
(P)	Tipping Restraint		1 Set

# LIBERTY FURNITURE

## ASSEMBLY INSTRUCTION

ITEM#: 824-EC68 / TV66 / EL78 / ER78

DESCRIPTION : ENTERTAINMENT HUTCH  
ENTERTAINMENT TV STAND  
LEFT PIER  
RIGHT PIER

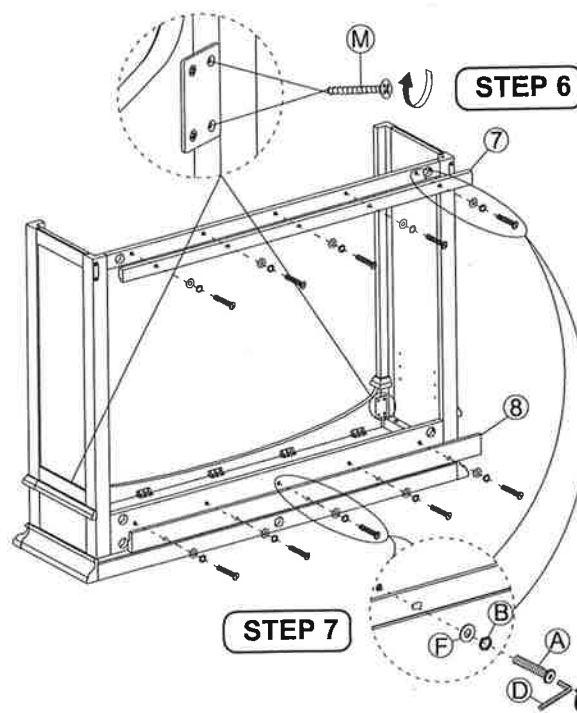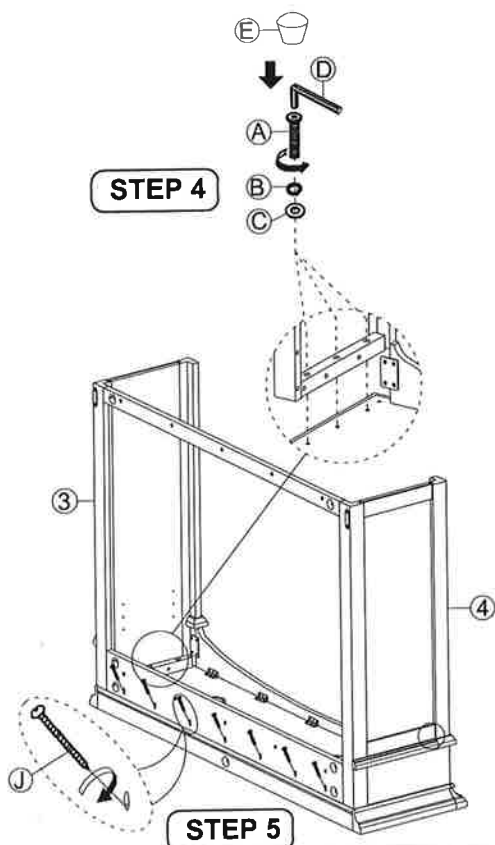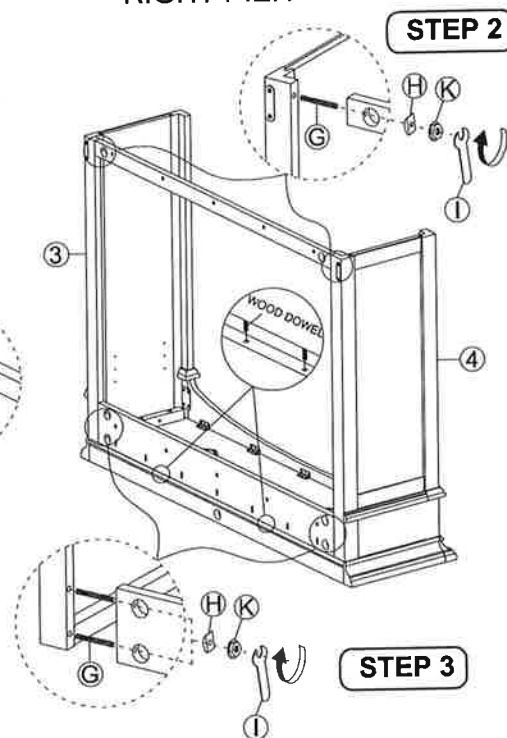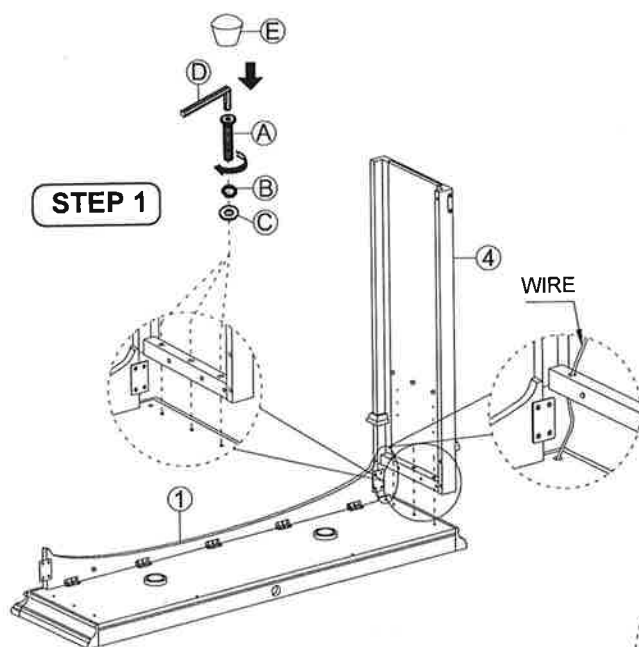 


# LIBERTY FURNITURE

## ASSEMBLY INSTRUCTION

ITEM#: 824-EC68 / TV66 / EL78 / ER78

DESCRIPTION : ENTERTAINMENT HUTCH  
ENTERTAINMENT TV STAND  
LEFT PIER  
RIGHT PIER

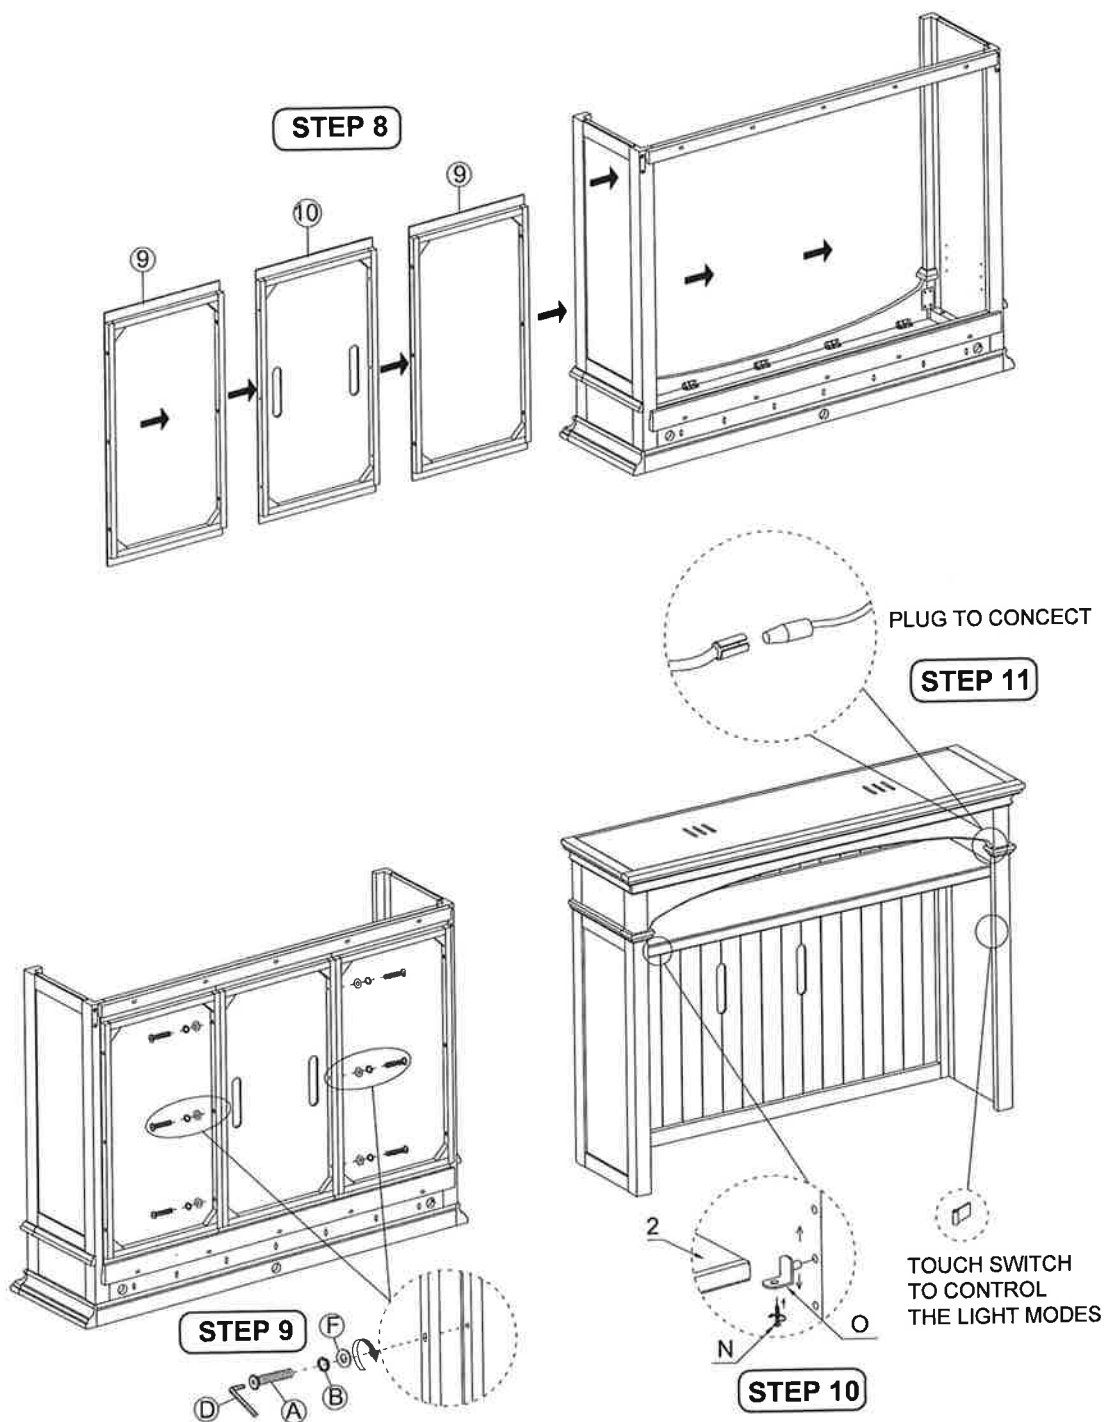

 
# LIBERTY FURNITURE

## ASSEMBLY INSTRUCTION

 
ITEM#: 824-EC68 / TV66 / EL78 / ER78

DESCRIPTION : ENTERTAINMENT HUTCH  
ENTERTAINMENT TV STAND  
LEFT PIER  
RIGHT PIER

### STEP 12

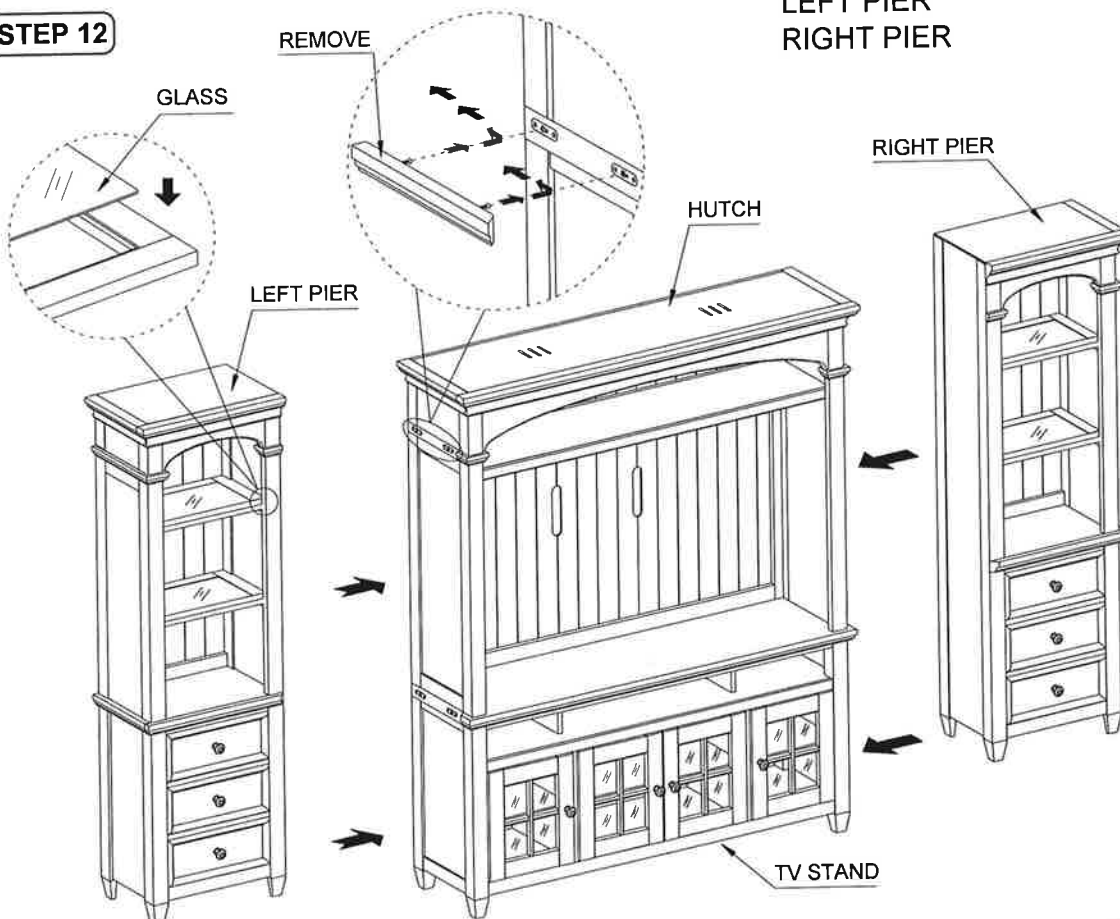

### STEP 13

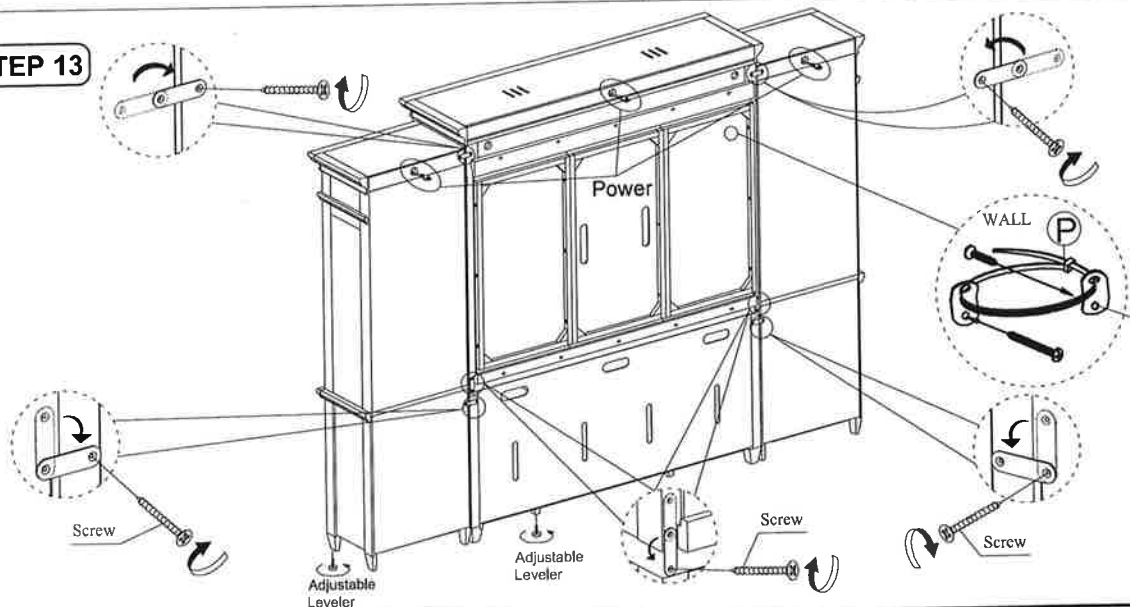



 
# LIBERTY FURNITURE


## ASSEMBLY INSTRUCTION

DESCRIPTION : ENTERTAINMENT TV STAND

ITEM#: 824-TV66

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small Hardware which may have come loose inside the carton during shipment. Identify and count all Hardware and compare with the Hardware List Below.

Parts List			
No.	Description		Qty.
①	TV Stand		1 Pc
②	LSF Top removeable molding		1 Pc
③	RSF Top removeable molding		1 Pc

Assembly Hardware Pack			
④			
No.	Description	Hardware	Qty.
Ⓐ	Tipping Restraint		1 Set

