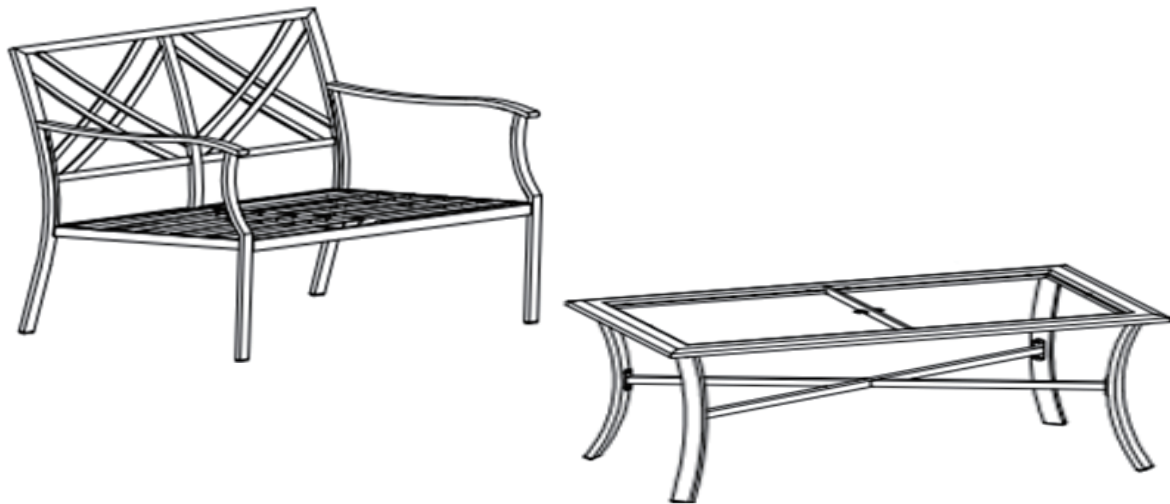




E02GF040202701

## DOUBLE PERSON SOFA+ TEA TABLE ASSEMBLE INSTRUCTION



### Safety Information

#### PRODUCT CAUTION



 
 




This dining set was made for the explicit purpose of providing outdoor functions and is not to be used as a toy. This product is intended for normal outdoor use; however, the manufacturer recommends storing and / or covering this set when any formidable / severe weather is approaching. Do not locate the product near open flames. Do not use the product as a support. Do not shake, lean or climb on the product. Children under the age of 10, near the product, should be supervised by a competent adult at all times. This product is NOT intended for commercial use and will void the warranty.

### Warranty

**1 YEAR FRAME AND 1 YEAR FABRIC LIMITED WARRANTY**

### CUSTOMER SERVICE

**Call Our After Sales Support Hotline 1-866-283-4412 Monday-Friday 7am-5pm CST**  
**Or Our Email Address: [service@alphamarts.com](mailto:service@alphamarts.com)**

PART LIST	FIGURE	QUANTITY	DESCRIPTION
A		1PC	LEFT ARM
B		1PC	RIGHT ARM
C		1PC	BACK
D		1PC	SEAT
E		9+1PCS	FLAT WASHER
F		2+1PCS	SHORT BOLT (M6*15)
G		7+1PCS	LONG BOLT (M6*30)
H		1PC	ALLEN WRENCH

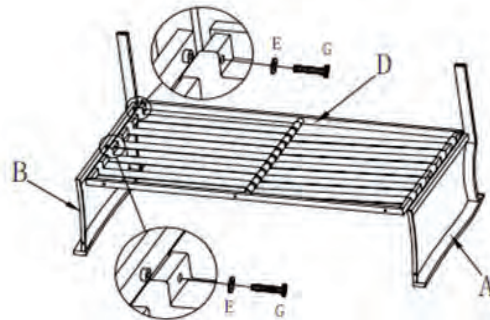
**STEP 1**

A. PLACE LEFT ARM (A) UPSIDE DOWN ON A FLAT, PROTECTED SURFACE.

B. ATTACH SEAT (D) TO LEFT ARM (A) WITH FLAT WASHER (E) AND BOLT (G) USING ALLEN WRENCH (H). DO NOT TIGHTEN COMPLETELY.

C. PLACE RIGHT ARM (B) UPSIDE DOWN ON A FLAT PROTECTED SURFACE, ROTATE ASSEMBLY FROM ABOVE STEP ON TOP OF RIGHT ARM (B) .

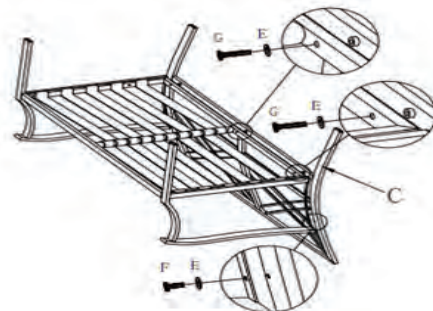
D. ATTACH RIGHT ARM (B) TO SEAT (D) WITH FLAT WASHER (E) AND BOLT (G) USING ALLEN WRENCH (H). DO NOT TIGHTEN COMPLETELY.

**STEP 2**

A. CONNECT BACK (C) TO RIGHT ARM (B) AND LEFT ARM (A) WITH FLAT WASHER (E) AND BOLT (F) USING ALLEN WRENCH (H). DO NOT TIGHTEN COMPLETELY.

B. CONNECT BACK (C) TO SEAT WITH FLAT WASHER (E) AND BOLT (F) USING ALLEN WRENCH (H). DO NOT TIGHTEN COMPLETELY.

C. CONNECT BACK (C) TO LEFT ARM (A) WITH FLAT WASHER (E) AND BOLT (F) USING ALLEN WRENCH (H). DO NOT TIGHTEN COMPLETELY.

**STEP 3**

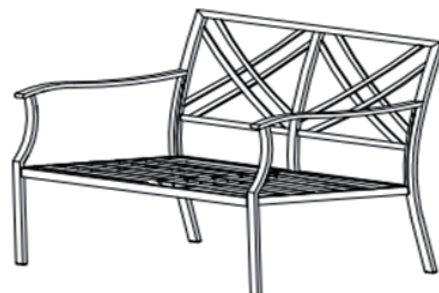
A. TURN CHAIR TO UPRIGHT POSITION SO THAT IT STANDS SQUARELY ON THE FLOOR.

B. TIGHTEN ALL BOLTS SECURELY USING ALLEN WRENCH (H).

C. RETAIN ALLEN WRENCH (H) FOR USE TO TIGHTEN BOLTS PERIODICALLY OR AS NEEDED.

**STEP 4**








PUT THE CUSHIONS ON THE SEAT ,WITH VELCRO TIE ON THE CHAIR , THEN PUT ON THE BACK CUSHIONS.

**WEIGHT LIMIT**

500 LBS

**CARE AND CLEANING**

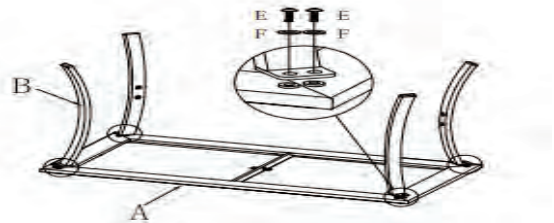
IN ORDER TO PROLONG THE LIFE OF YOUR LOVESEAT, PLEASE STORE IN DRY SHELTERED PLACE WHEN NOT IN USE OR DURING INCLEMENT WEATHER.

PART LIST	FIGURE	QUANTITY	DESCRIPTION
A		1PC	TABLE RIM
B		4PCS	LEG
C		1PC	LEG CONNECTOR
D		2PCS	TILE
E		16+1PCS	BOLT (M6*15)
F		16+1PCS	FLAT WASHER
G		1PC	ALLEN WRENCH

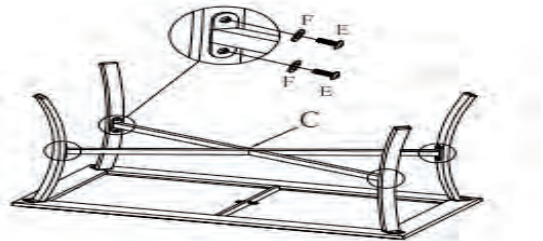
**STEP 1**

A. PLACE TABLE RIM (A) UPSIDE DOWN ON A FLAT, PROTECTED SURFACE.

B. ATTACH LEGS (B) TO TABLE RIM (A) WITH FLAT WASHER (F) AND BOLT (E) USING ALLEN WRENCH (G). DO NOT TIGHTEN COMPLETELY.

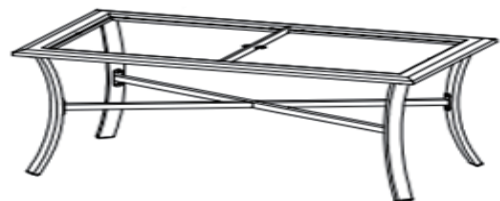
**STEP 2**

A. ATTACH LEG CONNECTOR (C) TO LEGS (B) WITH FLAT WASHER (F) AND BOLT (E) USING ALLEN WRENCH (G). DO NOT TIGHTEN COMPLETELY.

**STEP 3**

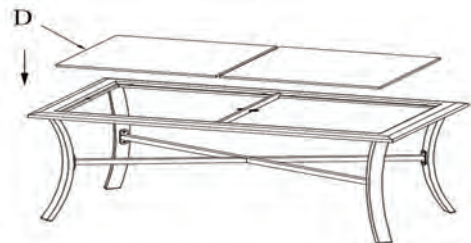
A. TURN TABLE TO UPRIGHT POSITION SO THAT IT STANDS SQUARELY ON THE FLOOR.

B. TIGHTEN ALL BOLTS SECURELY USING ALLEN WRENCH (G).

**STEP 4**

A. CAREFULLY PLACE TILE (D) ONTO TABLE RIM (A).

B. RETAIN ALLEN WRENCH (G) FOR USE TO TIGHTEN BOLTS (E) PERIODICALLY OR AS NEEDED.

**WEIGHT LIMIT**

165 LBS

**CARE AND CLEANING**

IN ORDER TO PROLONG THE LIFE OF YOUR COFFEE TABLE, PLEASE STORE IN DRY SHELTERED PLACE WHEN NOT IN USE OR DURING INCLEMENT WEATHER.