

ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



Fine Furniture for every stage of life

931157 ACCENT TABLE

REVISION 0:05/31/2019 REVISION 1:05/09/2023

PAGE 1 OF 5



ASSEMBLY TIPS:

- 1. Remove hardware from box and sort by size.
- 2. Please check to see that all hardware and parts are present prior to start of assembly.
- 3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

- 1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2. This product is for home use only and not intended for commercial establishments.

ASSEMBLY TIME 35 MINUTES


PARTS IDENTIFICATION

Α	TOP						1PC
В	TOP FRAME						1PC
С	BOTTOM FRA	AME					1PC
D	LEG						2PCS
Ε	SUPPORT LE	EG					2PCS
HARDWARE IDENTIFICATION							
1	SMALL BOLT (3/16" x 12mm BLK)		6PCS	4	LARGE BOLT (ø16 x 29mm)		1PC
2	SHORT BOLT (1/4" x 22mm BLK)		2PCS	5	SUCTION CUP (ø6.3mm)		4PCS
3	LONG BOLT (1/4" x 38mm BLK)		2PCS	6	ALLEN WRENCH (4mm)		1PC
PAGE 2 OF 5							




STEP 1

Do not tighten until each step is completed or instructed.

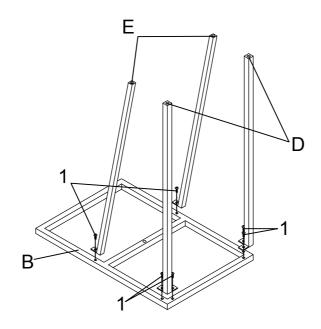


STEP 2

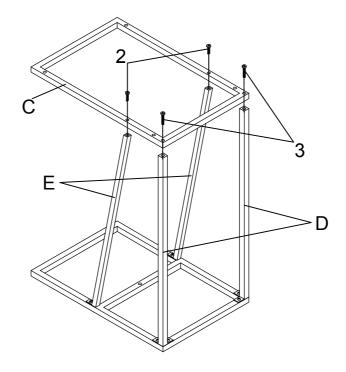


PAGE 3 OF 5



STEP 3

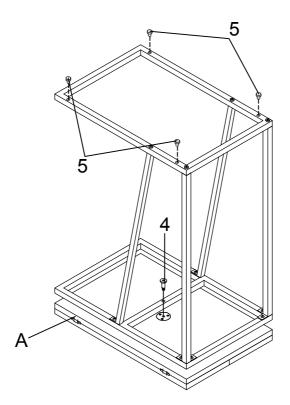

STEP 4 COMPLETE

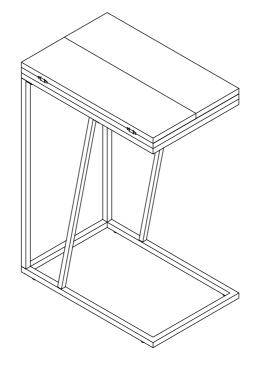


PAGE 4 OF 5



Product Size: 292 X 457 X 641 H (MM)

Product Size : $11\frac{1}{2}$ " X 18" X 25 $\frac{1}{4}$ "

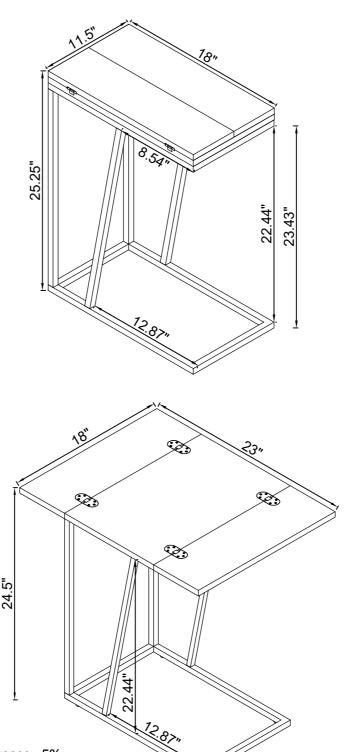

Note: Dimension tolerance ±5%

PAGE 5 OF 5