
 
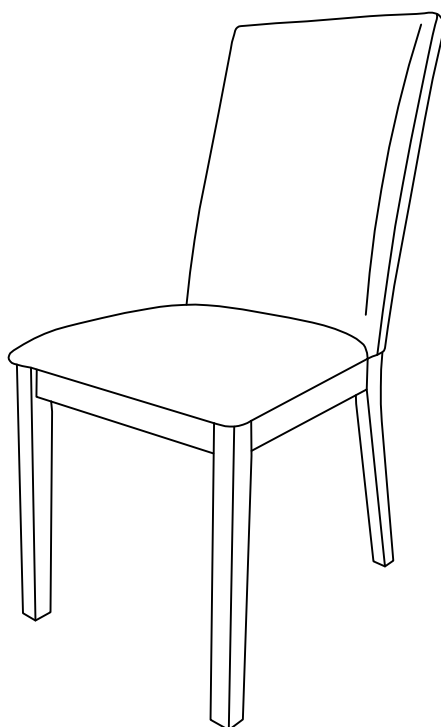
 
 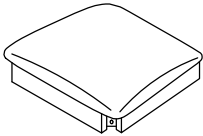




 
 
 
 

Dining Chair
CF501519




PART LIST

A	B	C	D
			
Back 2 PCS	Seat 2 PCS	Right Leg 2 PCS	Left Leg 2 PCS


HARDWARE LIST

#1	#2	#3	#4	#5
				
M6 x 80mm	M6 x 60mm	M6 x 40mm		
Long Bolt 8 PCS (Extra 1)	Bolt 8 PCS (Extra 1)	Short Bolt 4 PCS (Extra 1)	Spring Washer 20 PCS (Extra 1)	Flat Washer 20 PCS (Extra 1)

#6

M4
Allen Wrench 1 PC


Step 1 . Attach seat (part B) to back (part A) using long bolts (part #1), short bolts (part #3), spring washers (part #4), flat washers (part #5), and allen wrench (part #6).

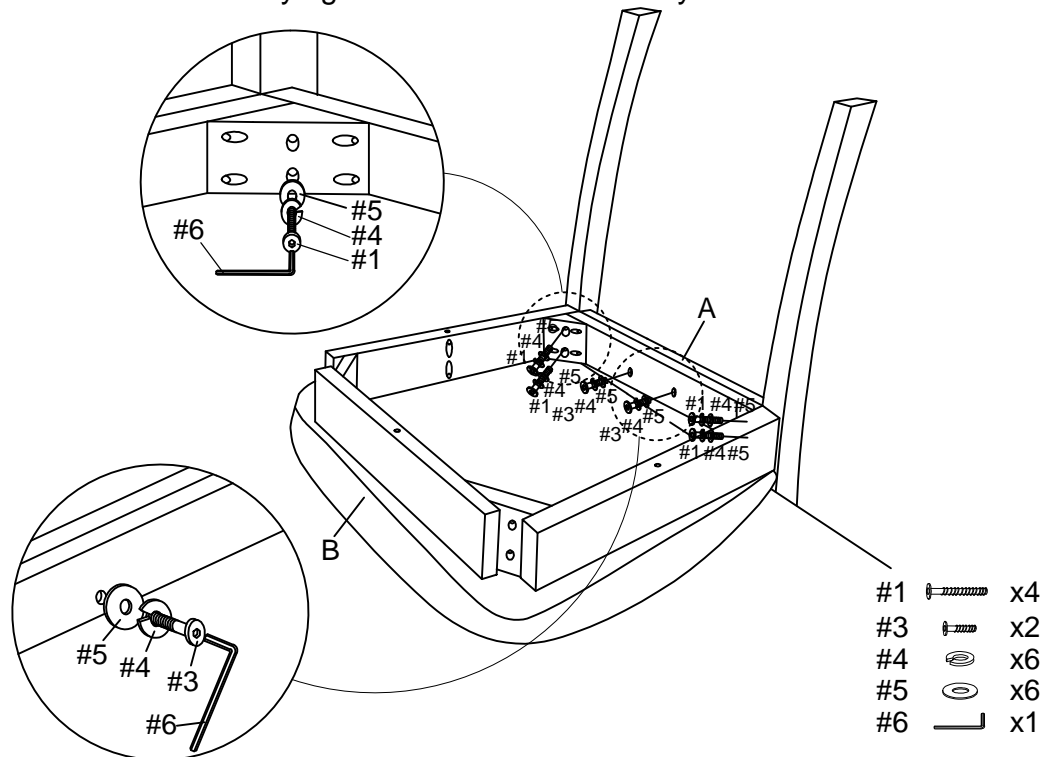NOTE: Please do not fully tighten bolts until unit is fully assembled.



Step 2 . Attach legs (parts C & D) to seat (part B) using bolts (part #2), spring washers (part #4), flat washers (part #5) and allen wrench (part #6).

NOTE: Please fully tighten all bolts at this time.

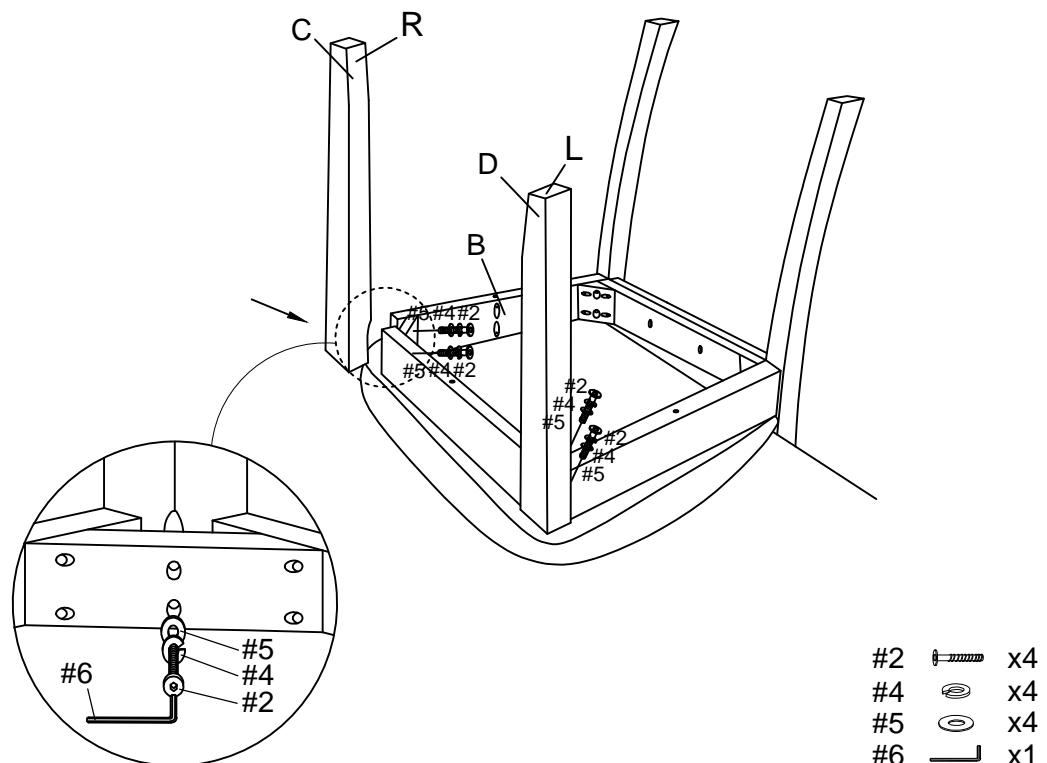

Step 3. Carefully turn unit upright. Repeat steps 1-2 to assemble remaining chair.

