

ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



Fine Furniture for every stage of life

110291(B1&B2) *Dining Table*

REVISION 0: 08/31/2020 REVISION 1: 08/07/2024 REVISION 2: 10/23/2025

ASSEMBLY INSTRUCTIONS



ASSEMBLY TIPS:

- 1. Remove hardware from box and sort by size.
- 2. Please check to see that all hardware and parts are present prior to start of assembly.
- 3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING

- 1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2. This product is for home use only and not intended for commercial establishments.



ASSEMBLY TIME

15 MINUTES

PARTS IDENTIFICATION

B1 (BOX 1)

<u> </u>	•	^	
AN	ТОР		1PC
BN	LEAF		1PC
CN	LOWER CROSSBAR		1PC
DN	UPPER CROSSBAR		1PC
B2 (BOX 2)			
EN	LEG FRAME		2PCS

HARDWARE IDENTIFICATION


Z-B1 (BOX 1) - HARDWARE PACK IS LOCATED IN 110291(B1)

1	BOLT (Ø5/16 x 13 x 45mm - RBW)		16PCS
2	LOCK WASHER (Ø5/16 x 10 x 1.1mm - RBW)	0	16PCS
3	FLAT WASHER (Ø5/16 x 22 x 2mm - RBW)		16PCS
4	ALLEN WRENCH (4 x 60mm - RBW)		1PC


COASTER

ASSEMBLY INSTRUCTIONS

STEP 1

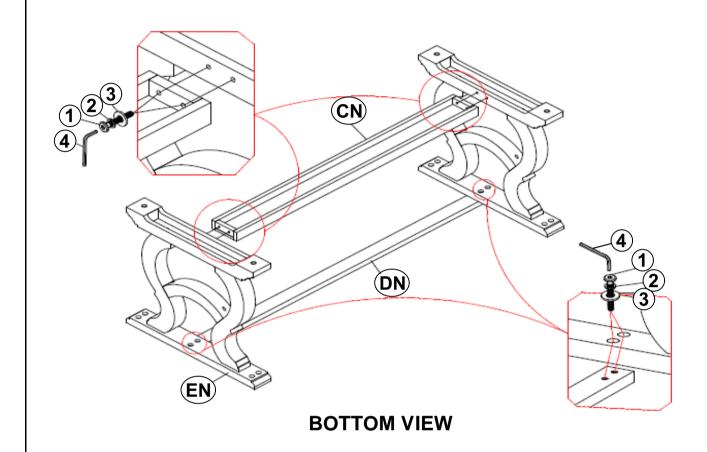

STEP 2

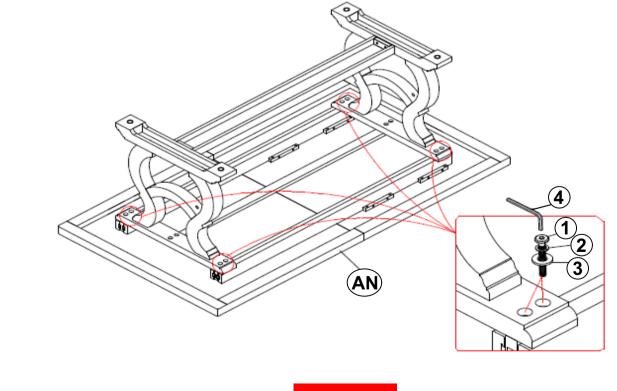


PAGE 3 OF 5

COASTERFURNITURE.COM


COASTER

ASSEMBLY INSTRUCTIONS

STEP 3

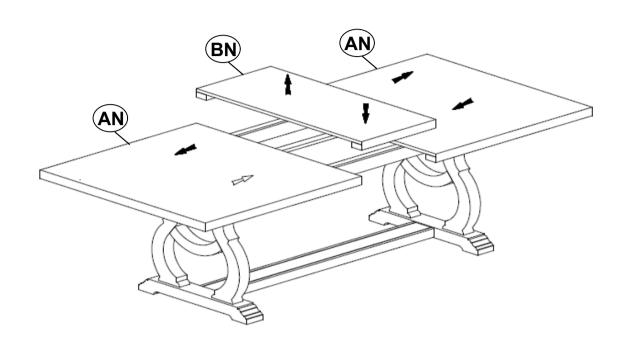


STEP 4

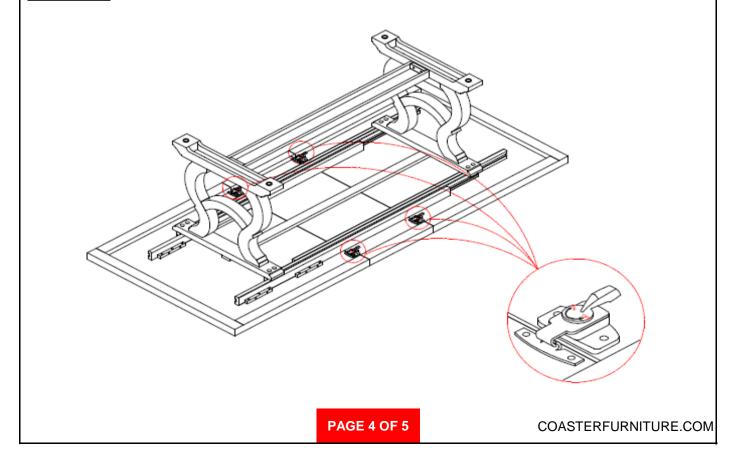


COASTER

ASSEMBLY INSTRUCTIONS

STEP 5

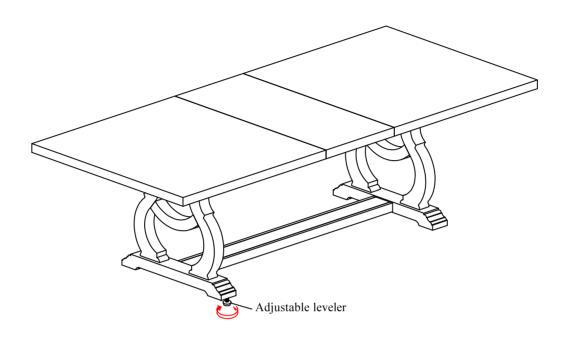


STEP 6 COMPLETE

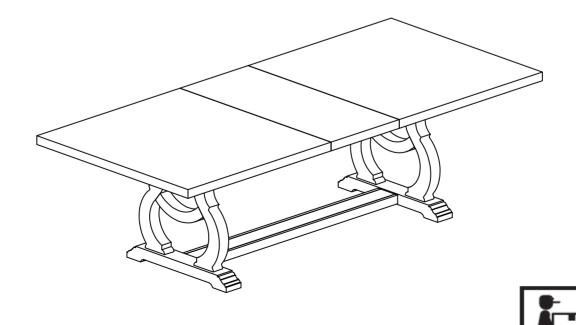

PAGE 5 OF 5

COASTERFURNITURE.COM



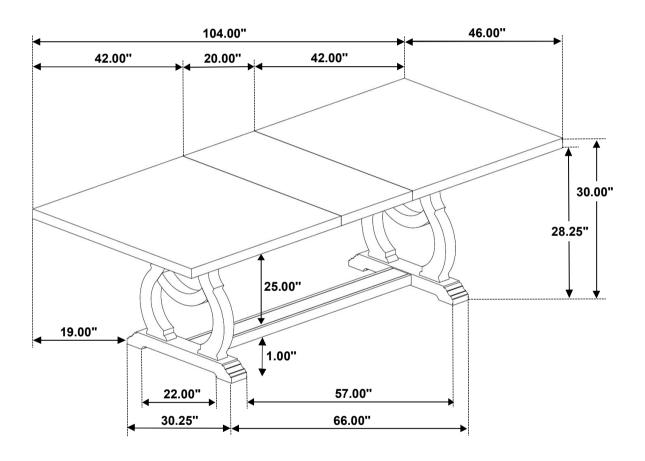

Note: Dimension tolerance ±5%

COASTERFURNITURE.COM