MADISON PARK

ASSEMBLY INSTRUCTIONS Adela Writing Desk

Important safety instructions:

- Please read carefully all instructions before assembling.
- For your safety and ease, assembly by two or more adults is recommended.
- Keep instructions for future use.

Pre-assembly:

- Do not discard any contents until after assembly is complete to avoid accidentally discarding small parts or hardware.
- Remove all parts and hardware from box along with any protective packaging.

Parts List

Item	Description		QTY		
P1	Top Frame		1		
P2	Left Side Frame	(L)	1		
P3	Right Side Frame	®	1		
P4	Stretcher		1		
P5	Top Glass	- TE	1		
P6	Shelf Glass		2		




Hardware List


Item	Description		QTY
H1	Bolts Ø1/4"*1/2"	0)===	12
H2	Plastic Pad	0	14
H3	Allen Wrench 1/4"		1

Assembly Procedures:

Step 1. Assemble the desk on a flat, soft surface such as a carpet or cloth to prevent scratching the finish. Remove the protective plates on both sides of the top frame (P1) before installation, see below image 1.

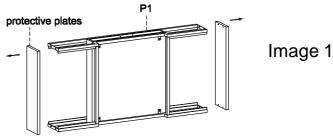


Step 2. Attach the left side frame (P2) and right side frame (P3) to the top frame (P1) and attach the stretcher (P4) to side frames as shown below image 2.

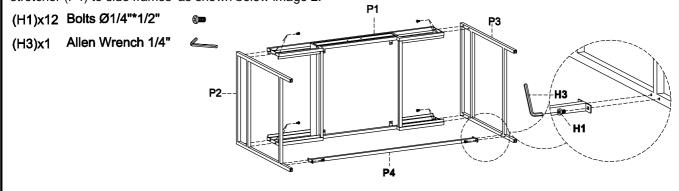


Step 3. 1). Securely tighten all bolts with Allen wrench(H3), make sure the bench is leveled and aligned properly. Turn the assembled desk to an upright position.

2). Place the plastic pads (H2) on the top of desk frame, then gently place the shelf glass (P6) and top glass (P5) to the pads as shown on below image 3.

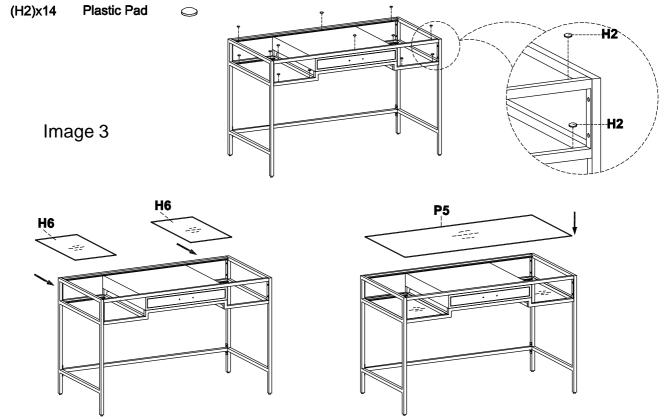

Step 4. 1) Remove the handles from the back of drawer front panel by unscrewing the bolts with screw driver (not provided).

- 2) Reattach the handles to the front of drawer front panel using bolts as shown below.
- 3) To level desk. If there is a gap between a leg and the floor, please adjust the adjustable leveler up or down under each leg. Assembly is complete. **Failure to follow these instructions may cause the bolts to misalign during assembly.**

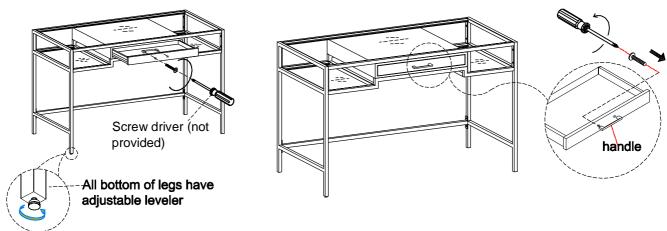

ADDITIONAL NOTE ABOUT SAFETY: BOLTS MAY LOOSEN DURING NORMAL EVERYDAY USE. THEY SHOULD BE PERIODICALLY INSPECTED AND RE-TIGHTENED TO PREVENT DAMAGE OR INJURY. ALWAYS CHECK TO BE SURE THAT ALL HARDWARE IS KEPT TIGHTENED.

Thank you for your purchase