

## SERVICE CARD

Please provide following information when you contact us. Your detail information will help us to bring you a more faster and effective service for you . Appreciate your kindly understanding and patience !


1. Your **Order No.** (Comes from your marketplace dashboard) . **Model No.** (On the left side below) **Series No.** (On the right side below )
2. Marketplace you place the order : Amazon, Walmart, Ebay or Others
3. What's the problem you had and the help you need





Damaged parts or furniture put together incorrectly can lead to serious injuries. Make sure to follow instructions correctly.

<p><b>1</b> x1</p>	<p><b>2</b> x1</p>	<p><b>3</b> x1</p> <p>430mm</p>	<p><b>4</b> x1</p> <p>562mm</p>	<p><b>5</b> x1</p> <p>170mm</p>
<p><b>6</b> x2</p>	<p><b>7</b> x1</p>	<p><b>8</b> x2</p>	<p><b>9</b> x2</p> <p>M8x445</p>	<p><b>10</b> x2</p> <p>M10x770</p>
<p><b>11</b> x1</p> <p><b>11</b> A X1 (paper gasket)</p>	<p><b>11</b> B X1 (iron washer)</p>	<p><b>12</b> x6</p>	<p><b>13</b> x2</p>	<p><b>14</b> x2</p> <p>Lockable</p>
<p><b>A</b></p> <p>A1 x2</p>	<p><b>B</b></p> <p>(5mm)</p> <p>B1 x1</p> <p>(17#)</p> <p>B2 x1</p> <p>(14#)</p> <p>B3 x1</p>	<p><b>C</b></p> <p>(Rubber washer)</p> <p>C1 x2</p> <p>C2 x2</p> <p>C3 x2</p>	<p><b>D</b></p> <p>D1 x2</p> <p>D2 x2</p>	<p><b>E</b></p> <p>E1 x2</p> <p>E2 x2</p> <p>E3 x2</p> <p>E4 x2</p>
<p><b>F</b></p> <p>(13#)</p> <p>F1 X1</p>	<p><b>S</b></p> <p><b>Screws for TV</b></p>			<p>Tools Required(Not included)</p>

 
AT9807

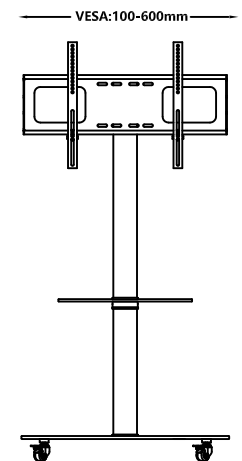

1

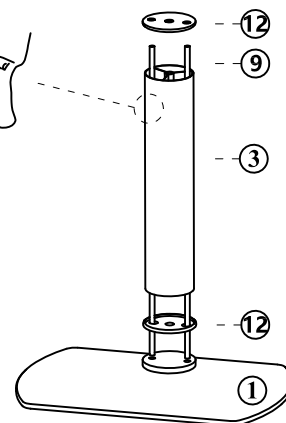  

**2**

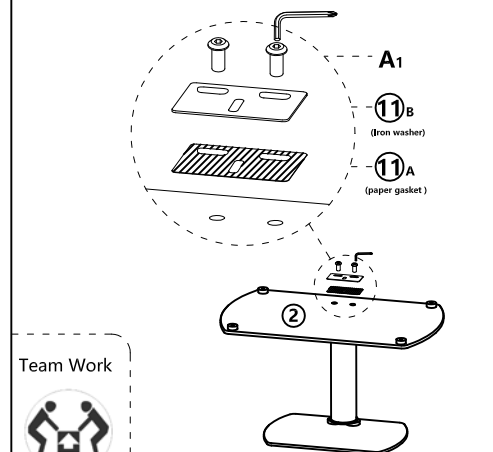 

## Team Work



3

 
B B<sub>3</sub> x1 13 x2  
14 x2



Front 2 Wheels with brake, back Wheels without brake




Tighten screw z in anti-clockwise way after leveling the whole base.

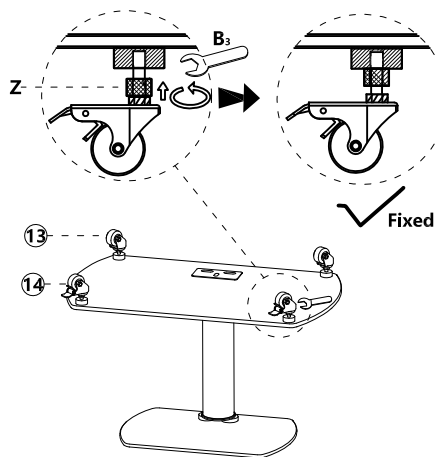

4

 10 x2

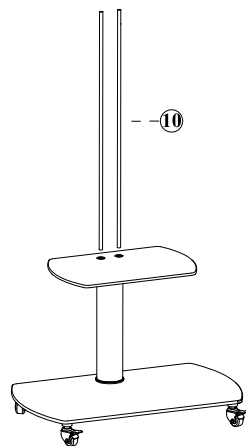

5

4 x1 5 x1  
12 x4 6 x2

 
D D<sub>1</sub> x2  
D<sub>2</sub> x2  
B B<sub>2</sub> x1



Please don't fully tighten until Step 7 to fix all the screws in the right holes.



Make Sure the small hole on Part 4 face backward.

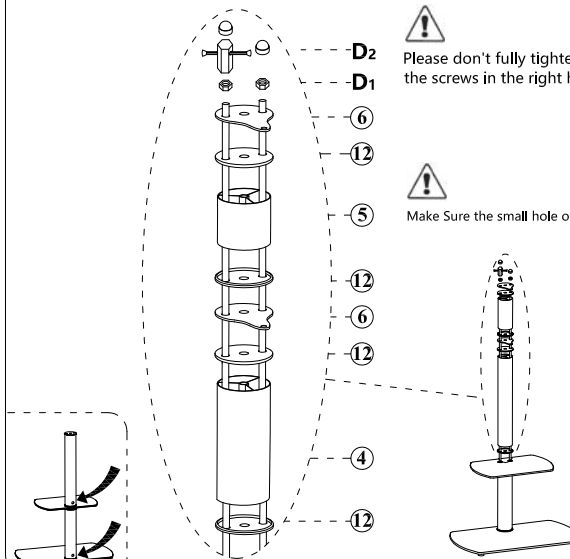


6

7 x1  
C C<sub>1</sub> x2



 Stick C1 on top and bottom center of steel bracket.

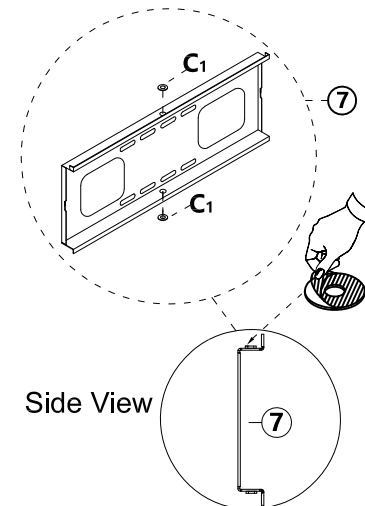


7

F F<sub>1</sub> x1 C C<sub>2</sub> x2  
B B<sub>1</sub> x1 C<sub>3</sub> x2



 
Make Sure fully tighten all screws before putting on your TV.

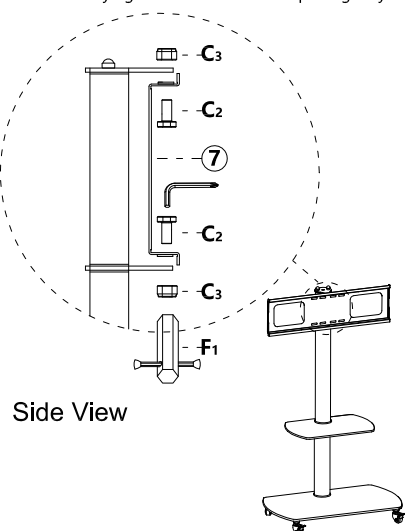


8



 
Variant screws and spacers provided to fit your TV, however not for all brands. Maybe you need to use the original screws comes with your TV or buy the special screws by yourself.

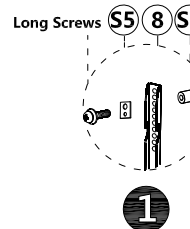


1

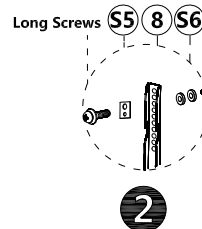 

2


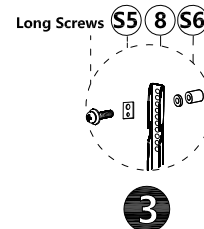 


3

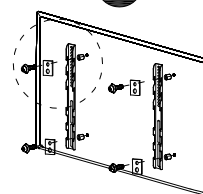 

Curved or Recessed TV

  S1 M6 x4 S5 x4  
S2 M6 x4 S6 x4  
S3 M8 x4 8 x8  
S4 M8 x4 8 x2

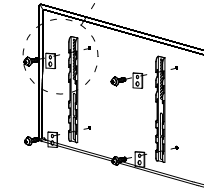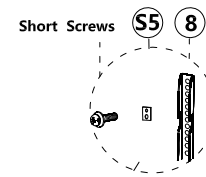

Flat Panel TV

9

E E<sub>1</sub> x2  
E E<sub>2</sub> x2  
E E<sub>3</sub> x2  
E E<sub>4</sub> x2



Important: Lock your TV before using

