 




## ASSEMBLY INSTRUCTIONS

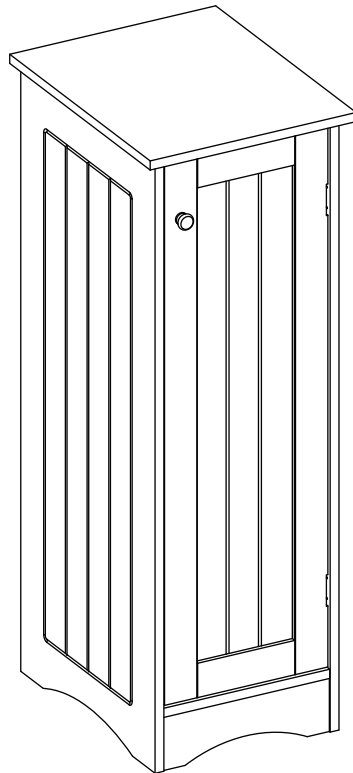

### RiverRidge® Ashland Slim Single Door Cabinet

ITEM #: 06-143 White

#### **ADULT ASSEMBLY REQUIRED**

This product requires assembly by an adult because of small parts. Care should be taken in unpacking and assembling this item to keep small parts away from children. During assembly children should be kept away from the product due to possible risk of injury.

#### **WARNING SEE FULL WARNING ON PAGE 2**

Young children can be seriously injured or killed if furniture tips over.  
Don't use this item for a TV stand or place heavy objects on top of item.  
Always use angle-braces or anchors to secure furniture to the wall.

**THIS CABINET WILL HOLD UP TO 12 POUNDS PER SHELF OR A TOTAL OF 48 POUNDS. DO NOT LOAD EACH SHELF WITH MORE THAN 12 POUNDS. LOADING WITH MORE THAN 12 POUNDS PER SHELF MAY CAUSE DAMAGE TO THE CABINET OR CAUSE SERIOUS INJURY OR DEATH.**

 


# **WARNING**

**SERIOUS OR FATAL INJURIES CAN OCCUR FROM FURNITURE TIP-OVER. TO HELP PREVENT TIP-OVER:**

 



 
 

 
 
 
 


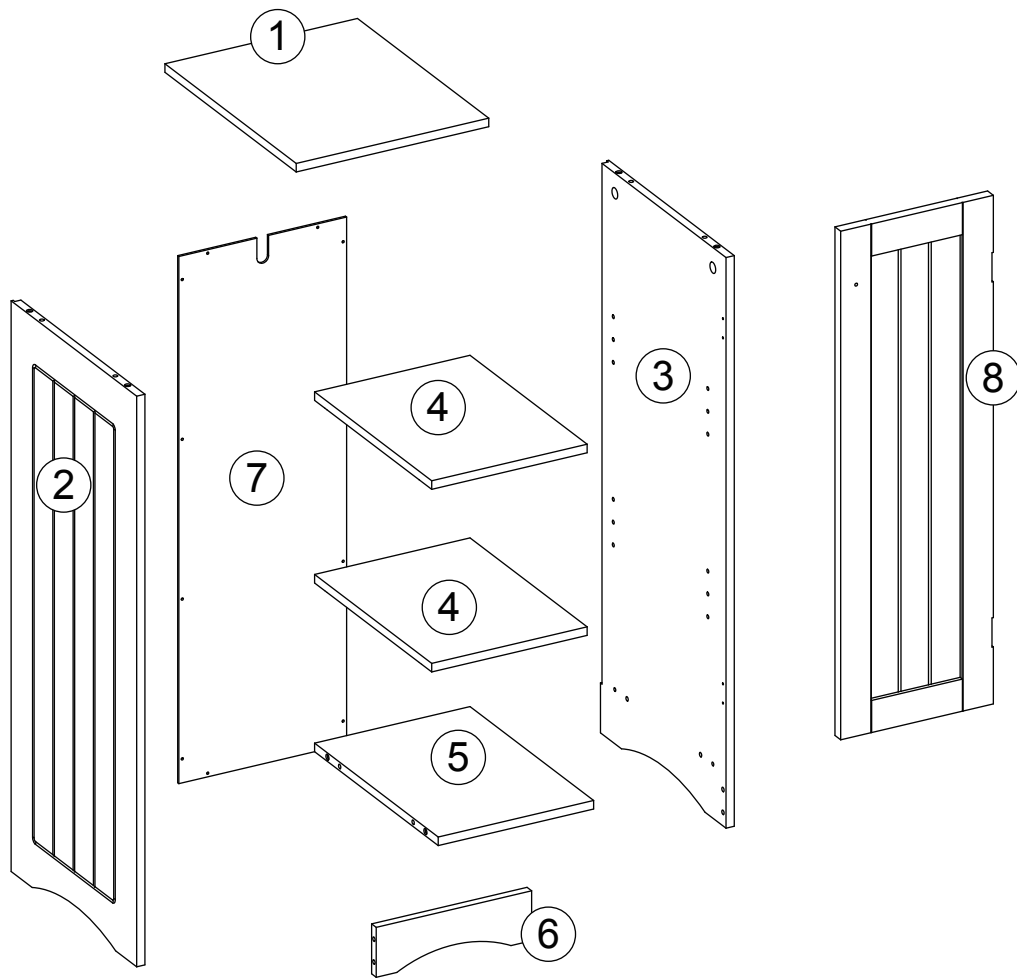

- **Always use tip over restraints and/or wall anchors to secure furniture to the wall**
- **Place heaviest items in the lowest drawers/bins or shelves**
- **Do not set TV's or other heavy objects on the top of this product**
- **Never allow children to climb or hang on to the drawers/bins, doors or shelves of furniture**
- **Never open more than one drawer at a time or defeat or remove any drawer interlock system**

# PARTS LIST



 NO	QTY	DESCRIPTION
1	1PC	Top Board
2	1PC	Left Side Panel
3	1PC	Right Side Panel
4	2PCS	Adjustable Shelf
5	1PC	Bottom Board
6	1PC	Lower Cross Bar
7	1PC	Back Board
8	1PC	Door


# PARTS LIST

NO	PARTS	QTY	DESCRIPTION
A		8PCS	Cam Bolt
B		8PCS	Cam Lock
C		12PCS	Wood Dowel
D		1 SET	Magnet with 2 Screws
E		2PCS	Hinge
F		1PC	Machine Screw (4x18mm)
G		1PC	Knob
H		1PC	Screw(4x10mm)
I		1PC	Magnet Plate
J		8PCS	Shelf Holder
K		1PC	Screw (4x30mm)
L		9PCS	Screw (3x12mm)
M		12PCS	Screw (2.5x10mm)
N		1PC	Adjustable Anchor Bracket
O		1PC	Plastic Anchor

**TOOLS NEEDED FOR ASSEMBLY: FLAT & PHILLIPS SCREWDRIVER (NOT INCLUDED)**  
**THE USE OF A POWER SCREWDRIVER IS NOT RECOMMENDED FOR ASSEMBLY**  
**DO NOT USE ITEM IF ANY PARTS ARE MISSING OR DAMAGED**


To order replacement parts at no cost to you, email [customer.service@ssi-rr.com](mailto:customer.service@ssi-rr.com), call 1-(844)-223-5201 or order parts online at [www.riverridgehome.com](http://www.riverridgehome.com). Only valid in the United States.  
 If purchased outside of the United States, please contact retailer where purchased.

## STEP 1

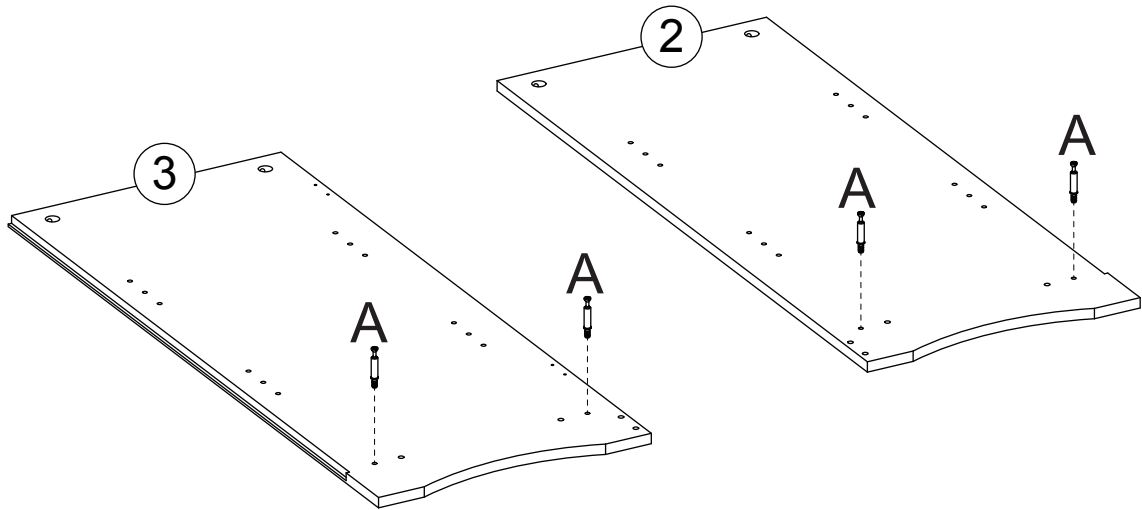 




1. Screw 2 cam bolts (A) into cam bolt holes on left side panel (2).
2. Screw 2 cam bolts (A) into cam bolt holes on right side panel (3).

## STEP 2

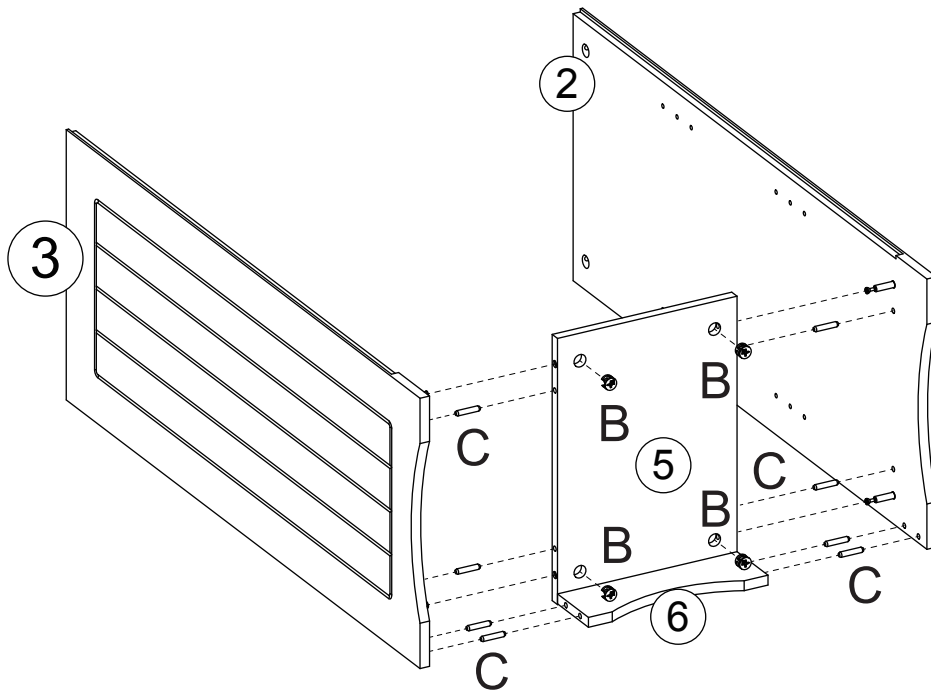 


1. Insert 4 wood dowels (C) into wood dowel holes on left side panel (2).
2. Attach bottom board (5) and lower cross bar (6) to left side panel (2) by inserting cam bolts (A) into cam lock holes and wood dowels (C) into wood dowel holes on bottom board (5) and lower cross bar (6).
3. Insert 2 cam locks (B) into cam lock holes on bottom board (5), then rotate clockwise to secure cam bolts (A) in place.
4. Insert 4 wood dowels (C) into wood dowel holes on right side panel (3).
5. Attach right side panel (3) to bottom board (5) and lower cross bar (6) by inserting cam bolts (A) into cam lock holes and inserting wood dowels (C) into wood dowel holes on bottom board (5) and lower cross bar (6).
6. Insert 2 cam locks (B) into cam lock holes on bottom board (5), then rotate clockwise to secure cam bolts (A) in place.

## STEP 3

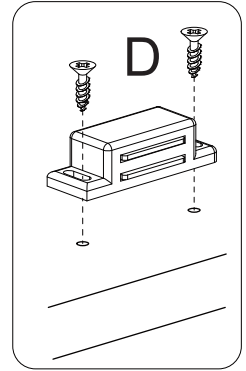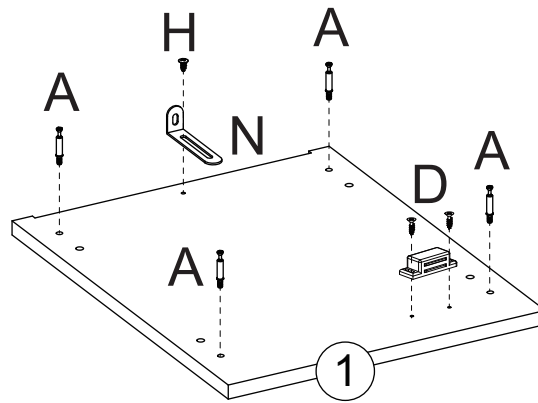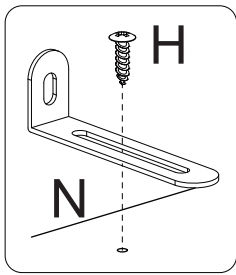   


1. Screw 4 cam bolts (A) into cam bolt holes on top board (1).
2. Attach adjustable anchor bracket (N) to top board (1) by inserting 1 screw (H) through hole on adjustable anchor bracket (N), then tighten to top board (1).
3. Attach magnet (D) to top board (1) by inserting 2 screws through holes on magnet (D), then tighten to top board (1).

## STEP 4

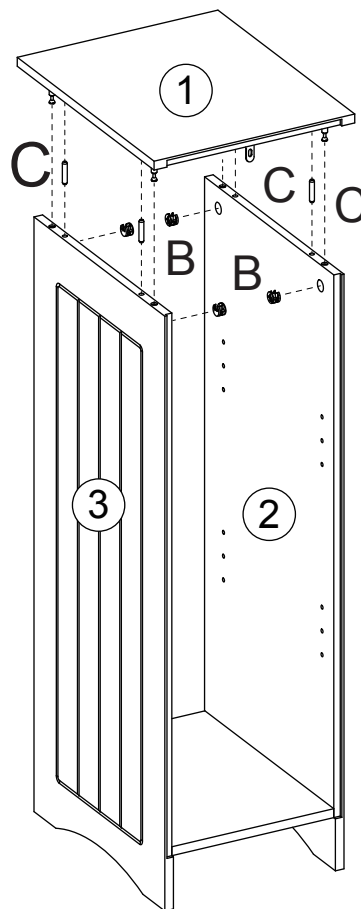 


1. Insert 4 wood dowels (C) into wood dowel holes on top board (1).
2. Attach top board (1) to left side panel (2) and right side panel (3) by inserting wood dowel (C) into wood dowel holes and cam bolts (A) into cam lock holes on left side panel (2) and right side panel (3).
3. Insert 4 cam locks (B) into cam lock holes on left side panel (2) and right side panel (3), then rotate clockwise to secure cam bolts (A) in place.

## STEP 5

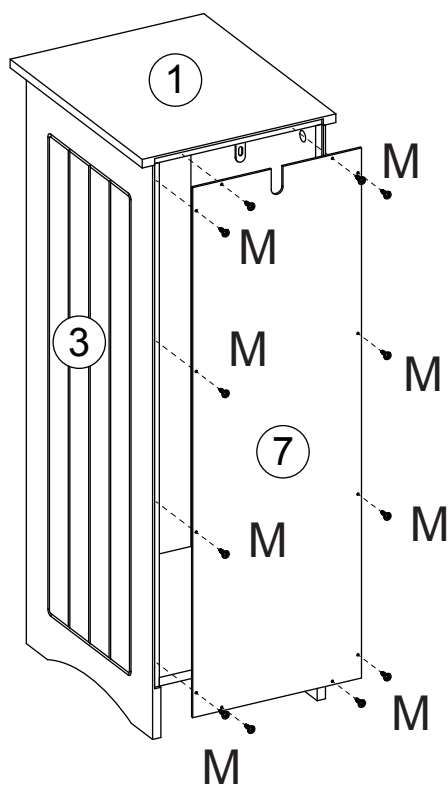 




1. Attach back board (7) to back of cabinet by inserting 12 screws (M) through holes on back board (7), then tighten to back of cabinet.

## STEP 6

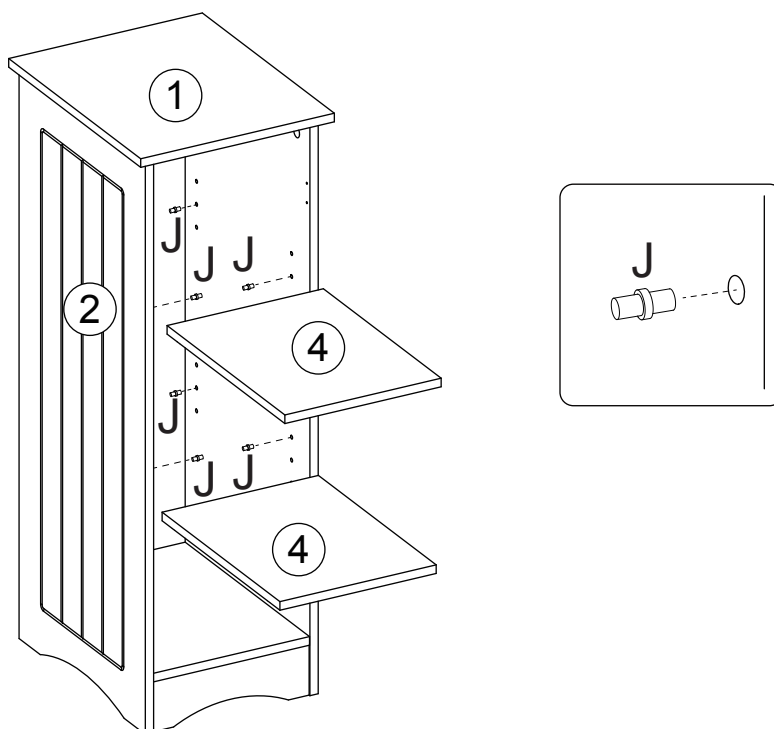 



1. Insert 8 shelf holders (J) into holes on left side panel (2) and right side panel (3), making sure all 4 shelf holders are at same level.
2. Place adjustable shelves (4) onto shelf holders (J).

## STEP 7

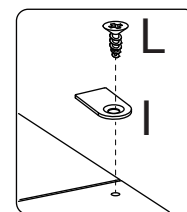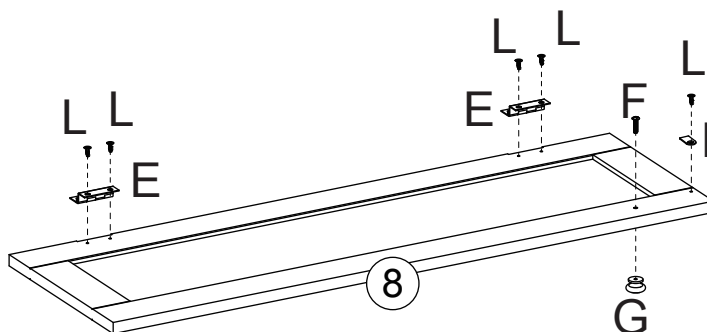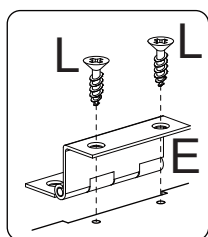   

1. Attach 2 hinges (E) to door (8) by inserting 4 screws (L) through holes on hinges (E), then tighten to door (8).
2. Attach magnet plate (I) to door (8) by inserting 1 screw (L) through hole on magnet plate (I), then tighten to door (8).
3. Attach knob (G) to door (8) by inserting 1 machine screw (F) through hole on door (8), then tighten to knob (G).


## STEP 8

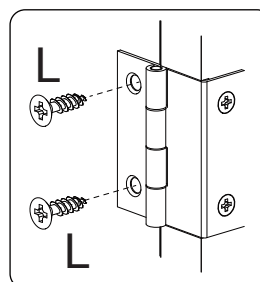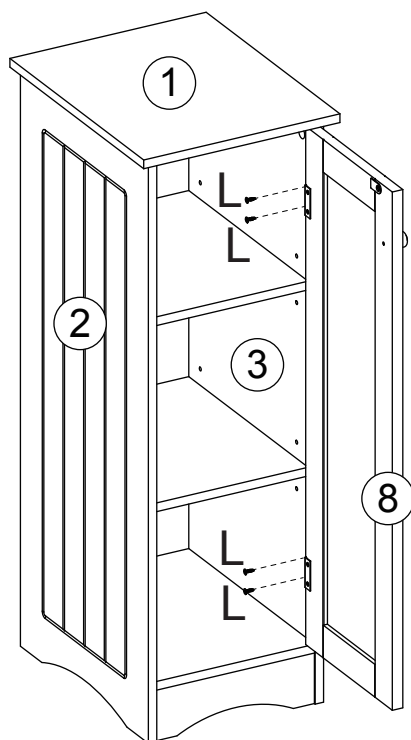  

1. Attach door (8) to right side panel (3) by inserting 4 screws (L) through holes on hinges (E), then tighten to right side panel (3).



## STEP 9

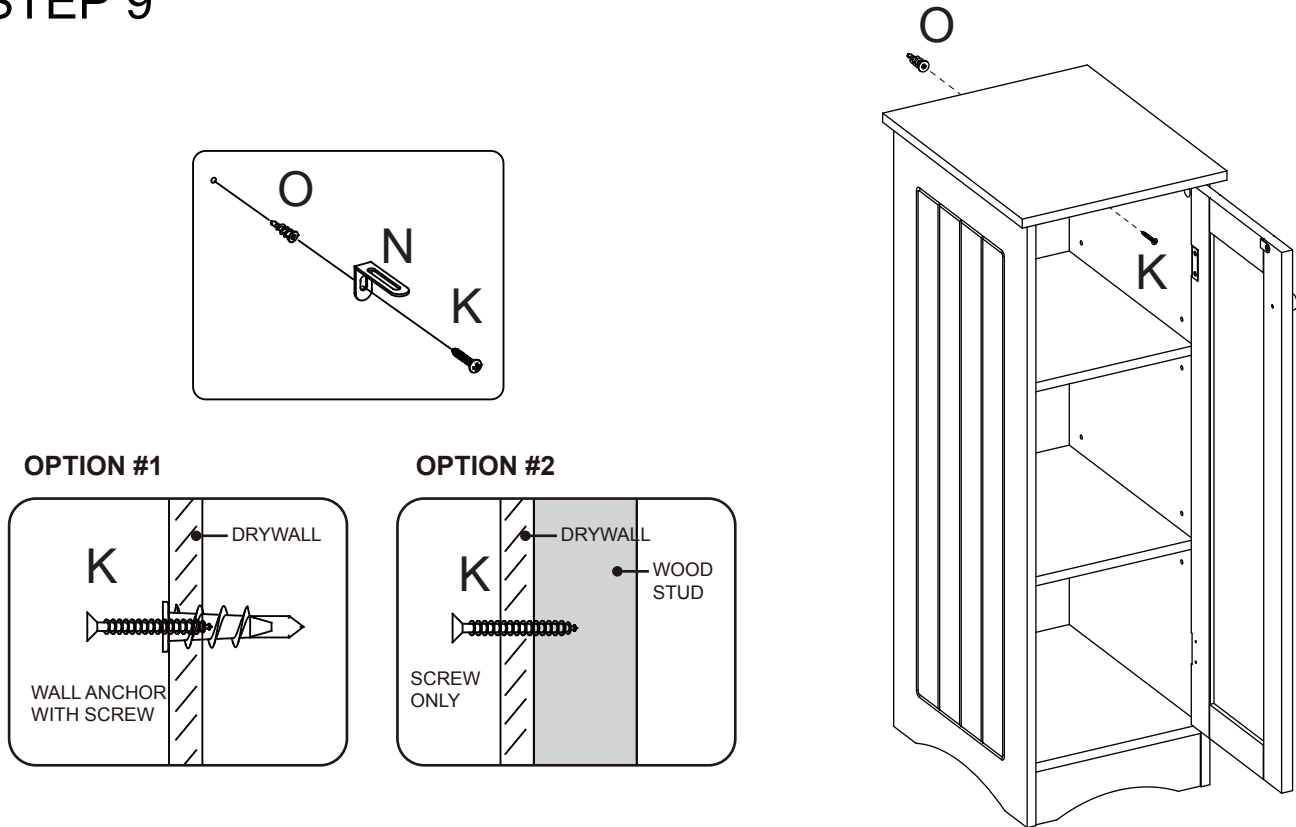 

### Option #1: Securing to Drywall

1. Position cabinet against wall in desired location. Using a pencil, make 1 small mark on wall through hole on bracket (N). Move cabinet away from wall and screw 1 plastic anchor (O) into wall on pencil mark.
2. Place cabinet against wall, insert 1 screw (K) through hole on bracket (N), then tighten to plastic anchor (O).

### Option #2: Securing to Drywall and Wood Stud

1. Position cabinet against wall in desired location. Insert 1 screw (K) through hole on bracket (N), then tighten through drywall and into wood stud.

\*Tip: Anchor bracket (N) can be adjusted to correct distance from wall to cabinet as needed. Once adjusted, be sure to re-tighten bracket inside cabinet for stability.

ATTENTION ADULTS: Cabinet should be checked periodically for damage or loose screws/parts. Take appropriate action necessary to correct hazards such as tightening of screws and taking any damaged parts away from children.

**WARNING**  **Please make sure your item is secured to the wall, per assembly instructions.**

 
#### CARE INSTRUCTIONS:

Wipe clean with a water dampened cloth. Wipe dry with clean cloth.

### IMPORTANT:

**Keep assembly instructions for future reference.**

**Enjoy your new RiverRidge® Cabinet!**

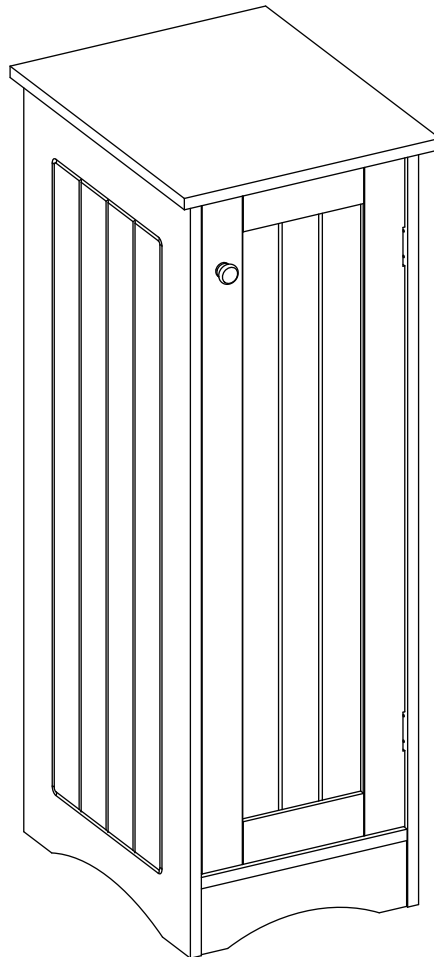

Thank you for purchasing this RiverRidge® Home item. We hope you enjoy it and consider purchasing other RiverRidge® items.

To order replacement parts at no cost to you, email [customer.service@ssi-rr.com](mailto:customer.service@ssi-rr.com), call 1-(844)-223-5201 or order parts online at [www.riverridgehome.com](http://www.riverridgehome.com). Only valid in the United States. If purchased outside of the United States, please contact retailer where purchased.



RiverRidge® is a registered trademark of Sourcing Solutions, Inc., Hudson, WI 54016