




## ASSEMBLY INSTRUCTIONS

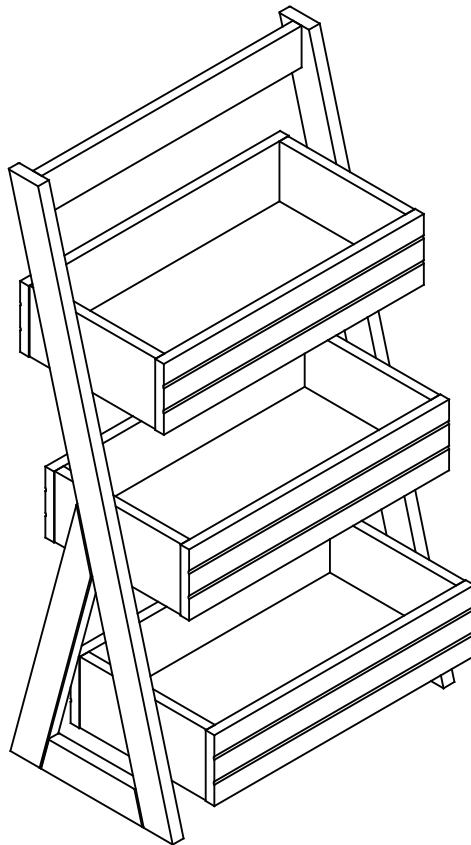

### RiverRidge® 3-Shelf Storage Caddy

ITEM #: 06-144 White

#### **ADULT ASSEMBLY REQUIRED**

This product requires assembly by an adult because of small parts. Care should be taken in unpacking and assembling this item to keep small parts away from children. During assembly children should be kept away from the product due to possible risk of injury.

#### **WARNING SEE FULL WARNING ON PAGE 2**

Young children can be seriously injured or killed if furniture tips over.  
Don't use this item for a TV stand or place heavy objects on top of item.  
Always use angle-braces or anchors to secure furniture to the wall.

THIS SHELF UNIT WILL HOLD UP TO 10 POUNDS PER SHELF OR A TOTAL OF 30 POUNDS. DO NOT LOAD EACH SHELF WITH MORE THAN 10 POUNDS OR 30 POUNDS TOTAL WEIGHT. IF OVERLOADED WITH MORE THAN 10 POUNDS PER SHELF OR 30 POUNDS TOTAL WEIGHT, SHELF MAY TIP FROM THE WALL AND CAUSE SERIOUS INJURY OR DEATH.




# **WARNING**

**SERIOUS OR FATAL INJURIES CAN  
OCCUR FROM FURNITURE TIP-OVER.  
TO HELP PREVENT TIP-OVER:**






- **Always use tip over restraints and/or wall anchors to secure furniture to the wall**
- **Place heaviest items in the lowest drawers/bins or shelves**
- **Do not set TV's or other heavy objects on the top of this product**
- **Never allow children to climb or hang on to the drawers/bins, doors or shelves of furniture**
- **Never open more than one drawer at a time or defeat or remove any drawer interlock system**
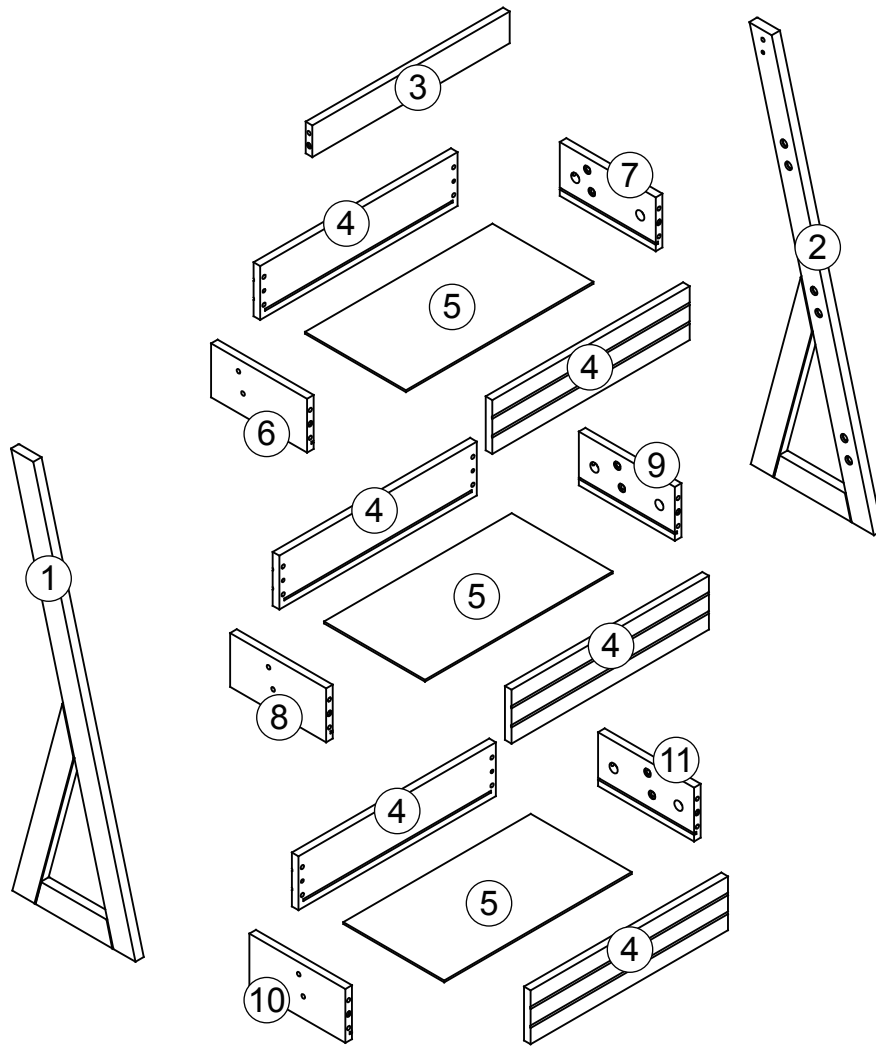
# PARTS LIST



NO	QTY	DESCRIPTION
1	1PC	Left Side Frame
2	1PC	Right Side Frame
3	1PC	Cross Bar
4	6PCS	Front & Back Panel
5	3PCS	Bottom Board
6	1PC	Upper Left Side Panel
7	1PC	Upper Right Side Panel
8	1PC	Middle Left Side Panel
9	1PC	Middle Right Side Panel
10	1PC	Bottom Left Side Panel
11	1PC	Bottom Right Side Panel

 
# PARTS LIST

 NO	PARTS	QTY	DESCRIPTION
A		14PCS	Cam Bolt
B		14PCS	Cam Lock
C		26PCS	Wood Dowel
D		12PCS	Machine Screw (6x20mm)
E		1PC	Allen Wrench

**TOOLS NEEDED FOR ASSEMBLY: FLAT & PHILLIPS SCREWDRIVER (NOT INCLUDED)  
THE USE OF A POWER SCREWDRIVER IS NOT RECOMMENDED FOR ASSEMBLY  
DO NOT USE ITEM IF ANY PARTS ARE MISSING OR DAMAGED**


To order replacement parts at no cost to you, email [customer.service@ssi-rr.com](mailto:customer.service@ssi-rr.com), call 1-(844)-223-5201 or order parts online at [www.riverridgehome.com](http://www.riverridgehome.com). Only valid in the United States.  
If purchased outside of the United States, please contact retailer where purchased.

## STEP 1

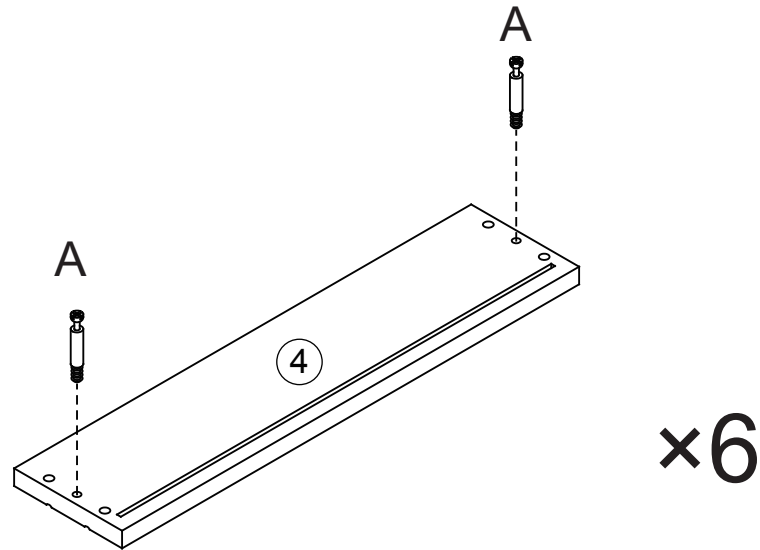


1. Screw 2 cam bolts (A) into holes on front panel (4).
2. Repeat above step to assemble another 2 front panels (4) and 3 back panels (4).

## STEP 2

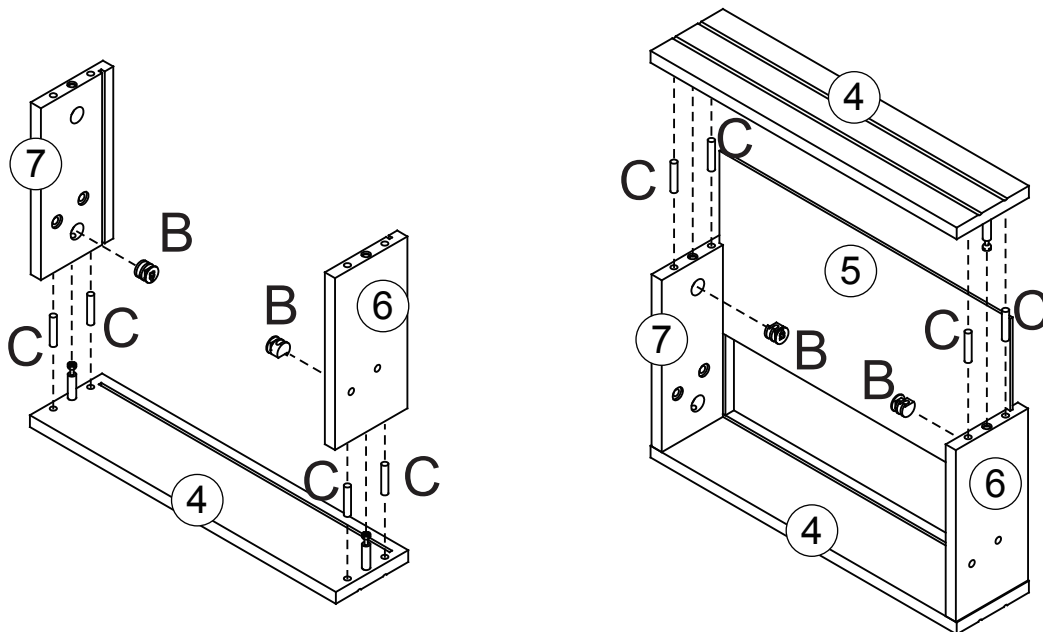


1. Insert 4 wood dowels (C) into wood dowel holes on front panel (4).
2. Attach upper left side panel (6) and upper right side panel (7) to front panel (4) by inserting wood dowels (C) into wood dowel holes and cam bolts (A) into cam bolt holes on upper left side panel (6) and upper right side panel (7).
3. Insert 4 cam locks (B) into cam lock holes on upper left side panel (6) and upper right side panel (7), then rotate clockwise to secure cam bolts (A) in place.
4. Slide bottom board (5) into grooves on upper left side panel (6), upper right side panel (7) and front panel (4).
5. Insert 4 wood dowels (C) into wood dowel holes on upper left side panel (6) and upper right side panel (7).
6. Attach back panel (4) to upper left side panel (6), upper right side panel (7) and bottom board (5) by inserting wood dowels (C) into wood dowel holes on back panel (4) and cam bolts (A) into cam bolt holes on upper left side panel (6) and upper right side panel (7).
7. Insert 4 cam locks (B) into cam lock holes on upper left side panel (6) and upper right side panel (7), then rotate clockwise to secure cam bolts (A) in place.

## STEP 3

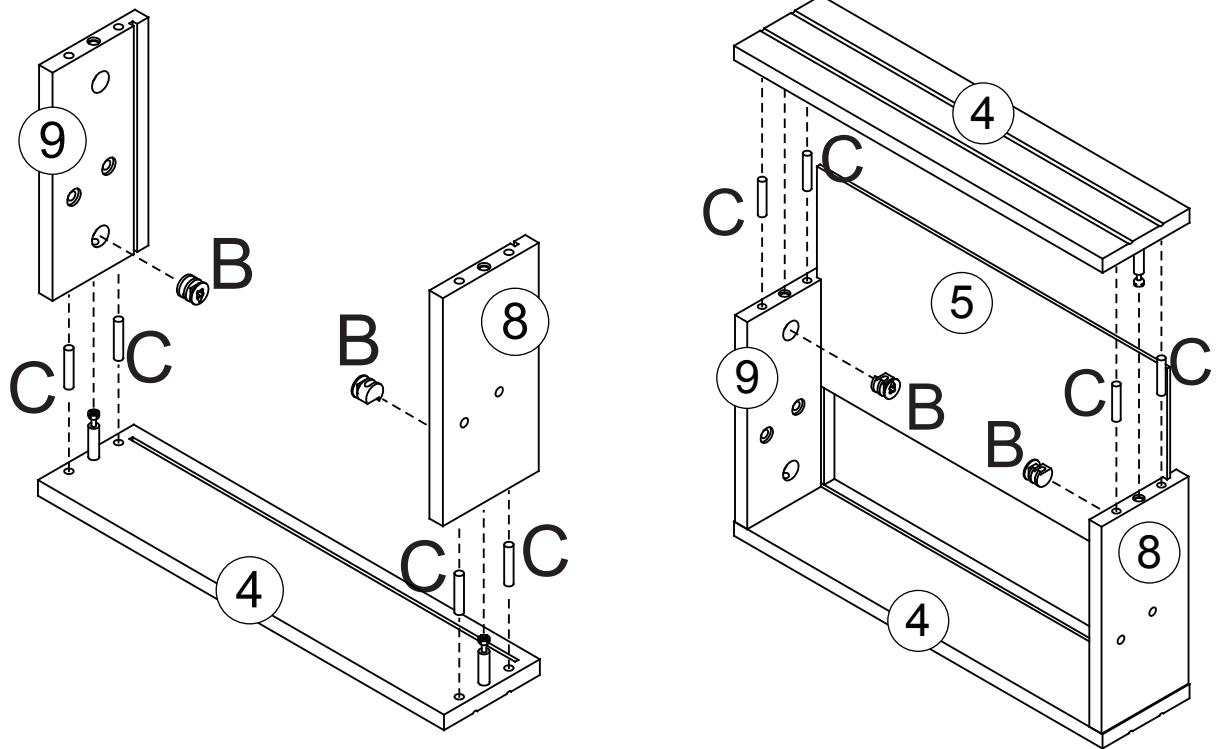


1. Insert 4 wood dowels (C) into wood dowel holes on front panel (4).
2. Attach middle left side panel (8) and middle right side panel (9) to front panel (4) by inserting wood dowels (C) into wood dowel holes and cam bolts (A) into cam bolt holes on middle left side panel (8) and middle right side panel (9).
3. Insert 4 cam locks (B) into cam lock holes on middle left side panel (8) and middle right side panel (9), then rotate clockwise to secure cam bolts (A) in place.
4. Slide bottom board (5) into grooves on middle left side panel (8), middle right side panel (9) and front panel (4).
5. Insert 4 wood dowels (C) into wood dowel holes on middle left side panel (8) and middle right side panel (9).
6. Attach back panel (4) to middle left side panel (8), middle right side panel (9) and bottom board (5) by inserting wood dowels (C) into wood dowel holes on back panel (4) and cam bolts (A) into cam bolt holes on middle left side panel (8) and middle right side panel (9).
7. Insert 4 cam locks (B) into cam lock holes on middle left side panel (8) and middle right side panel (9), then rotate clockwise to secure cam bolts (A) in place.

## STEP 4

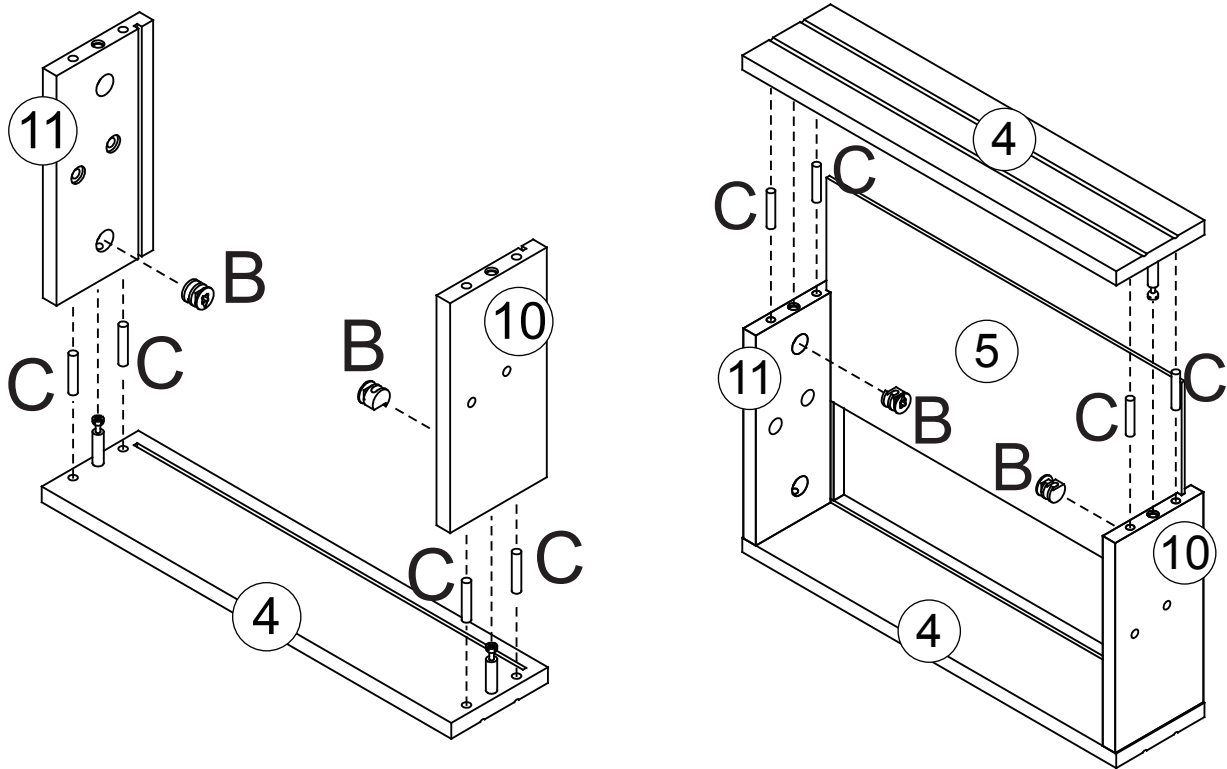


1. Insert 4 wood dowels (C) into wood dowel holes on front panel (4).
2. Attach bottom left side panel (10) and bottom right side panel (11) to front panel (4) by inserting wood dowels (C) into wood dowel holes and cam bolts (A) into cam bolt holes on bottom left side panel (10) and bottom right side panel (11).
3. Insert 4 cam locks (B) into cam lock holes on bottom left side panel (10) and bottom right side panel (11), then rotate clockwise to secure cam bolts (A) in place.
4. Slide bottom board (5) into grooves on bottom left side panel (10), bottom right side panel (11) and front panel (4).
5. Insert 4 wood dowels (C) into wood dowel holes on bottom left side panel (10) and bottom right side panel (11).
6. Attach back panel (4) to bottom left side panel (10), bottom right side panel (11) and bottom board (5) by inserting wood dowels (C) into wood dowel holes on back panel (4) and cam bolts (A) into cam bolt holes on bottom left side panel (10) and bottom right side panel (11).
7. Insert 4 cam locks (B) into cam lock holes on bottom left side panel (10) and bottom right side panel (11), then rotate clockwise to secure cam bolts (A) in place.

## STEP 5

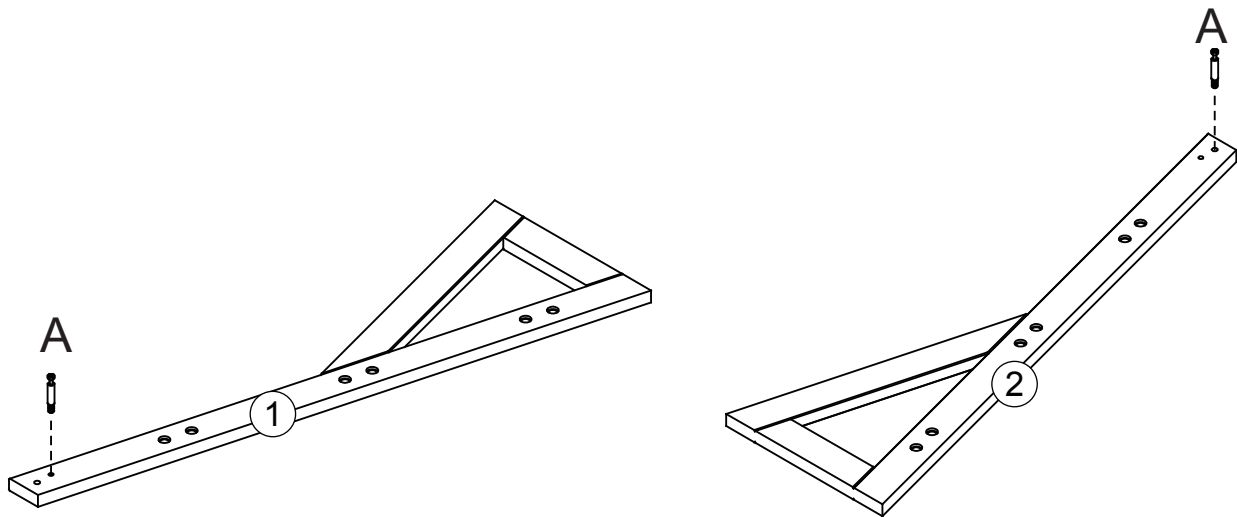

1. Screw 1 cam bolts (A) into hole on left side frame (1).
2. Screw 1 cam bolt (A) into hole on right side frame (2).


## STEP 6

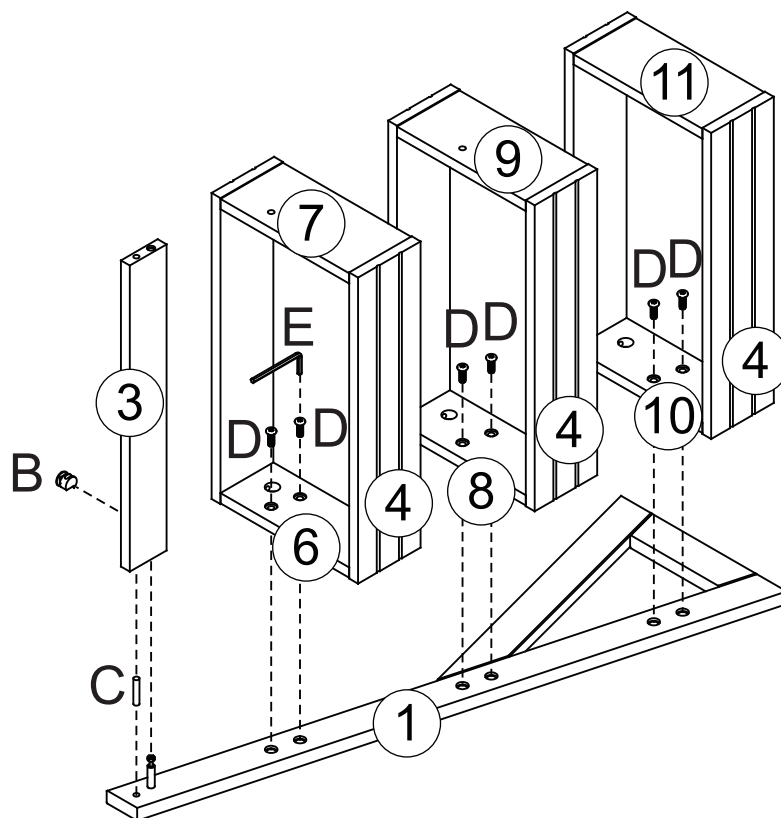

1. Insert 1 wood dowel (C) into wood dowel hole on left side frame (1).
2. Attach cross bar (3) to left side frame (1) by inserting wood dowel (C) into wood dowel hole and cam bolt (A) into cam bolt hole on cross bar (3).
3. Insert 1 cam lock (B) into cam lock hole on cross bar (3), then rotate clockwise to secure cam bolt (A) in place.
4. Attach 3 assembled caddies to left side frame (1) by inserting 6 machine screws (D) through holes on 3 caddies, then tighten to left side frame (1) with Allen wrench (E).



## STEP 7

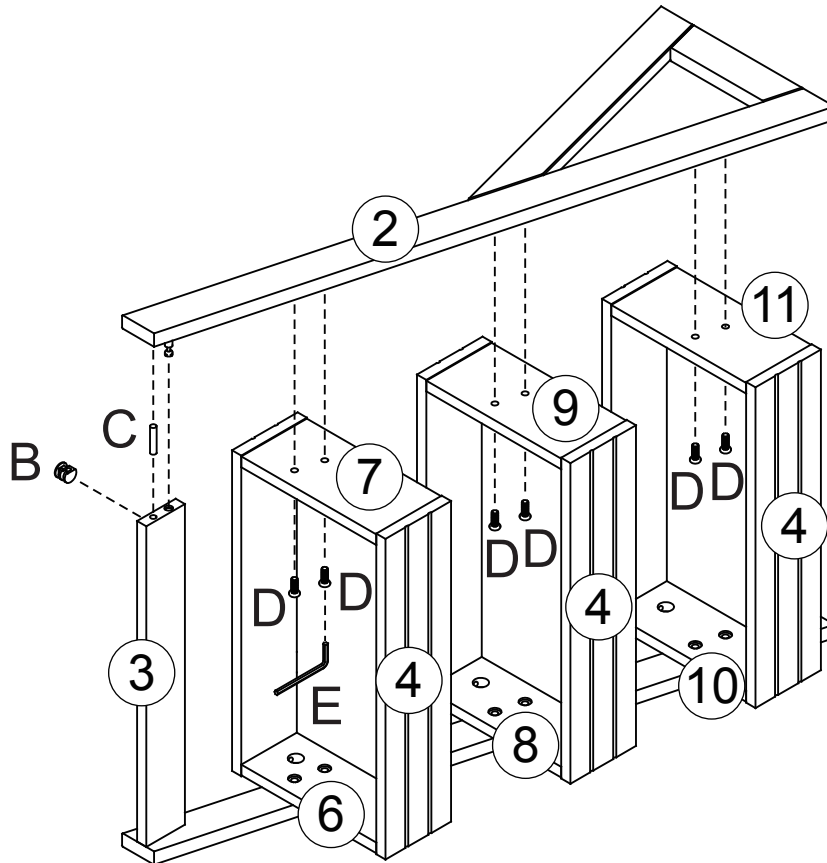

1. Insert 1 wood dowel (C) into wood dowel hole on right side frame (2).
2. Attach cross bar (3) to right side frame (2) by inserting wood dowel (C) into wood dowel hole and cam bolt (A) into cam bolt hole on cross bar (3).
3. Insert 1 cam lock (B) into cam lock hole on cross bar (3), then rotate clockwise to secure cam bolt (A) in place.
4. Attach right side frame (2) to 3 assembled caddies by inserting 6 machine screws (D) through holes on 3 caddies, then tighten to right side frame (2) with Allen wrench (E).

ATTENTION ADULTS: Cabinet should be checked periodically for damage or loose screws/parts. Take appropriate action necessary to correct hazards such as tightening of screws and taking any damaged parts away from children.

**WARNING**  **Please make sure your item is secured to the wall, per assembly instructions.**


### CARE INSTRUCTIONS:

Wipe clean with a water dampened cloth. Wipe dry with clean cloth.

### IMPORTANT:

**Keep assembly instructions for future reference.**

**Enjoy your new RiverRidge® Caddy!**

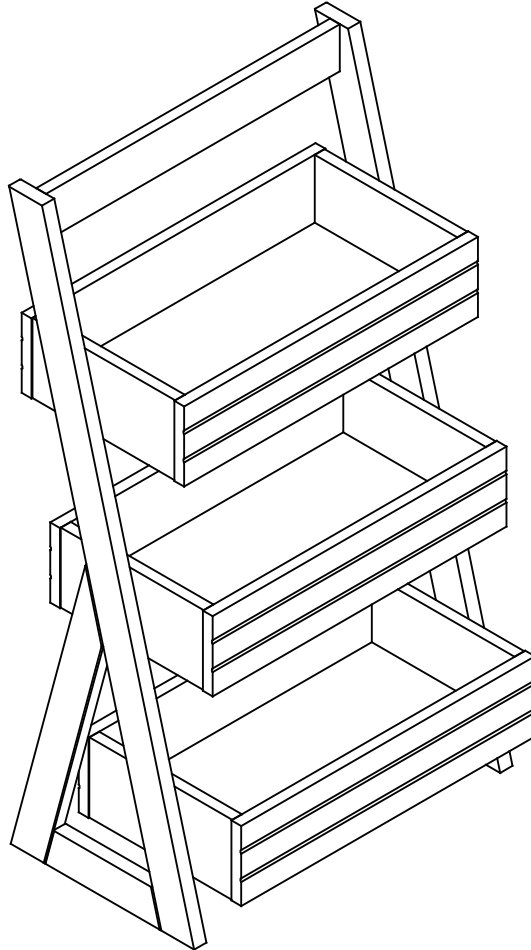

Thank you for purchasing this RiverRidge® Home item. We hope you enjoy it and consider purchasing other RiverRidge® items.

To order replacement parts at no cost to you, email [customer.service@ssi-rr.com](mailto:customer.service@ssi-rr.com), call 1-(844)-223-5201 or order parts online at [www.riverridgehome.com](http://www.riverridgehome.com). Only valid in the United States. If purchased outside of the United States, please contact retailer where purchased.



RiverRidge® is a registered trademark of Sourcing Solutions, Inc., Hudson, WI 54016