 




ASSEMBLY INSTRUCTIONS

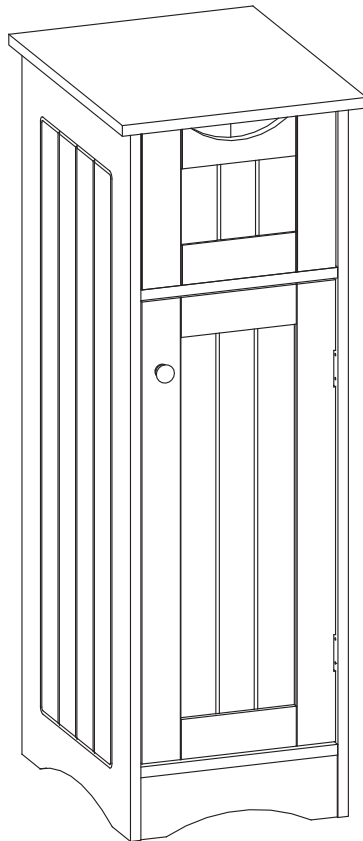

RiverRidge® Ashland Slim Cabinet with Drawer

ITEM #: 06-142 White

ADULT ASSEMBLY REQUIRED

This product requires assembly by an adult because of small parts. Care should be taken in unpacking and assembling this item to keep small parts away from children. During assembly children should be kept away from the product due to possible risk of injury.

WARNING SEE FULL WARNING ON PAGE 2

Young children can be seriously injured or killed if furniture tips over.
Don't use this item for a TV stand or place heavy objects on top of item.
Always use angle-braces or anchors to secure furniture to the wall.

THIS CABINET WILL HOLD UP TO 12 POUNDS PER SHELF AND 10 POUNDS PER DRAWER OR A TOTAL OF 46 POUNDS. DO NOT LOAD EACH SHELF WITH MORE THAN 12 POUNDS OR EACH DRAWER WITH MORE THAN 10 POUNDS. LOADING WITH MORE THAN 12 POUNDS PER SHELF AND 10 POUNDS PER DRAWER MAY CAUSE DAMAGE TO THE CABINET OR CAUSE SERIOUS INJURY OR DEATH.

 


WARNING

**SERIOUS OR FATAL INJURIES CAN
OCCUR FROM FURNITURE TIP-OVER.
TO HELP PREVENT TIP-OVER:**

 

 

 
 

 
 
 
 
 

 

 
 
- **Always use tip over restraints and/or wall anchors to secure furniture to the wall**
- **Place heaviest items in the lowest drawers/bins or shelves**
- **Do not set TV's or other heavy objects on the top of this product**
- **Never allow children to climb or hang on to the drawers/bins, doors or shelves of furniture**
- **Never open more than one drawer at a time or defeat or remove any drawer interlock system**

PARTS LIST

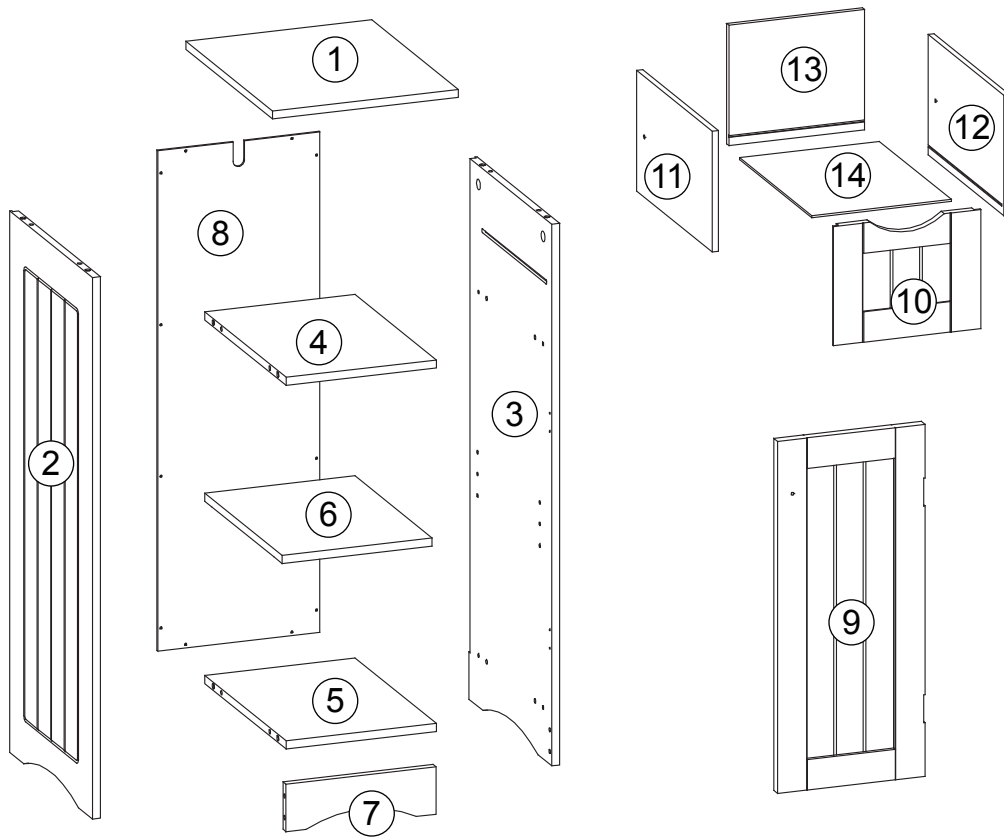

NO	QTY	DESCRIPTION
1	1PC	Top Board
2	1PC	Left Side Panel
3	1PC	Right Side Panel
4	1PC	Shelf
5	1PC	Bottom Board
6	1PC	Adjustable Shelf
7	1PC	Lower Cross Bar
8	1PC	Back Board
9	1PC	Door
10	1PC	Drawer Front Board
11	1PC	Drawer Left Side Panel
12	1PC	Drawer Right Side Panel
13	1PC	Drawer Back Board
14	1PC	Drawer Bottom Board


PARTS LIST

NO	PARTS	QTY	DESCRIPTION
A		12PCS	Cam Bolt
B		12PCS	Cam Lock
C		16PCS	Wood Dowel
D		1 SET	Magnet with 2 Screws
E		2PCS	Hinge
F		1PC	Machine Screw (4x18mm)
G		1PC	Knob
H		1PC	Screw(4x10mm)
I		1PC	Magnet Plate
J		4PCS	Shelf Holder
K		1PC	Screw (4x30mm)
L		9PCS	Screw (3x12mm)
M		12PCS	Screw (2.5x10mm)
N		1PC	Adjustable Anchor Bracket
O		1PC	Plastic Anchor
P		2PCS	Machine Screw (4x15mm)
Q		8PCS	Screw (3.5x25mm)

TOOLS NEEDED FOR ASSEMBLY: FLAT & PHILLIPS SCREWDRIVER (NOT INCLUDED)
THE USE OF A POWER SCREWDRIVER IS NOT RECOMMENDED FOR ASSEMBLY
DO NOT USE ITEM IF ANY PARTS ARE MISSING OR DAMAGED


To order replacement parts at no cost to you, email customer.service@ssi-rr.com, call 1-(844)-223-5201 or order parts online at www.riverridgehome.com. Only valid in the United States.
 If purchased outside of the United States, please contact retailer where purchased.

 STEP 1

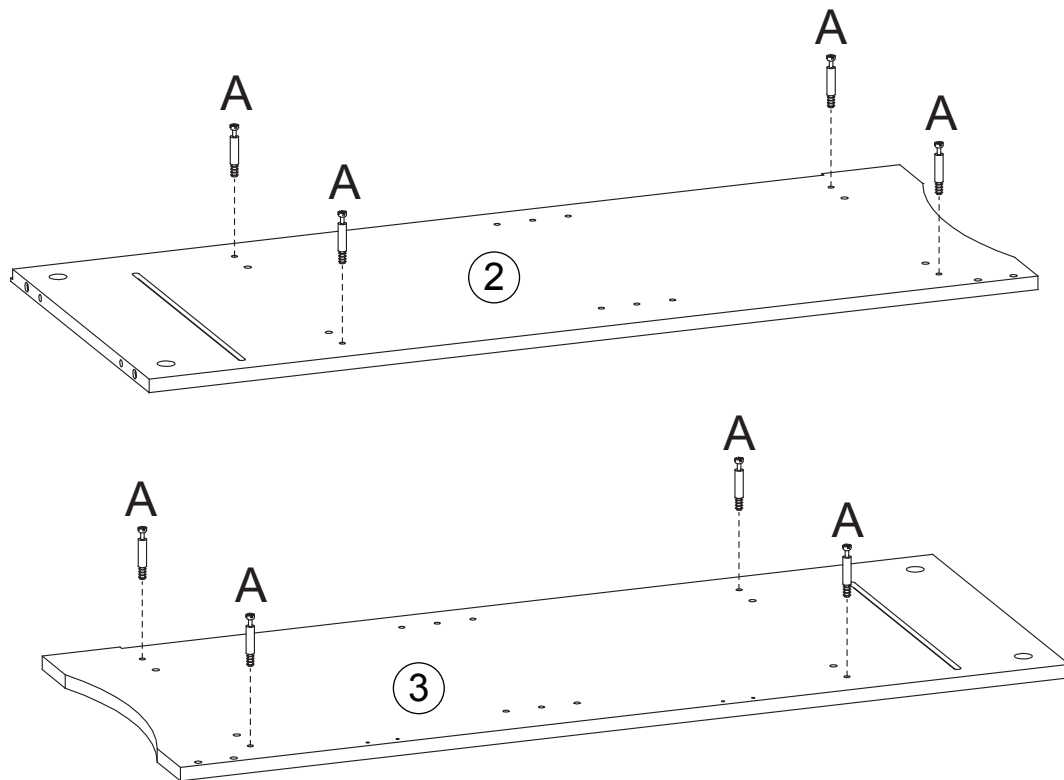


1. Screw 4 cam bolts (A) into cam bolt holes on left side panel (2).
2. Screw 4 cam bolts (A) into cam bolt holes on right side panel (3).

 STEP 2

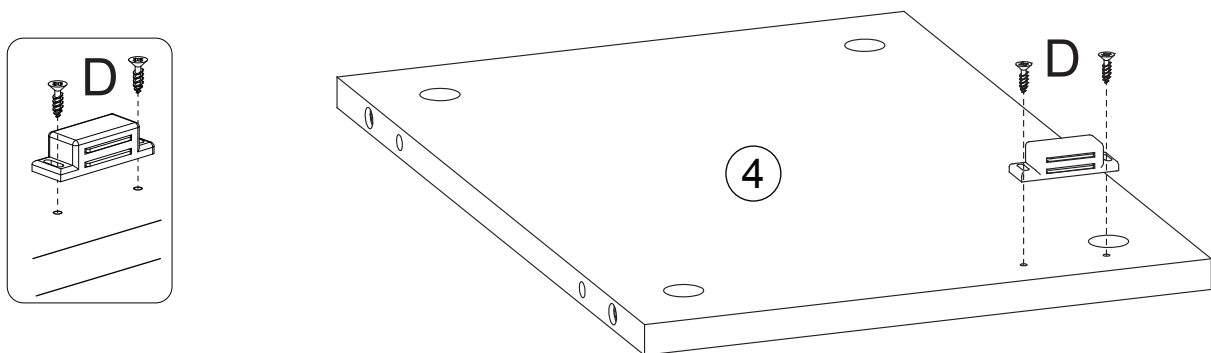


1. Attach magnet (D) to shelf (4) by inserting 2 screws through holes on magnet (D), then tighten to shelf (4).

 STEP 3

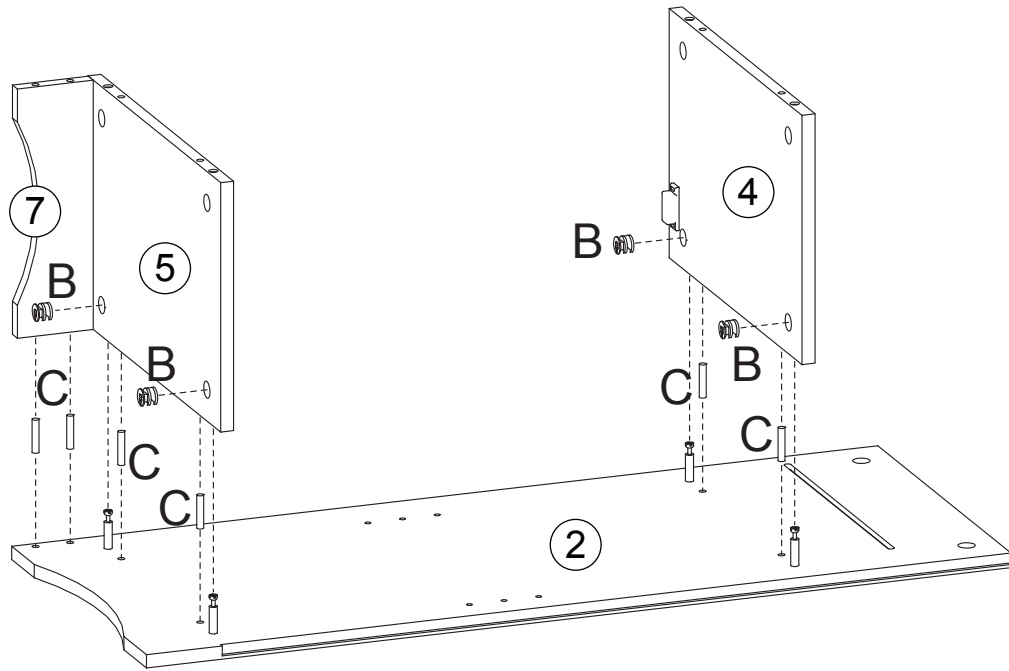


1. Insert 6 wood dowels (C) into wood dowel holes on left side panel (2).
2. Attach shelf (4), bottom board (5) and lower cross bar (7) to left side panel (2) by inserting cam bolts (A) into cam lock holes and inserting wood dowels (C) into wood dowel holes on shelf (4), bottom board (5) and lower cross bar (7).
3. Insert 4 cam locks (B) into cam lock holes on shelf (4) and bottom board (5), then rotate clockwise to secure cam bolts (A) in place.

 STEP 4

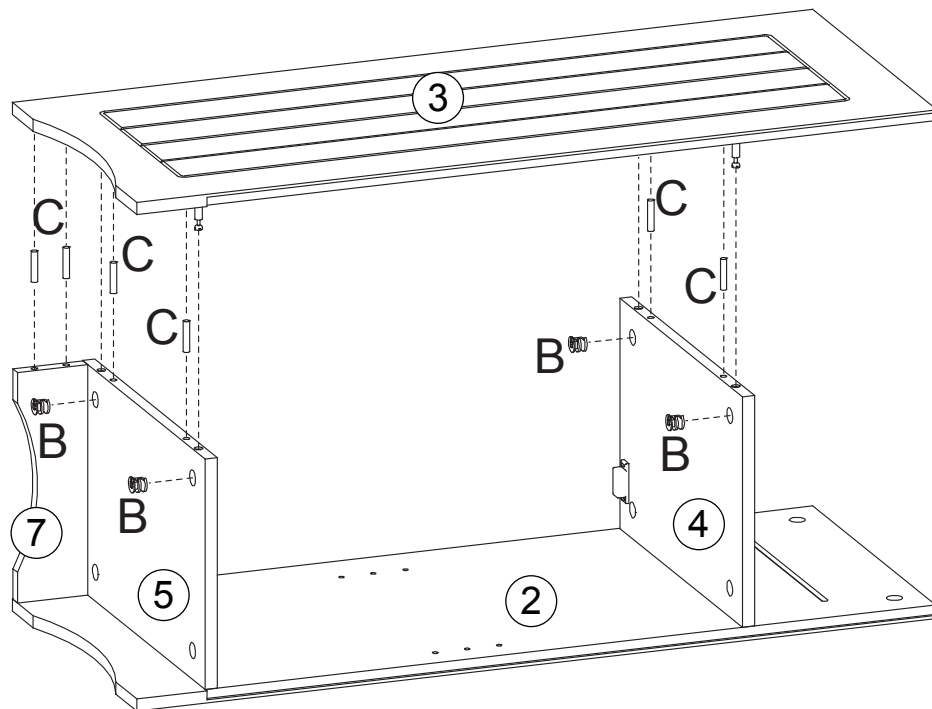


1. Insert 6 wood dowels (C) into wood dowel holes on right side panel (3).
2. Attach right side panel (3) to shelf (4), bottom board (5) and lower cross bar (7) by inserting cam bolts (A) into cam lock holes and inserting wood dowels (C) into wood dowel holes on shelf (4), bottom board (5) and lower cross bar (7).
3. Insert 4 cam locks (B) into cam lock holes on shelf (4) and bottom board (5), then rotate clockwise to secure cam bolts (A) in place.

 STEP 5

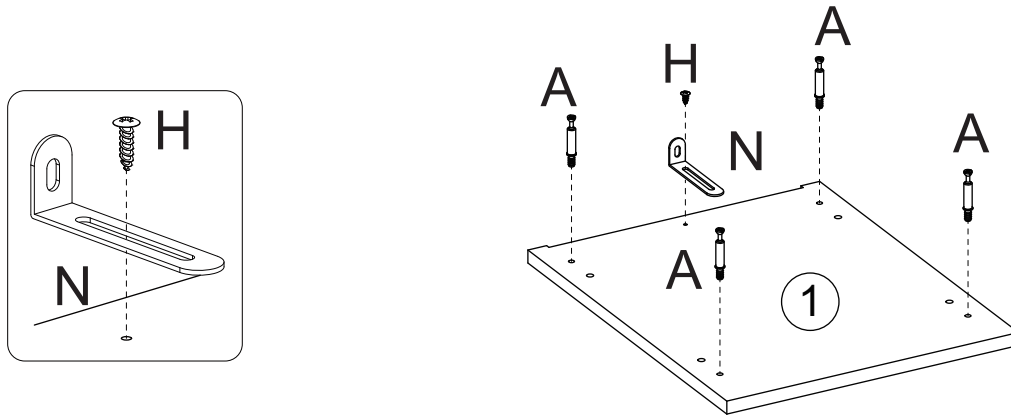


1. Screw 4 cam bolts (A) into cam bolt holes on top board (1).
2. Attach adjustable anchor bracket (N) to top board (1) by inserting 1 screw (H) through hole on adjustable anchor bracket (N), then tighten to top board (1).

 STEP 6

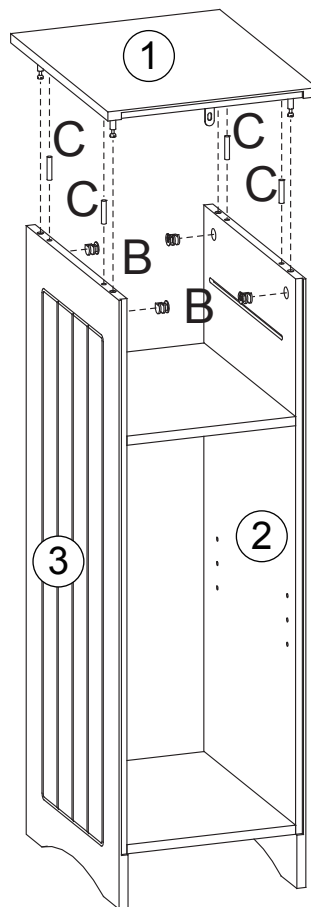



1. Insert 4 wood dowels (C) into wood dowel holes on top board (1).
2. Attach top board (1) to left side panel (2) and right side panel (3) by inserting wood dowel (C) into wood dowel holes and cam bolts (A) into cam lock holes on left side panel (2) and right side panel (3).
3. Insert 4 cam locks (B) into cam lock holes on left side panel (2) and right side panel (3), then rotate clockwise to secure cam bolts (A) in place.

 STEP 7

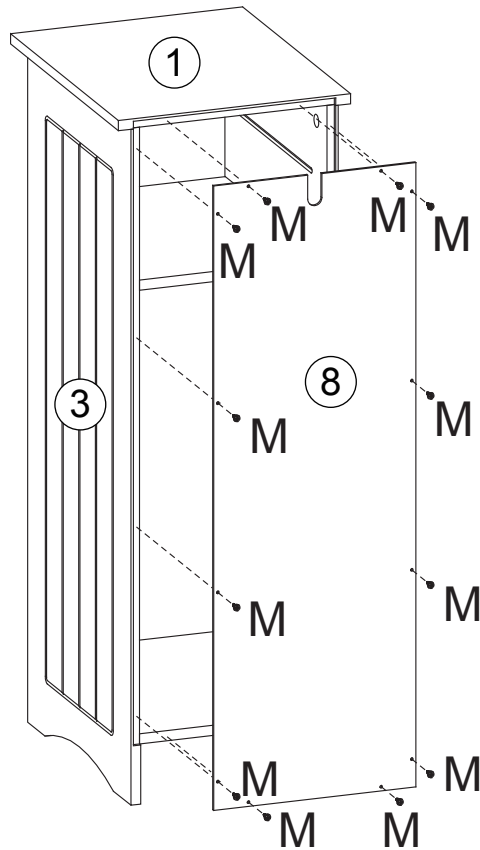





1. Attach back board (8) to back of cabinet by inserting 12 screws (M) through holes on back board (8), then tighten to back of cabinet.

  STEP 8

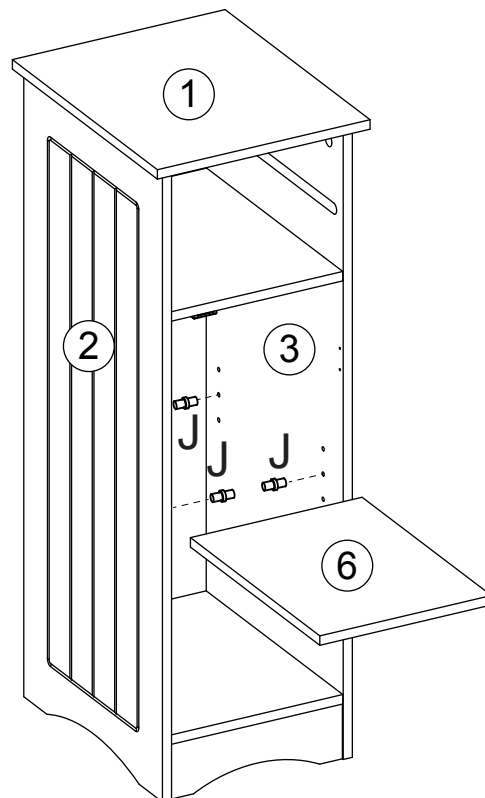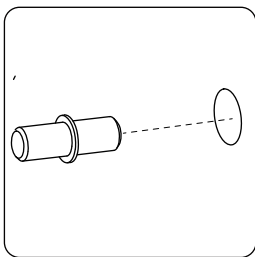



1. Insert 4 shelf holders (J) into holes on left side panel (2) and right side panel (3), making sure all 4 shelf holders are at same level.
2. Place adjustable shelf (6) onto shelf holders (J).

    STEP 9

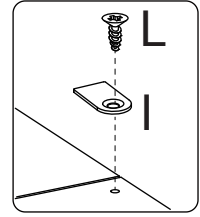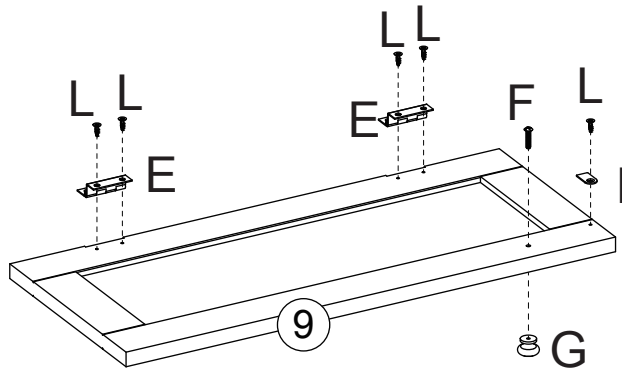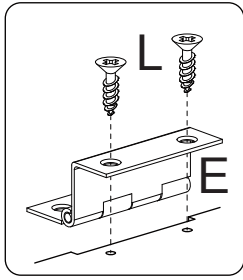


1. Attach 2 hinges (E) to door (9) by inserting 4 screws (L) through holes on hinges (E), then tighten to door (9).
2. Attach magnet plate (I) to door (9) by inserting 1 screw (L) through hole on magnet plate (I), then tighten to door (9).
3. Attach knob (G) to door (9) by inserting 1 machine screw (F) through hole on door (9), then tighten to knob (G).

  STEP 10

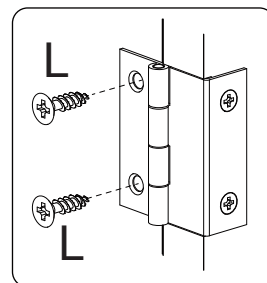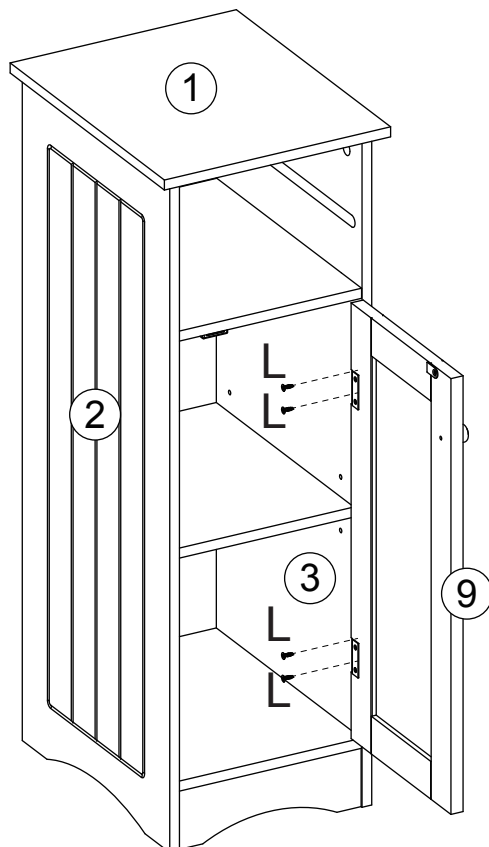


1. Attach door (9) to right side panel (3) by inserting 4 screws (L) through holes on hinges (E), then tighten to right side panel (3).


 
STEP 11

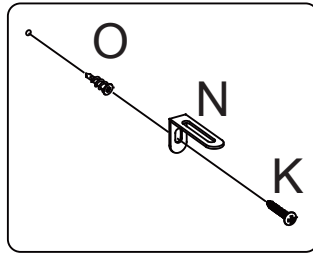

OPTION #1

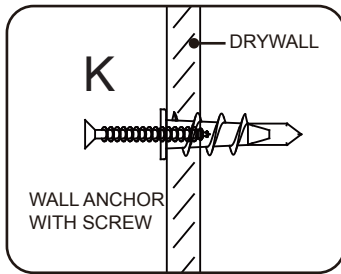 

OPTION #2

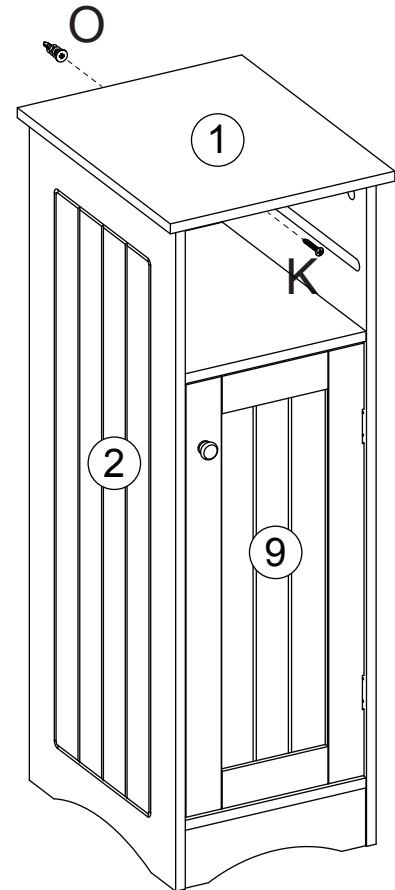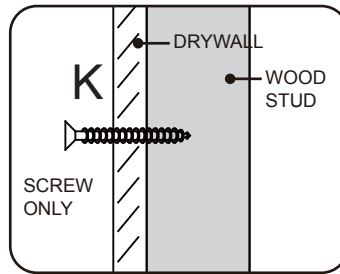  

Option #1: Securing to Drywall

 
1. Position cabinet against wall in desired location. Using a pencil, make 1 small mark on wall through hole on bracket (N). Move cabinet away from wall and screw 1 plastic anchor (O) into wall on pencil mark.
2. Place cabinet against wall, insert 1 screw (K) through hole on bracket (N), then tighten to plastic anchor (O).

Option #2: Securing to Drywall and Wood Stud

1. Position cabinet against wall in desired location. Insert 1 screw (K) through hole on bracket (N), then tighten through drywall and into wood stud.


*Tip: Anchor bracket (N) can be adjusted to correct distance from wall to cabinet as needed. Once adjusted, be sure to re-tighten bracket inside cabinet for stability.

STEP 12

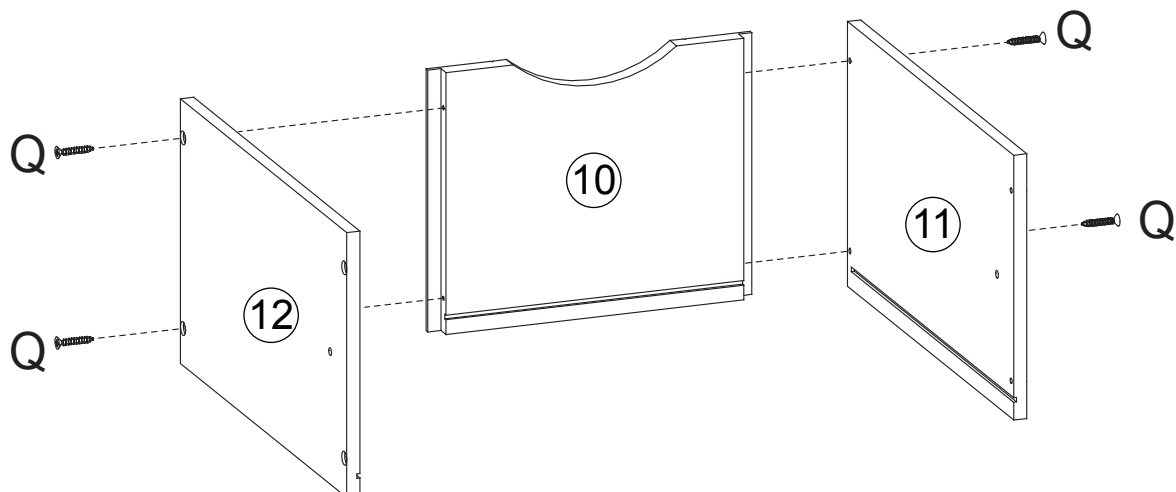



1. Attach drawer left side panel (11) and drawer right side panel (12) to drawer front board (10) by inserting 4 screws (Q) through holes on drawer left side panel (11) and drawer right side panel (12), then tighten to drawer front board (10).

 STEP 13

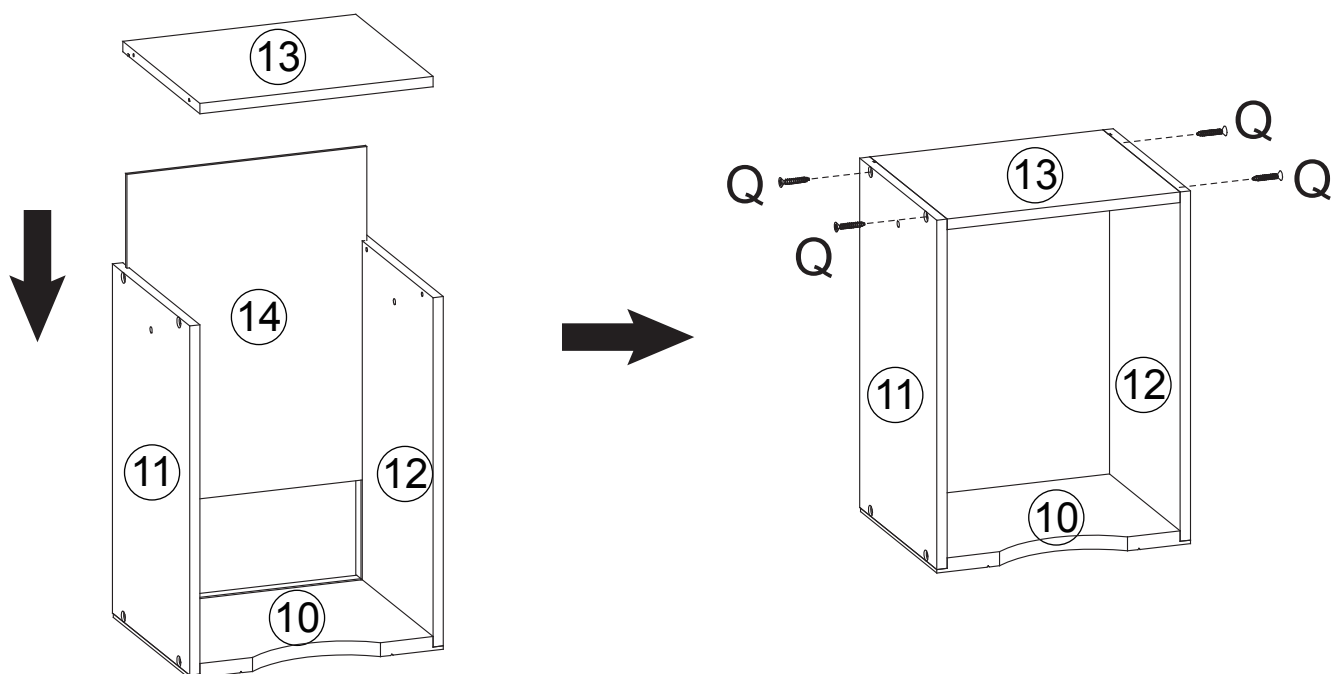

1. Slide drawer bottom board (14) into grooves on drawer left side panel (11), drawer right side panel (12) and drawer front board (10).
2. Attach drawer back board (13) to drawer left side panel (11), drawer right side panel (12) and drawer bottom board (14), making sure drawer bottom board (14) slides into groove on drawer back board (13).
3. Insert 4 screws (Q) through holes on drawer left side panel (11) and drawer right side panel (12), then tighten to drawer back board (13).

  STEP 14

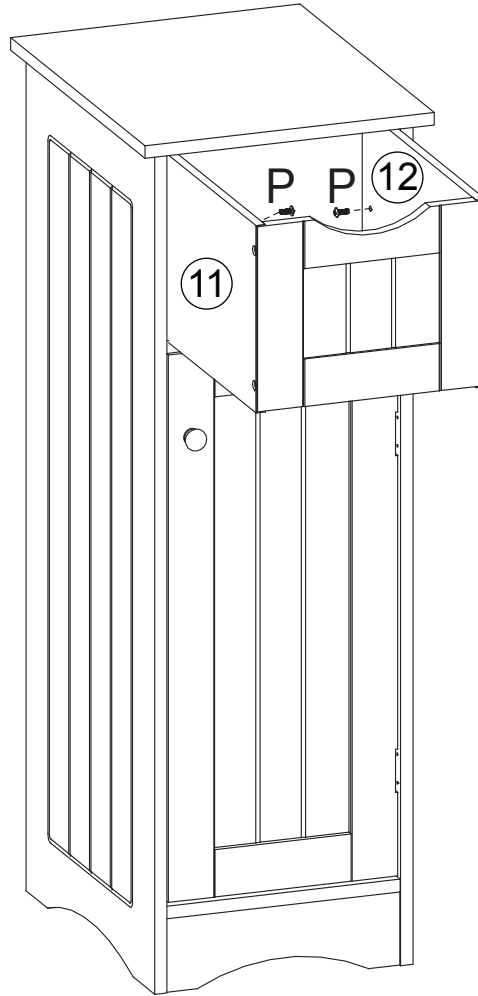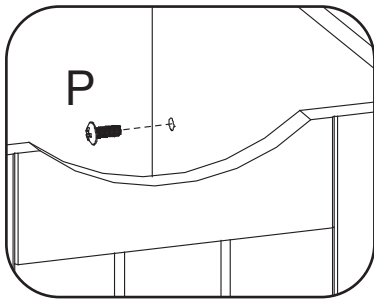

1. Slide drawer into assembled cabinet.
2. Insert 2 machine screws (P) through holes on drawer left side panel (11) and drawer right side panel (12) to prevent drawer pulling out.

ATTENTION ADULTS: Cabinet should be checked periodically for damage or loose screws/parts. Take appropriate action necessary to correct hazards such as tightening of screws and taking any damaged parts away from children.

WARNING  **Please make sure your item is secured to the wall, per assembly instructions.**

 
CARE INSTRUCTIONS:

Wipe clean with a water dampened cloth. Wipe dry with clean cloth.

IMPORTANT:

Keep assembly instructions for future reference.

Enjoy your new RiverRidge® Cabinet!

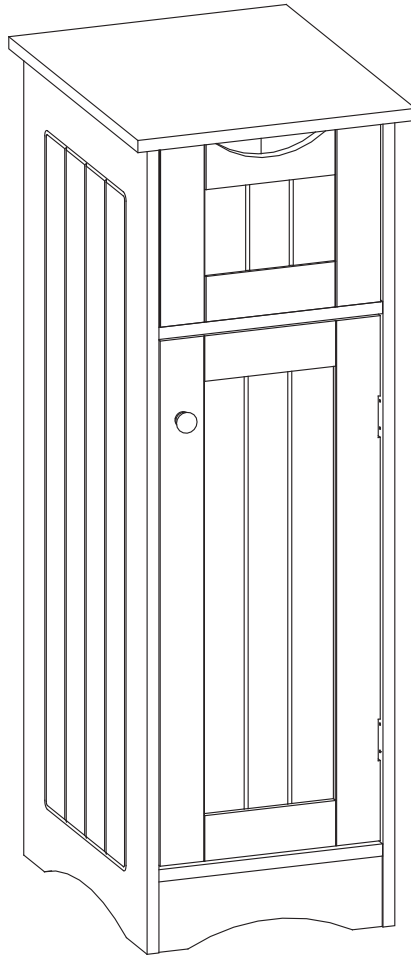

Thank you for purchasing this RiverRidge® Home item. We hope you enjoy it and consider purchasing other RiverRidge® items.

To order replacement parts at no cost to you, email customer.service@ssi-rr.com, call 1-(844)-223-5201 or order parts online at www.riverridgehome.com. Only valid in the United States. If purchased outside of the United States, please contact retailer where purchased.



RiverRidge® is a registered trademark of Sourcing Solutions, Inc., Hudson, WI 54016