Assembly Instructions

Hanging Chair





WARNING:

Thank you for purchasing the Hanging Chair. Please read below before you proceed.

- 1. Not intended for use by children 12 years of age or younger.
- 2. This is a hanging chair, not a swing chair.
- 3.Do not swing on or in the chair. It could cause the product to tip over, resulting in possible injury.
- 4. This chair basket is not a toy.
- 5. No mounting hardware kit included.
- 6. Professional installation required.

| Parts List | | | |
|-----------------------|------------|----------------|-----|
| No. | Picture | Description | Qty |
| A | | Тор | 1 |
| В | | Back | 1 |
| C | | Seat | 1 |
| D | | Cushion | 1 |
| <u>Hardware</u> | | | |
| 1 | | Allen key | 1 |
| 2 | | Bolt (M6*40mm) | 7 |
| 3 | | Washer | 14 |
| 4 | | Nut | 7 |
| 5 |) <u> </u> | Wrench | 1 |
| 6 | | Nut Cap | 7 |
| 7 | | Nut Cap | 7 |
| <u>Assembly Steps</u> | | | |



• Read the instructions before you start the assembly.



• May need assitance for assembly.




• Assemble on a clean and smooth surface.




• Safe all package until finished.

Overview

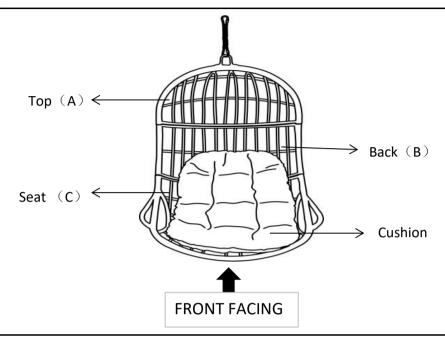


This Basket has multiple parts and may require up to 30 minutes to assemble. The above picture is to help you put the various parts into perspective. Please read through the instructions below to familiarize yourself with the parts and steps before assembly.



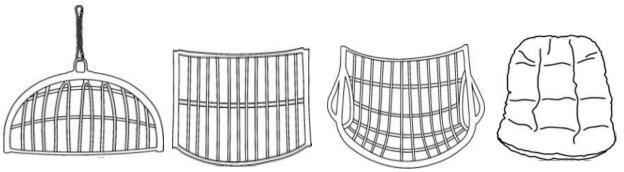


Unpack and place all parts on a clean surface.

Step 2

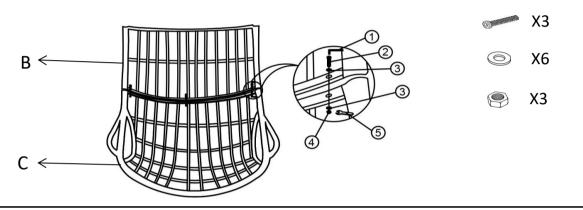


Assemble Back (B) and Seat (C) by using Bolt (2). Nut (4) and Washer (3) with Allen Key (1) and Wrench (5). Do not tighten.


Step 3

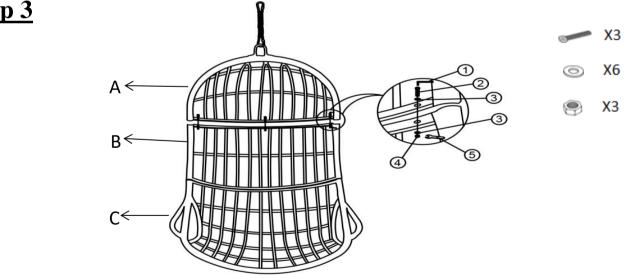


Proceed to assemble Top (A) and Back (B) by using Bolt (②) . Nut (④) and Washer (③) with Allen Key (①) and Wrench (⑤) . Do not tighten.

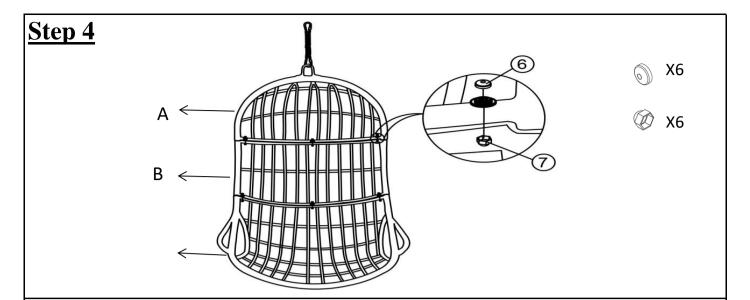

Tighten all screws and nuts . Then add the Nut Caps(6 , 7) on the 6 Bolts as shown in the picture above.

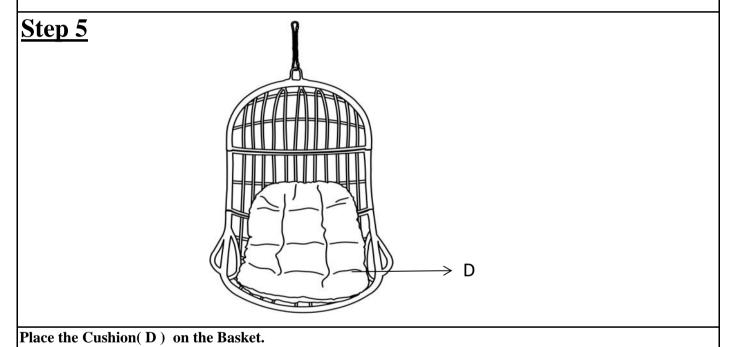


Step 6

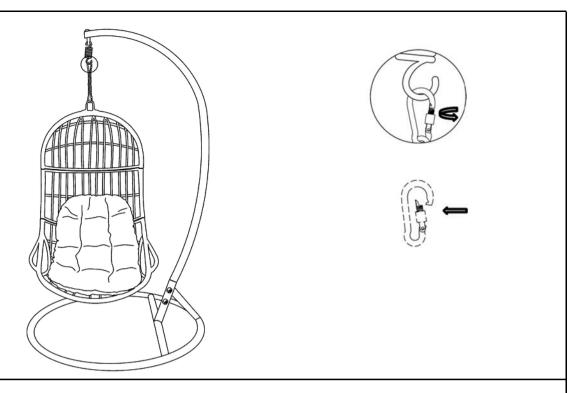

Hang the basket on the ceiling, your hanging chair is ready for use.

 Care & Maintenance







- Do not put hot items directly on furniture surface.
- **√** ♡
- To obtain the longest lifespan of your outdoor prodcts, minimizing exposure to direct sunlight is recommended.
- 0 7/
- Children should not climb or jump on the furniture.
- **√** 🗘
- To obtain the longest lifespan of your outdoor products, avoid extended and lengthy exposure to rain, snow, and direct sunshine. Whenever possible cover the product and /or place under patio or awnings.
- 0
- Not for commercial use. For residential use only.
- **Stains may be removed with mild soap solution and damp cloth. Stains may be removed with mild soap solution and damp cloth.**
- √

 Keep away from sources of ignition
- Dust and Pick-up spills: Use a Clean, non-colored, lint free cloth.