
Assembly Instructions

Caution: Please read this Assembly Instruction carefully before you proceed.

Please look under the Seat Panel for hardware packs.

Chair

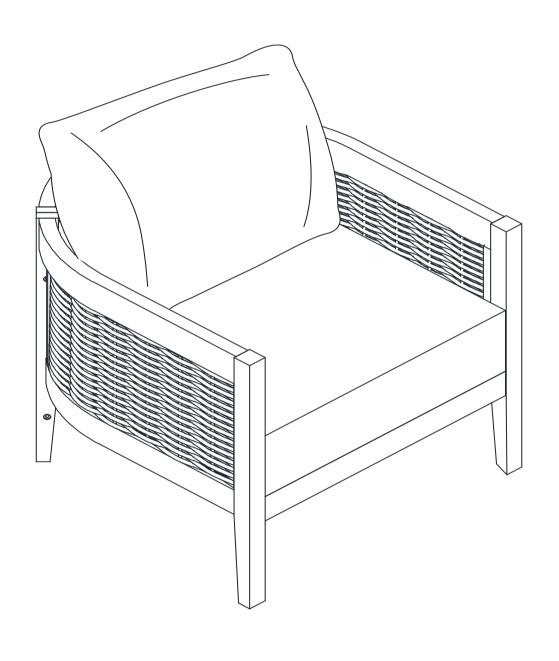

CAUTION: This Chair is **NOT** a TOY.

Keep your child / children at bay during the assembly process.


Two adults may be needed to execute these actions.

Whenever lifting or moving the Chair and to prevent any damage to it.

Part List			
Label	Picture	Description	QTY
Α		Backrest Panel	1
В		Right Leg Panel, pre- attached with Wooden Dowel	1
С		Left Leg Panel, pre- attached with Wooden Dowel	1
D		Front Apron Support Bar	1
E		Seat Panel	1
F		Seat Cushion	1
G		Backrest Cushion	1
<u>Hardware</u>			
Label	Picture	Description	QTY
1		Bolt (M6x30mm)	3
2		Bolt (M6x35mm)	3
3		Bolt (M6x45mm)	5
4		Screws (M6x35mm)	5
(5)	0)	Sleeve Nut (M6x15mm)	3
6		Allen Wrench	2

Assembly Preparation

Before Beginning Assembly:

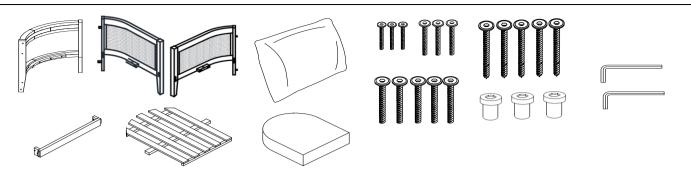



- Read instructions, cover to cover-
- Have 2 adults on hand for assembly-



Do not assemble on flooring or carpet-




Assemble on a clean non-marring surface (packing foam)-



Save all packaging until finished-


Assembly Steps

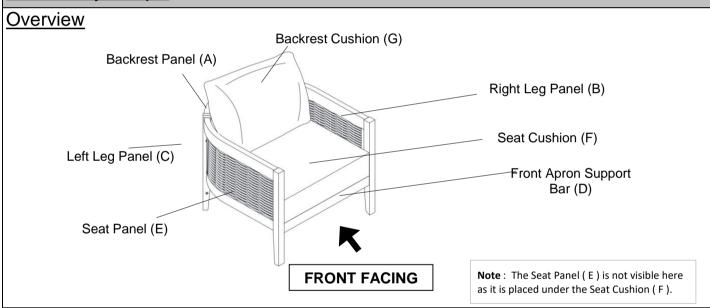


This Chair has multiple parts and may require up to 30 minutes to assemble.

"To give you an overview of the Chair parts, the above picture is provided to help you put the various parts into perspective".

 Please read through the instructions below to familiarise yourself with the parts and steps before assembly.



Unpack and place all parts on a clean, non-marring surface.

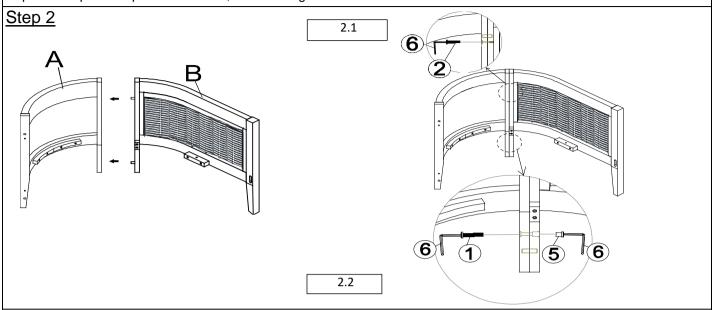


Place the **Backrest Panel (A)** in an upright position, as shown in the picture above, onto a clean, soft surface to avoid any scratches or damage to the product.

With assistance from your adult partner(s), attach the **Right Leg Panel (B)** to the **Backrest Panel (A)**. Achieve this by using **Bolts (2)** and the **Allen Wrench (6)** as shown in Figure 2.1.

Next, using 2 (two) Allen Wrenches (6), turn the Bolt (1) into the Sleeve Nut (5), as show in Figure 2.2.

Do not fully tighten the Bolts at this time.

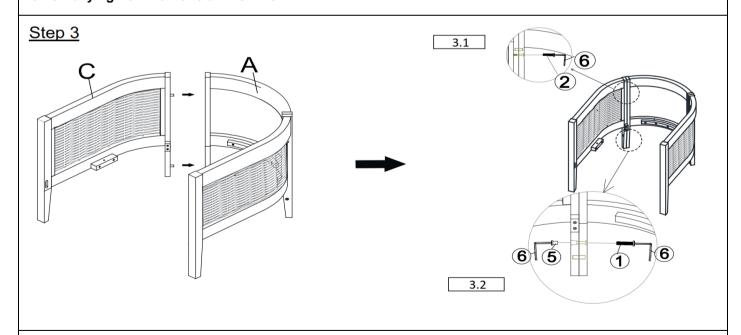


Place the **Left Leg Panel (C)** in an upright position, as shown in the picture above, onto a clean, soft surface to avoid any scratches or damage to the product.

With assistance from your adult partner(s), attach the **Left Leg Panel (C)** to the assembled parts in Step 2. Achieve this by using **Bolts (2)** and the **Allen Wrench (6)** as in Figure 3.1.


Next, using 2 (two) Allen Wrenches (6), turn the Bolt (1) into the Sleeve Nut (5), as show in Figure 3.2.

Do not fully tighten the Bolts at this time.

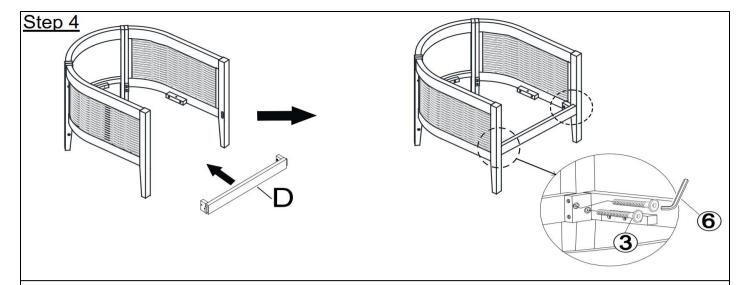


With assistance from your adult partner(s), attach the **Front Apron Support Bar (D)** to the assembled frame in step 3. Achieve this by using **Bolts (3)** and the **Allen Wrench (6)**, as shown above.

Do not fully tighten the Bolts at this time.

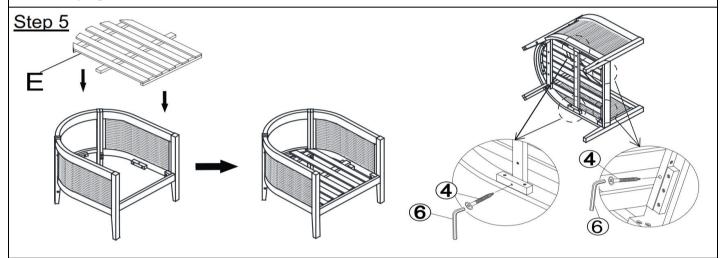

With assistance from your adult partner(s), attach the **Seat Panel (E)** into the assembled frame in step 4. Achieve this by using **Screws (4)** and the **Allen Wrench (6)**, as shown in the above picture.

Do not fully tighten the Screws at this time.

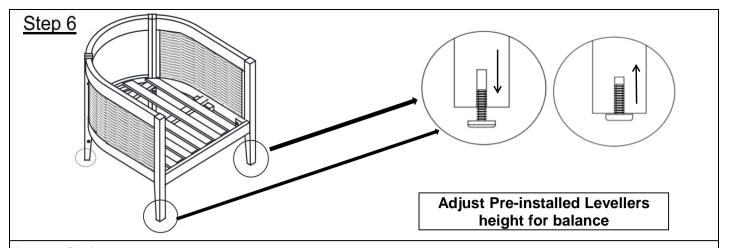

Turn the Chair right side up.

Inspect the Chair and make sure all parts are adequately connected.

In a sequential manner, tighten ALL Screws and Bolts at ALL joints.


With assistance from your adult partner, adjust the Levellers to the desired height, to avoid wobbles.

CAUTION: When tightening these screws and bolts, tighten sequentially.

DO NOT tighten any screw or bolt fully and then move towards the next one.

This could cause the frame to warp.

WARNING: IF THE CHAIR IS NOT STABLE, IT COULD LEAD TO DAMAGE IN THE CHAIR.

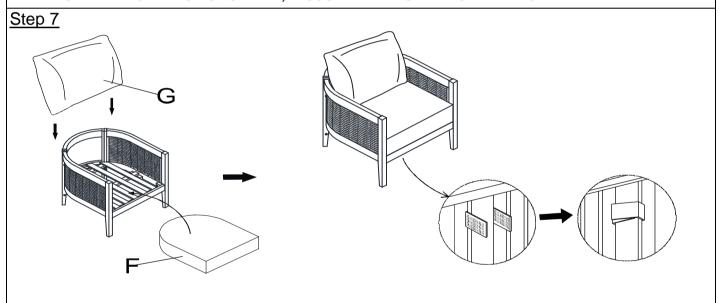

Place the Seat Cushion (F), then the Backrest Cushion (G) onto the Chair.

Then affix the **"magic tape straps**" around the **Chair** as shown above.

Your Chair is ready to be used.

This Chair can only be used on a flat, level surface.

Care & Maintenance



Do not put hot items directly on furniture surface





Do not clean furniture with harsh cleansers or polish.



 To obtain the longest lifespan of your outdoor prodcts, minimizing exposure to direct sunlight is recommended.



Children should not climb or jump on the furniture.



Do not write on furniture without a padded barrier to protect the surface.



To obtain the longest lifespan of your outdoor products, avoid extended and lengthy exposure to rain, snow, and direct sunshine. Whenever possible cover the product and /or place under patio or awnings.



Not for commercial use. For residential use only.



Stains may be removed with mild soap solution and damp cloth.



Keep away from sources of ignition.



Dust and pick-up spills using a clean, non-colored, lint-free cloth.