
 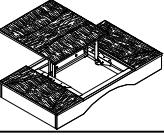



Assembly Instruction


195T3533RF-30 LIFT TOP COCKTAIL TABLE WITH 4PC CASTERS

PART LIST			HARDWARE LIST		
A	LIFT TOP PANEL		1PC	1	BOLT
B	BOTTOM PANEL		1PC	2	BOLT
C	LEG FRAME LSF/RSF		2PCS	3	SPRING WASHER
				4	FLAT WASHER
				5	PLASTIC CAP
				6	ALLEN KEY
				7	CASTER
				8	SCREW


STEP 1

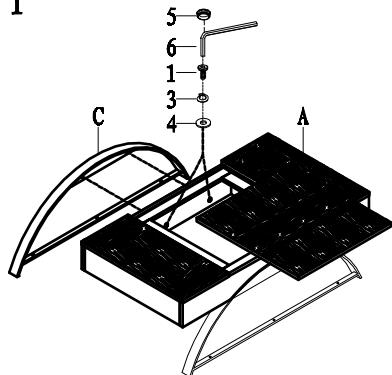


STEP 2

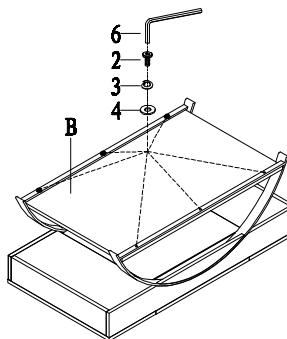

STEP 3

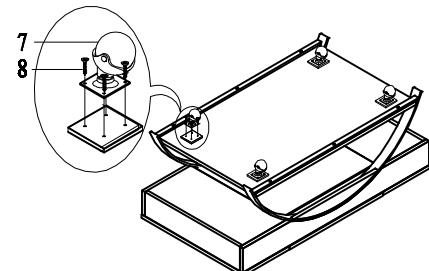

STEP 4

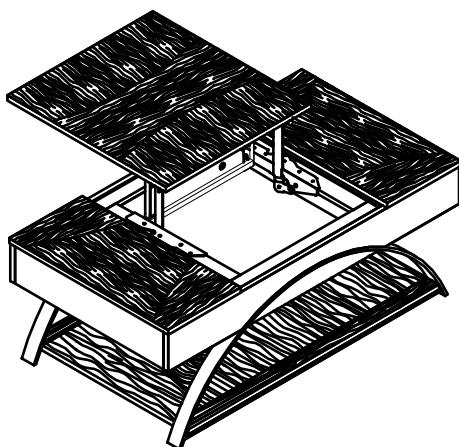

CAUTION!

Do not allow children to play on the mechanized furniture or operate the mechanism. Top surfaces fold down on closing, so that a child could possibly be injured. Always leave furniture in the closed position when unattended. To prevent the table from tipping over, do not place more than 30 pounds on the top when in the open position.

KEEP HANDS CLEAR OF MECHANISM.

For items use on wooden floor, hard surfaces or carfaces or carpets, it is recommended to Install protective pads under all legs and supports to avoid/prevent from damages/scratches and discoloration

