


PRODUCT MANUAL

HAVANA ROCKING CHAIR MODEL# V7201450WT V7201450BK

Instruction Guide

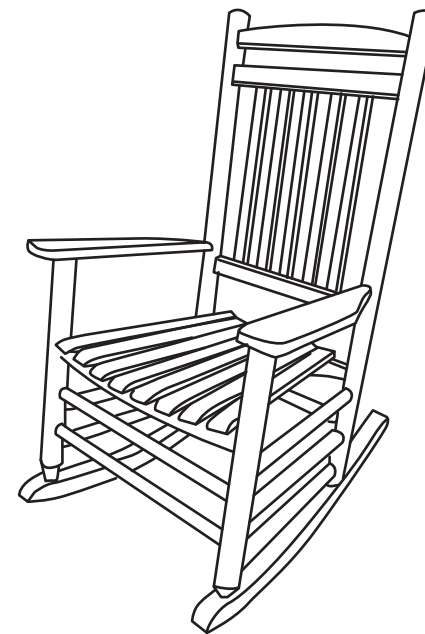

Bellini
HOME AND GARDENS


PARTS LIST

Thank you for purchasing this quality product. This product has been designed for easy assembly and constructed for durability. Please take the time to read and follow the assembly instructions carefully. Be sure to check all packing materials carefully for small parts which may have come loose inside the carton during shipment. Please separate, identify, and count all parts and metal hardware. Compare with part list to be sure all parts are present.

IMPORTANT NOTE:

Place all wooden parts on a clean and smooth surface such as a rug or carpet to avoid the parts from being scratched.
Remove all wrapping material, including staples & packing straps before you start assemble.
DO NOT tighten all screws and bolts until completely assembled.
Keep all hardware parts out of reach for children.

ASSEMBLY TOOLS REQUIRED (NOT INCLUDED)

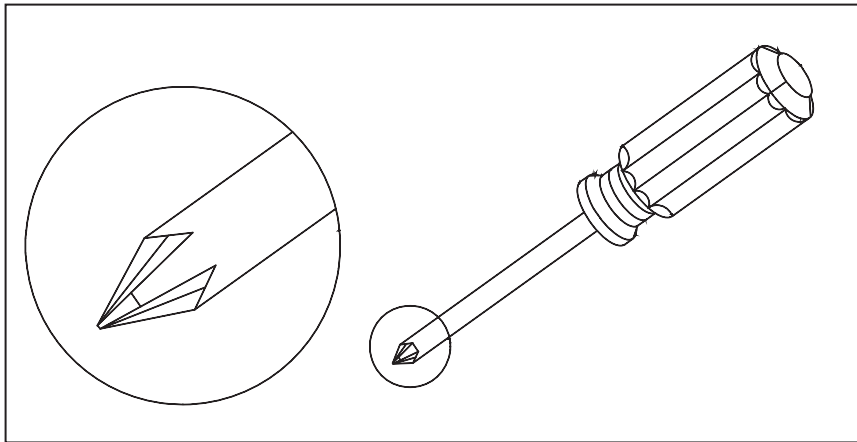

PARTS LIST

When unpacking, please be careful not to discard any parts with the packaging. Before continuing, please make sure you have the following parts:

Parts List

No.	Description	Qty	Sketch	No.	Description	Qty	Sketch
A	Back	1		G	Back Rail	1	
B	Left Leg	1		H	Runner	2	
C	Right Leg	1		I	Back Panel	1	
D	Seat	1		J	Left Arm	1	
E	Front Rail	1		K	Right Arm	1	
F	Front Rail	1					


Hardware List

No.	Description	Qty	Sketch	No.	Description	Qty	Sketch
AA	Bolt (M6x48mm)	14		BB	Wood Arm Plug Φ12mm	14	
CC	Screw Φ4x45mm	6		DD	Wood Arm Plug Φ 9mm	2	
EE	Allen Wrench	1					

ASSEMBLY INSTRUCTIONS


Step1: Attach the Left and Right Legs (B&C) to the Runner (H) with Screws (CC).See Fig 1.

Fig 1

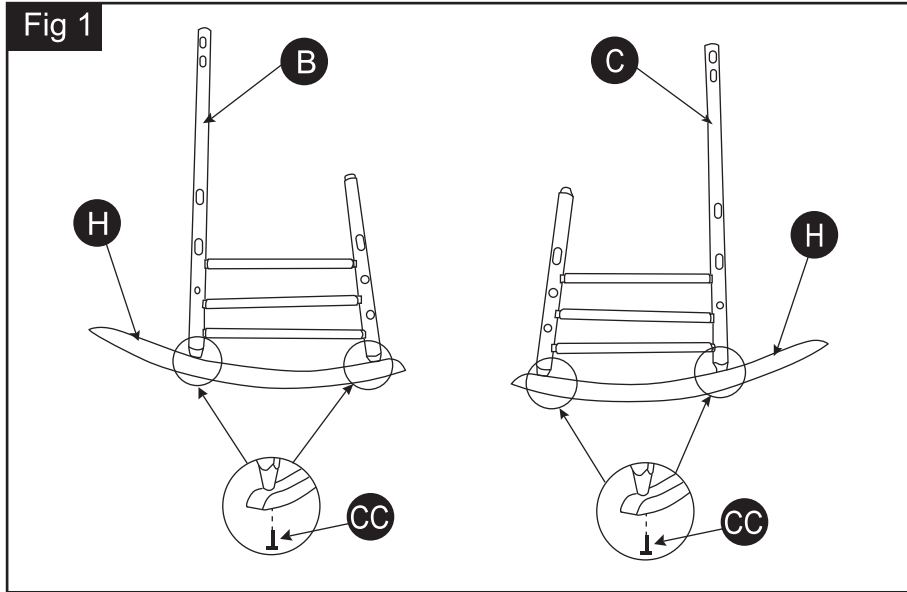

Step2: Put the Back Panel (I), Back (A), Seat (D), Front Rail (E,F), Back Rail (G) to the right position. Then, attached the Back Panel (I) and Right Leg (C) with Bolt (AA).See Fig 2.


Fig 2

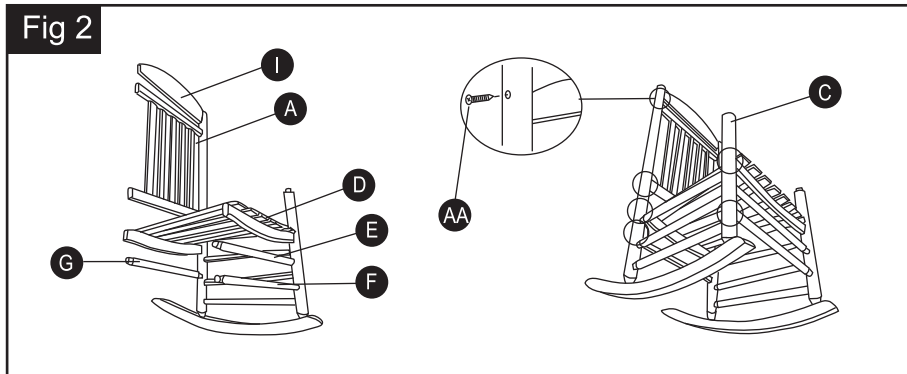

ASSEMBLY INSTRUCTIONS


Step3: Put the Left and Right Armrest (J&K) to the right position. Then, attached Left and Right Armrest (J&K) and Left and Right Legs (C&B) with Bolt (CC) and insert the Wood Arm Plug (DD).See Fig 3.

Fig 3

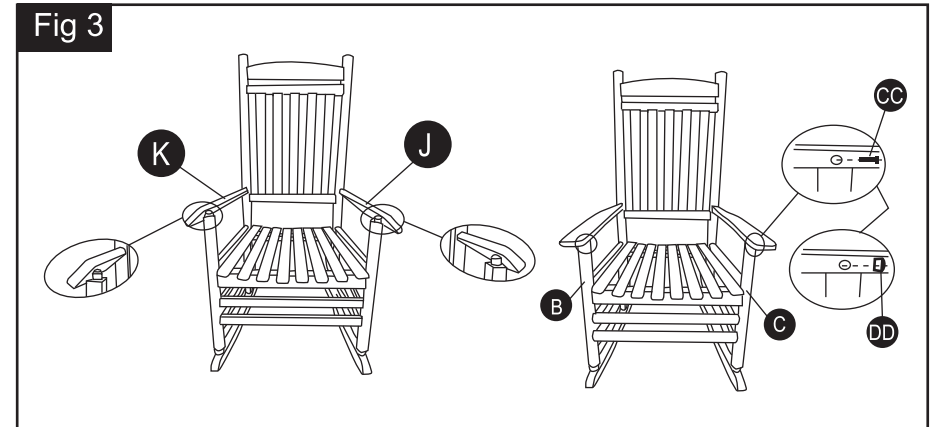

Step4: Attached Back (A) and Left and Right Legs (B&C) with Bolt (AA) and insert the Wood Arm Plug (BB). Then insert the Wood Arm Plug (BB) the right position.See Fig 4.

Fig 4

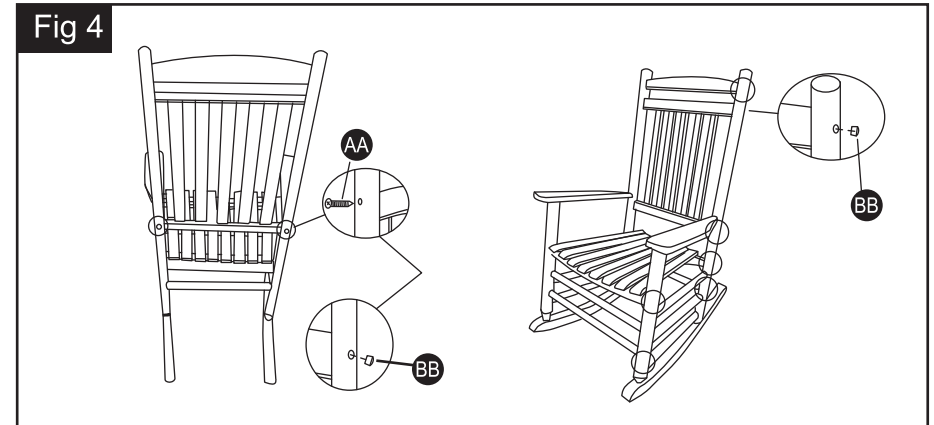

Now please enjoy your new Wooden Porch Rocker.

WARRANTY

90 day Limited Warranty

This product is warranted to the original purchaser against defects in workmanship and materials. If a product fails during the first 90 days from date of purchase under the terms of our limited warranty, please contact customer support.

Manufacturer reserves the right in the case of discontinued or out of production models, to replace with an item of similar quality.

Wood

This product is made of solid wood. Color variations, knots, small-pitted areas, gum and mineral deposits, and other marks of nature are normal and guarantee that you have purchased genuine solid wood furniture. You should expect a natural variation in wood grain and coloration between like pieces. Water or other liquids must never be left standing on wood surfaces.

WARRANTY

Finishes

The finish is warranted against blistering, peeling, or cracking. Fading resulting from exposure to elements, chemicals, and spills are not covered. Scratches and chips due to normal wear and use are not covered.

Note: You must retain original receipt to obtain warranty!

Exclusions

- Damage caused by acts of nature.
- Wind damage.
- Failure caused by unreasonable, unanticipated or abusive use.
- Warranty will be void without original receipt.
- Warranty does not cover any commercial use of this product.

NOTICE

- Please do not exceed the weight limitations of this item.
- Do not stand on or use any part of this item as a step ladder.
- Firmly secure that bolts, screws and knots before use.
- Reconfirm that all bolts, screws and knots are secure every 90 days.
- Do not firmly tighten the screws until the items is completely assembled.
- Do not use or store this item in the proximity of open flame or flammable / combustible chemicals.
- Be aware that some parts are heavy and have sharp edges.
- If any parts are missing, broken, damaged, or worn, stop using until repairs are made and / or factory replacement parts are installed.
- Do not use this item in a way inconsistent with the manufacturer's instruction as this could void the product warranty.



250 LBS
CAPACITY



1 PERSON
ASSEMBLY



APPROXIMATELY
15 MIN
ASSEMBLY

CONTACT INFORMATION

CUSTOMER SERVICE

M-F 9:00AM-5:00PM EST

Phone: 305-547-6106

Email: info@bellinihomeandgardens.com

MADE IN CHINA