

ASSEMBLY INSTRUCTION

BIKE CHAIR

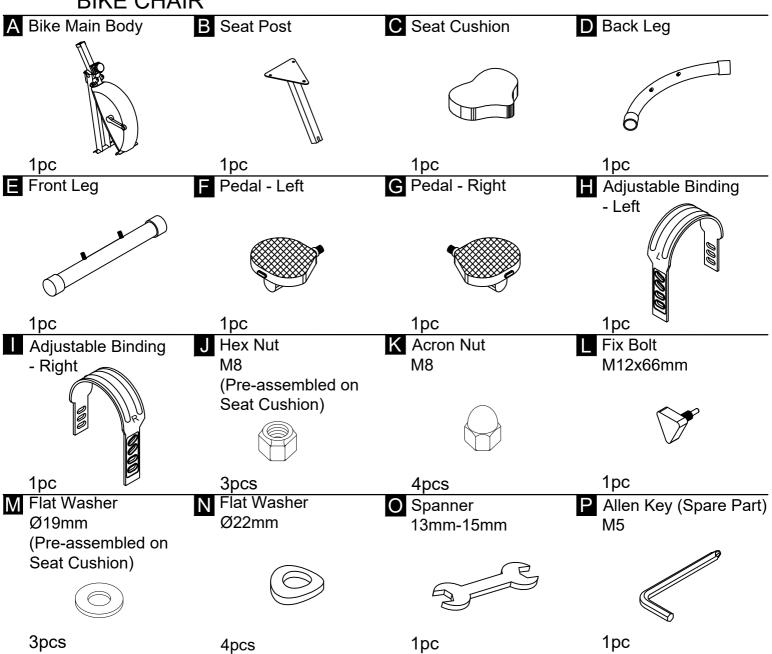

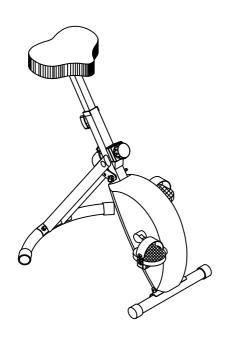


This page lists all the contents included in the box. Please take the time to identify the hardware as well as the individual components to this product. As you unpack and prepare for assembly, place the contents on a carpeted or padded area to protect them from damage. Remove the pin of Bike Main Body (A), adjust the width of the body, then, insert the the pin back to the hole on the most edge of the panel as below shown.


ASSEMBLY

Do not fully tighten all bolts until assembly is complete.


This will help all parts to assemble properly.

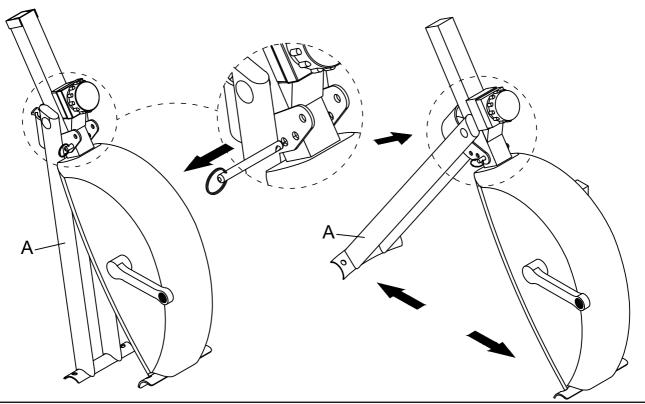


Assemble Adjustable Binding - Left (H) & Adjustable Binding - Right (I) to Pedal - Left (F) & Pedal - Right (G) as below shown.

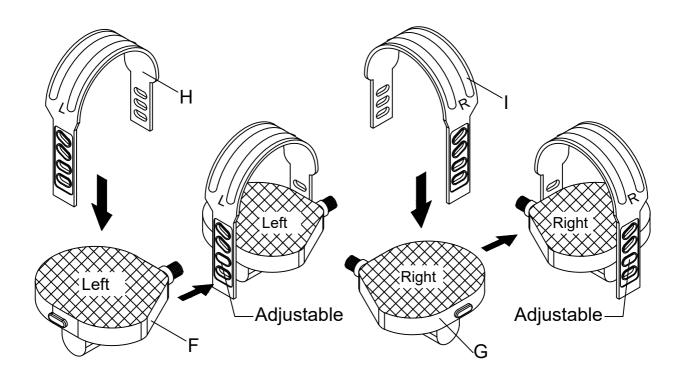


Assemble Pedal-Left (F) and Pedal-Right (G) to Bike Main Body (A), then fasten by Spanner (O) as below shown.

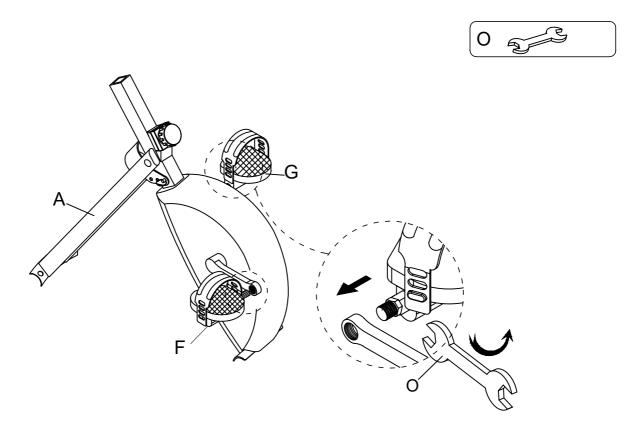


Assemble Back Leg (D) & Front Leg (E) to Bike Main Body (A), using Acorn Nut (K) & Washer (N) to fasten by Spanner (O) as below shown.

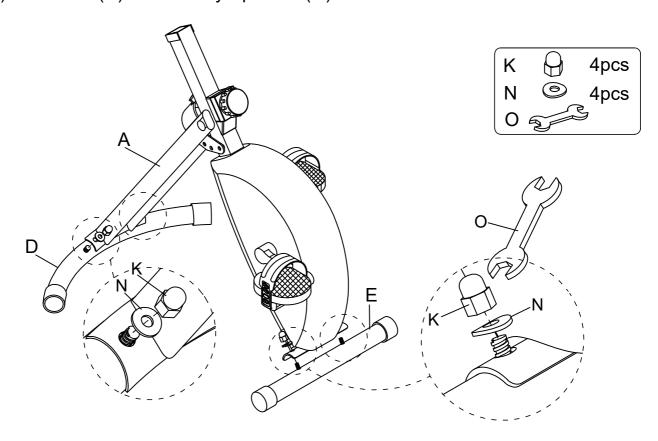


Remove Hex Nut (J) & Flat Washer (M) from Seat Cushion (C) first, then assemble Seat Post (B) to Seat Cushion (C), using Hex Nut (J) & Flat Washer (M) to look back and fasten by Spanner (O) as below shown.

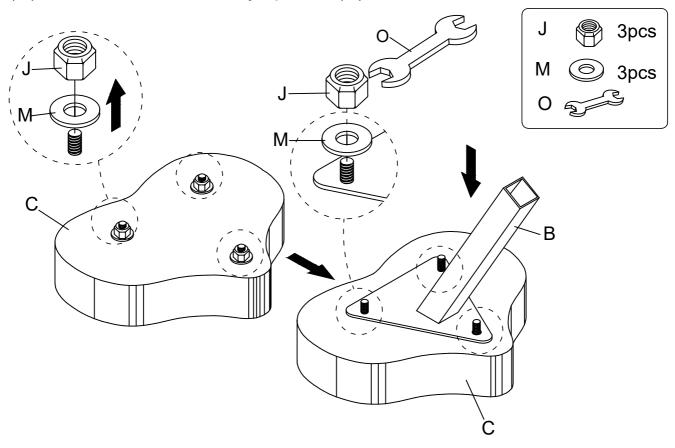

6 Insert Seat Post (B) into Bike Main Body (A) as below shown.

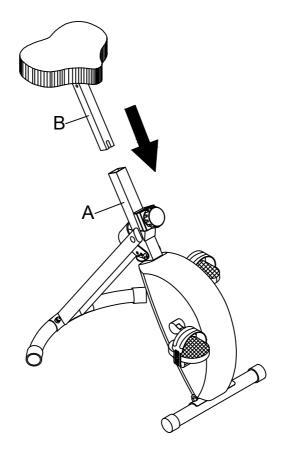

Adjust Seat Post (B) to suit for your height, then fasten with Fix Bolt (L) as below shown.

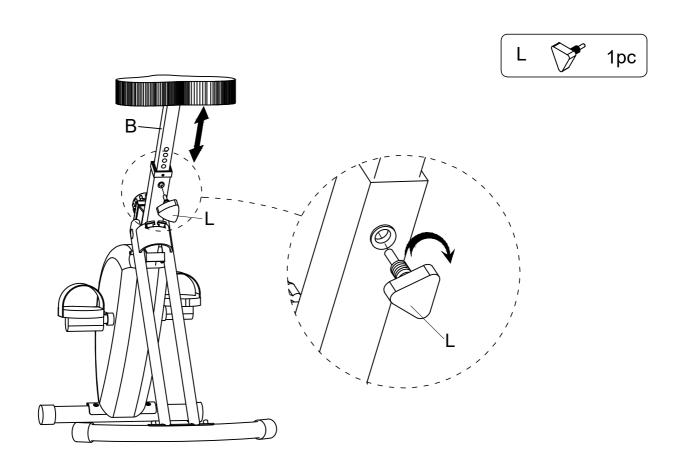



WARNINGS:

Maximum loading weight is not exceed 220LBS on the seat. Please make sure that all bolts are fully tightened before using.

Cleaning & Care

Treat surface with care. Surface is resistant to scratches but is not scratch resistant. Clean surfaces with a dry or damp soft cloth. Do not use abrasive cleaners. Hardware may loosen over time. Periodically check that all connections are tight.