

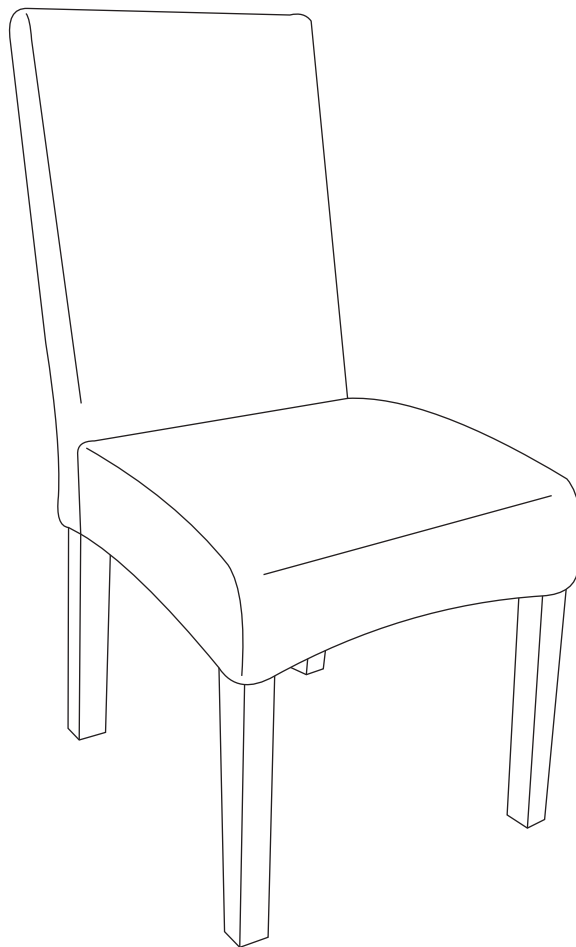


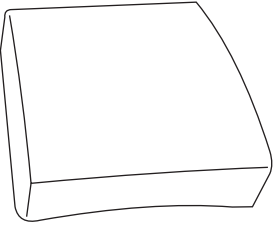


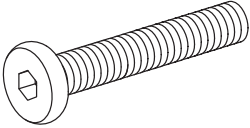
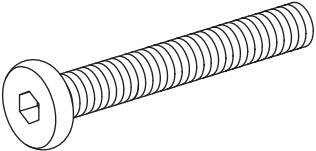


Dining Chair
CF502418

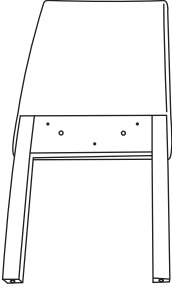

PART LIST


A	B	C
		
Seat Frame 2 PCS	Backrest 2 PCS	Front Leg 4 PCS




HARDWARE LIST

#1	#2	#3	#4
			
$\frac{1}{2}$ " x 1. $\frac{1}{2}$ " L	$\frac{1}{2}$ " x 2" L		
Short Bolt 6 PCS (Extra 1)	Long Bolt 8 PCS (Extra 1)	Flat Washer 14 PCS (Extra 1)	Allen Wrench 1 PC

Step 1. Carefully turn seat frame (part A) upside down on a flat, soft surface, such as carpet. Attach front legs (part C) to seat frame (part A) using long bolts (part #2), flat washers (part #3) and allen wrench (part #4).

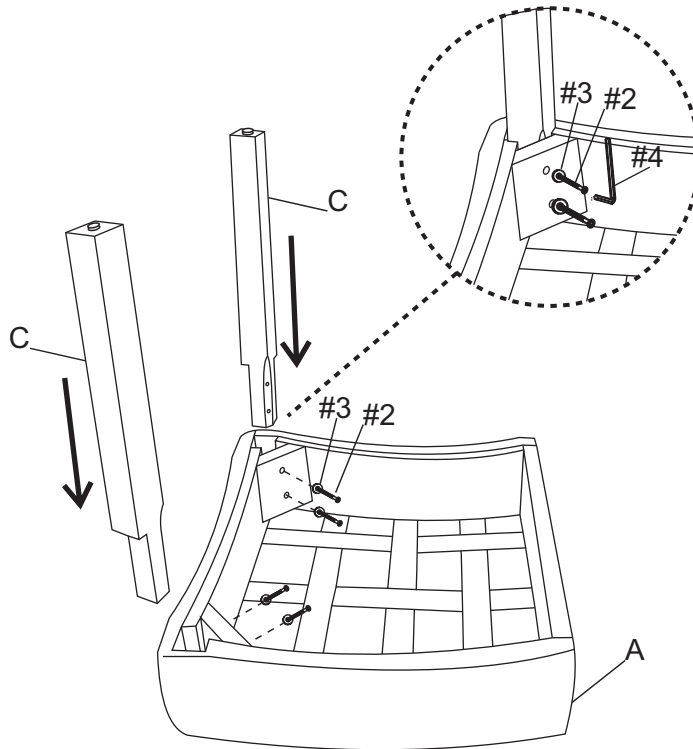NOTE: Please fully tighten all bolts at this time.







#2		x 4
#3		x 4
#4		x 1

Step 2. Lay backrest (part B) down on a flat, soft surface, such as carpet.

Attach assembled unit (parts A & C) to backrest (part B) using short bolts (part #1), flat washers (part #3) and allen wrench (part #4).

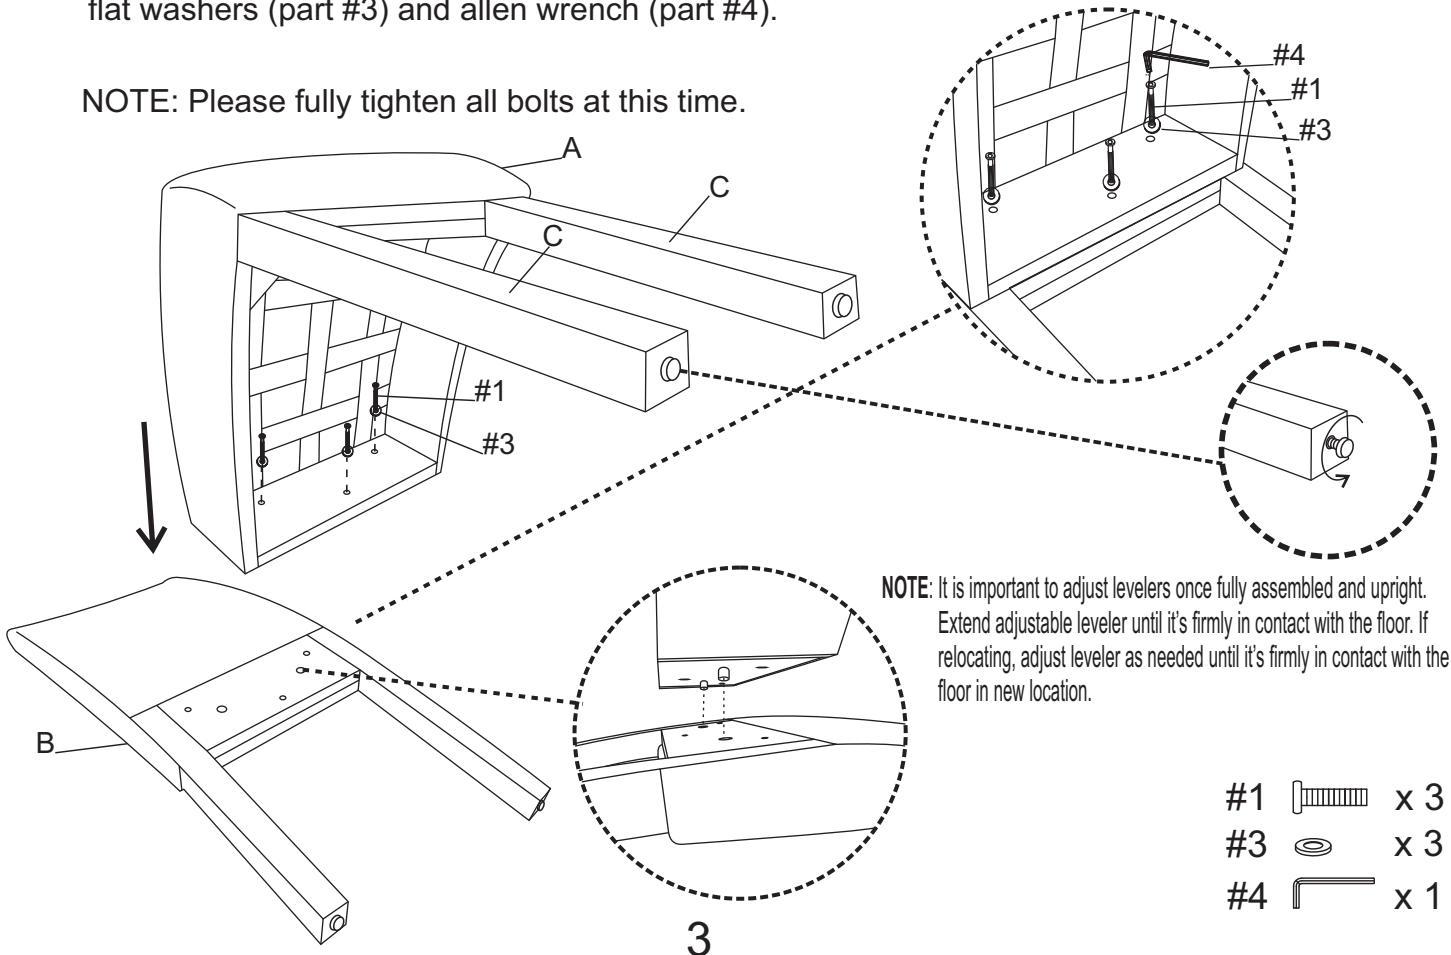NOTE: Please fully tighten all bolts at this time.



#1		x 3
#3		x 3
#4		x 1

Step 3. Carefully turn unit upright. Repeat steps 1-2 to assemble remaining chair.

