WARRANTY

We strive to offer high-quality products, and we also try our best to satisfy each and every customer that orders from us with product or service as needed. We provide 30 days warranty starting from the time you receive the item. Each customer must provide a record of their order such as the order number, or item receipt for any items that are out of the warranty period you may also still receive replacement parts by purchasing them with our company if they are available.

Are you having difficulty
with assembly? Missing parts?
PLEASE DON' T RETURN THE ITEM TO
RETAILER

For help call or email with your order No.

Customer service:


888-214-6610

Open Monday through Friday 9:00AM-5:00PM CST

Email:

customerservice@hulalahome.com 24h



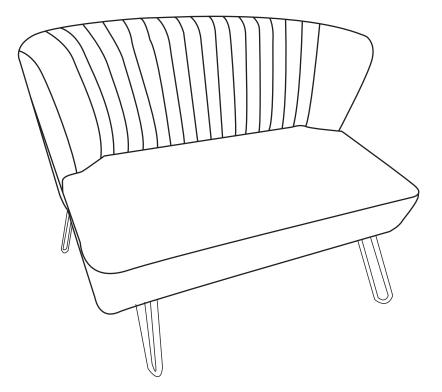

NOTE:

This brochure contains IMPORTANT safty info. Please read and keep for future reference.

ITEM NO.SFM0327

MAINTAINANCE AND WARNING

- Keep furniture away from heat.
- Do not clean furniture with harsh cleansers or polish. Do not use detergents, Solvents, abrasives, spray packs or leather cleaner. Use non-color mild soap with warm water clean spills(Mix 1:10 soap to water)
- Do not place furniture under direct sunlight, material will possibly fade over time.
- Do not use on site dry Cleaning machine.
- Children should not climb or jump on the furniture.
- Do not write on furniture without a padded barrier to protect the surface.
- To obtain the longest lifespan of your outdoor products, avoid exposure to rain or snow, and direct sunshine for long time. Whenever possible cover the product and/or place under patio or awnings.
- Not for commercial use, For residential use only.




Weight Limitation


400LBS

PARTS LIST


Ax1

  Bx1





Cx4

 



Estimated Duration Of Assembly

5-10 MINUTES

HARDWARE LIST





 








SPARE












Be sure to check all packing material carefully for small parts, which may have come loose inside the carton during shipment.

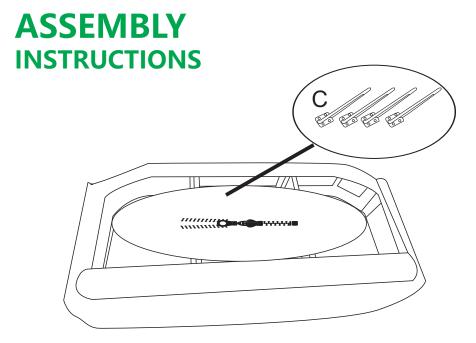


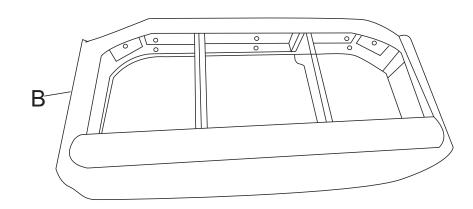


STEP 1 Open the zip on bottom of the seat cushion B under pocket and take out the components. Place the seat cushion B on a clean padded surface.

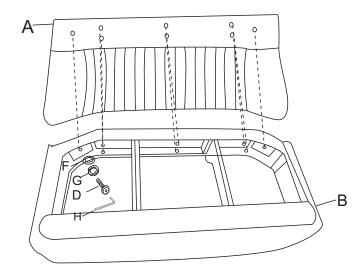

STEP 2 Align hole position on seat cushion B and back A, use bolt D, flat wahser F, spring wahser G allen wrench H to connect seat and back, Don't fasten any bolt until all botls connected properly and position aligned correctly.

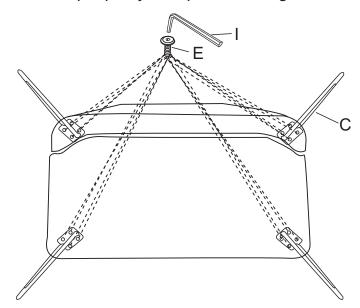

STEP 3 Use bolt E, allen key I to attach legs bottom of the seat cushion and fasten all bolts.

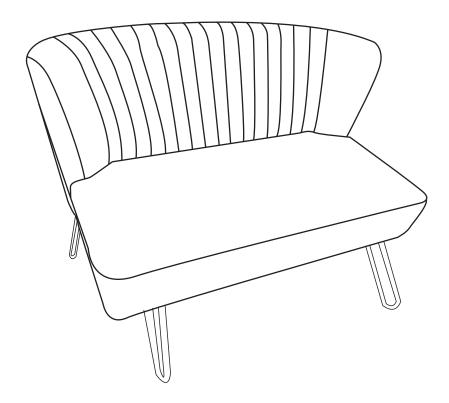

Adjust levelers under legs to set the loveseat level.

STEP 4 Assembly completed.