

Item No: PIT1012A

SAFAVIEH OUTDOOR

CARE AND USE GUIDE

Product Dimensions : 28"W X 28"D X 13"H

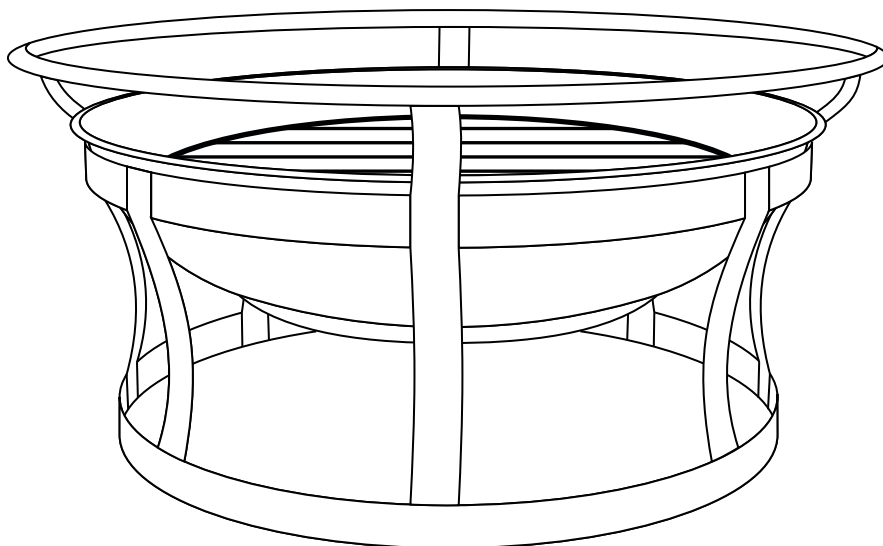 


Table of Contents

Table of Contents	2
Safety Information	2
Precautions	2
Pre-Assembly.....	3
Planning assembly	3
Package contents	3

Assembly	4
Operation	4
Care and Cleaning	5

Safety Information

PRECAUTIONS

Use caution and common sense when using your outdoor fireplace. Failure to adhere to the safety warnings and guidelines in this manual could result in bodily injury or property damage. Save this manual for future reference.



WARNING: Use with extreme care and at your own risk.



WARNING: The metal surface can get very hot and caution must be used when handling the fireplace after use. Never move the outdoor fireplace when in use or immediately after use when it may be hot.



WARNING: Do not touch the flame or outdoor fireplace when in use.



WARNING: Do not use during windy conditions



WARNING: Please check with your local fire municipality or authority on any restrictions of use.



WARNING: Do not overload the bowl beyond 6 to 8 pounds. Do not overfill pan with wood such that it extends the edges of the pan - Cover must rest completely on the pan, not the wood.



WARNING: Place the outdoor fireplace on firm, level ground or surfaces free of debris. Do not use on wooden or composite decks.



WARNING: It is advised that a fire extinguisher be readily available. Refer to your local authority to determine the proper size of the fire extinguisher..



WARNING: Do not use the outdoor fireplace for other than its intended purpose.



WARNING: Do not attempt to service or modify the fireplace other than normal maintenance procedures as explained in the Care and Cleaning section of this manual.



WARNING: Metal surfaces will become extremely hot during use. Always use caution when handling a spark screen and a screen lifting tool, if equipped. Failure to wear flame retardant, protective gloves while handling steel parts may lead to serious burns and injury.



WARNING: Strictly for wood burning; not intended for use as a grill or for food preparation.

 
Pre-Assembly

PLANNING ASSEMBLY

Read all safety warnings and instructions carefully and thoroughly before assembling and operating your outdoor fireplace. Familiarize yourself with the inventory of parts and the accompanying illustrations to ensure safe and proper assembly. The manufacturer is not responsible for any injury that may occur during the assembly of this product.

Place the parts on a soft surface to assemble and prevent scratching the finish.

PACKAGE CONTENTS

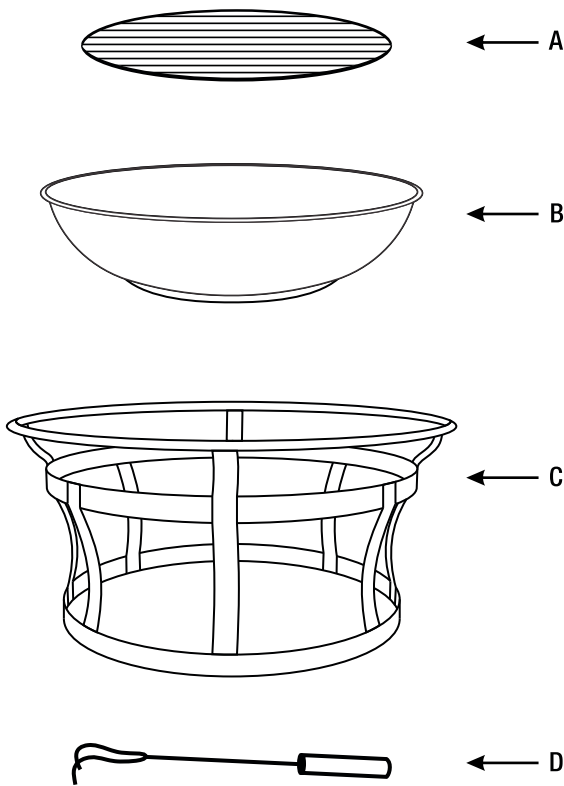


Part	Description	Quantity
A	Grate	1
B	Pan	1
C	Stand	1
D	Poker	1

Assembly


1 Assembling the pan

 - Place the stand (C) upright position on a soft, flat surface and place the pan (B) into the stand (C).

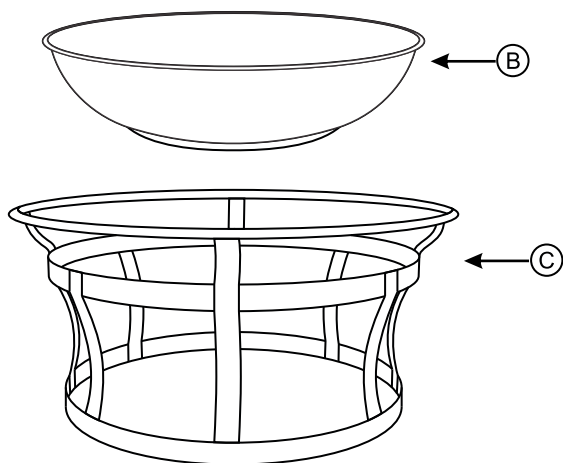

2 Assembling the pan

 - Place the log grate (A) into the pan (B).

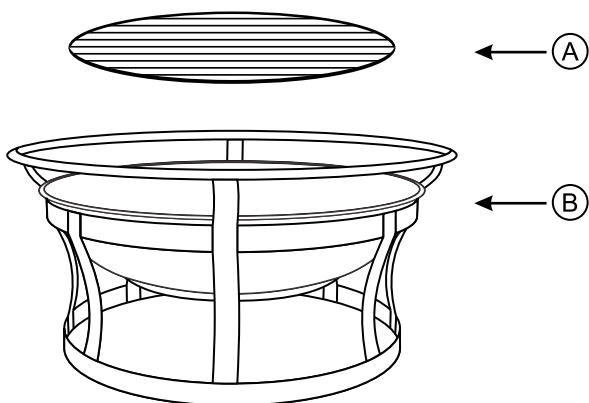

Operation

1 Starting a fire



WARNING: Do not use charcoal or an artificial log.



WARNING: Do not use large logs. Do not overload the fire bowl beyond 6 to 8 pounds.

 


WARNING: Do not use gasoline or kerosene to start a fire.



CAUTION: Keep the fire at a reasonable level, as large fires can damage or shorten the life of the unit.

- Place three to four sheets of crumpled newspaper on top of the fire log grate (A).
- Pile finely-split, dry firewood on top of the loosely crumpled newspaper.
- Carefully light the loosely crumpled newspaper underneath the firewood.

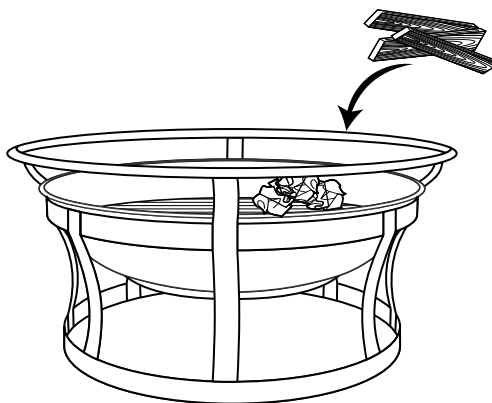

Care and Cleaning

- ❑ Once the fireplace is completely cooled down, remove the mesh cover using the handle. Pour the ashes from the pan and rinse with clean water and allow to dry completely.
- ❑ Clean after each use.
- ❑ Do not use a scrub brush.
- ❑ If the paint chips, use only high-temperature paints and a brush to fix.
- ❑ If rust is showing, sand lightly and repaint the area with high-temperature paints.
- ❑ Dry with a soft cloth.
- ❑ Turn the unit upside down when not in use to prevent water from collecting.
- ❑ Cover the unit when not in use to prolong the life.
- ❑ Keep your firepit out of rain.