

PREPARATION

Before beginning the assembly of the product, make sure all parts are present. Compare the parts with the package contents list and hardware contents list. If any parts are missing or damaged, do not attempt to assemble the product. Tool required for assembly (included): Allen Key.

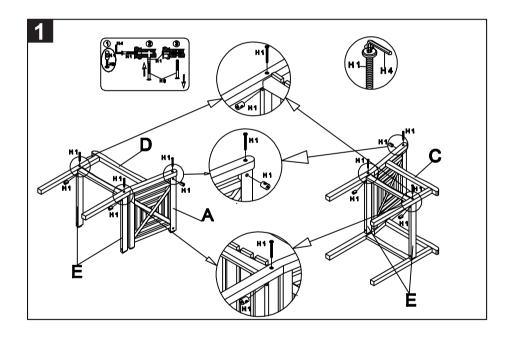

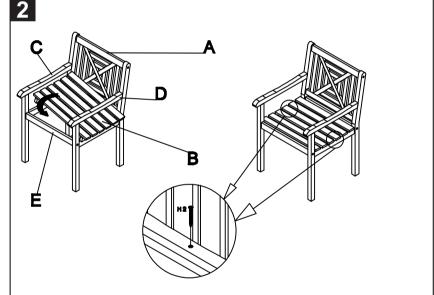

Step 1: attach left side (D) to the back (A). Then attach the supports (E) as shown on the picture by using the Allen Bolt (H1) and tighten it with the Allen Key (H4). Continue with the right side (C) in the same way. Make sure to tighten all bolts (H1) before you continue with step 2.

Step 2: put the seat (B) inside the chair and use the screw (H2) as shown on the picture, tighten all with a screwdriver.

CARE AND MAINTENANCE

Store outdoor furniture indoors or cover well when it is not in use. Dust regularly with small brush or vacuum. Spills should be taken care of immediately before they harden or stain with a slightly dampened sponge.

NOTICE

Please make sure that you have all parts indicated before you begin assembly of this item.

Part List and Hardware List

PIECE	DESCRIPTION	PICTURE (QUANTITY
A	Back		1 X
В	Seat		1 X
С	Right side		1 X 1 X
D	Left side		1 X
Е	Support		2X
H1	Allen Bolt	9 M6x70	6X
H 2	Screw	• M4x35	2 X
Н3	Bolt extra	ூ M6x50	1 X
H 4	Allen Key		1 X



MODEL# PAT6722

Product Dimension: 22.05"W x 24.02"D x 34.65"H

Weight capacity: 300 lbs

Warning: Do not stand on the chair Warning: Do not torque bolts / screws







