CARE AND MAINTENANCE

Store outdoor furniture indoors or cover well when not in use.

Remove wooden furniture from standing water. Dust regularly with small brush or vacuum Spills should be taken care of immediately before they harden or stain with a slightly dampened sponge.

SAFAVIEH OUTDOOR

NOTICE

- * Please make sure that you have all parts indicated before you begin assembly of this item
- * This item should be assembled on a soft surface to prevent scratching the finish during assembly
- * This item may require periodic tightening

Part List and Hardware List

PIECE	DESCRIPTION	PICTURE	QUANTITY
А	Frame back		1X
В	Frame Seat		1X
С	Frame Leg		2X
D	Cushion seat		1X
E	Cushion Back		1X
F	Screw	(hilling) M6x80	4X
G	Bolt	M6x40	4X
Н	Allen key	LG4	1X

Weight Capacity: 600 Ibs Warning: Do not stand on chair

Warning: Do not over torque bolts / screws








Model# PAT7067

Product Dimensions:23.6" W x 25.35" D x 23.03" H

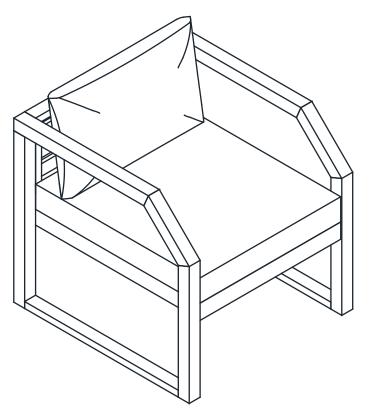


PREPARATION

Before beginning assembly of product, make sure all parts are present. Compare parts with package contents list and hardware contents list. If any part is missing or damaged, do not attempt to assemble the product.

Estimated Assembly Time: 10 minutes.

Tools Required for Assembly (included): Allen Key

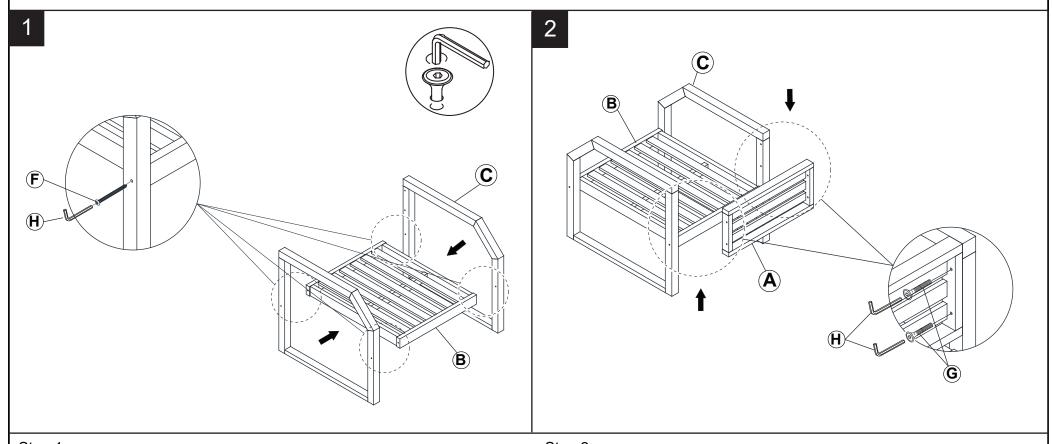

Step 1
Attach Frame Leg (C) to Frame Seat (B) ,use Bolt (F) tighten with allen key (H).

Step 2
Attach Frame Back (A) to Frame Leg (C) ,use Bolt (G) tighten with allen key (H).


PREPARATION

Before beginning assembly of product, make sure all parts are present. Compare parts with package contents list and hardware contents list. If any part is missing or damaged, do not attempt to assemble the product.

Estimated Assembly Time: 10 minutes.

Tools Required for Assembly (included): Allen Key

3

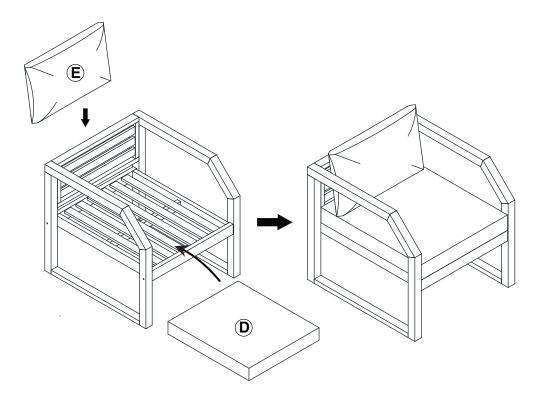

Step 5 Attach Cushion seat (E) and Cushion back (D).Complete