

 






CARE AND MAINTENANCE

Always use felt pads under all articles to prevent discoloration or softening of the lacquer. Plastic and rubber bases on items can discolor wood. Wipe up spills immediately and avoid common hazards such as hot dishes, harsh solvents and abrasives. Cleaning should be done with a soft lint free cotton cloth dampened with water or furniture polish. On highly used surfaces we recommend applying a quality paste wax which should be used on a regular basis to provide additional protection from scratches and spills. How often you apply the wax depends on how much wear the furniture receives.

NOTICE

- * Please make sure that you have all parts indicated before you begin assembly of this item
- * This item should be assembled on a soft surface to prevent scratching the finish during assembly
- * This item may require periodic tightening.

  
Part List and Hardware List

PIECE	DESCRIPTION	PICTURE	QUANTITY
A	Table Top		1X
B	Leg		3X
C	Bottom Board		1X
H1	Allen bolt 6.135x1.27x50mm		3X
H1	Allen bolt 6.135x1.27x40mm		3X
H2	washer		6X
H3	Allen key		1X

 **SAFAVIEH**
FURNITURE

Item# AMH5711

Product Dimensions: 18" W x 18" D x 26" H

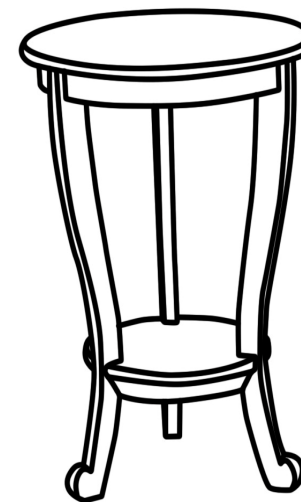

ATTACH YOUR RECEIPT HERE

Serial Number _____

Purchase Date _____


PREPARATION

Before beginning assembly of product, make sure all parts are present. Compare parts with package contents list and hardware contents list.

If any part is missing or damaged, do not attempt to assemble the product.


Estimated Assembly Time: 10 minutes.

Tools Required for Assembly (included): Allen Key

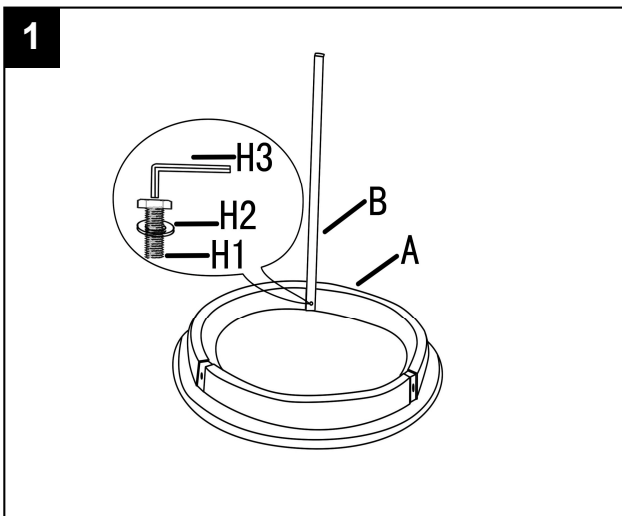


Step 1

Take all packaging off the round table. Insert one leg to the corresponding groove of the table top and secure them by Allen bolt, screws 50mm and washer, do not tighten the screw.

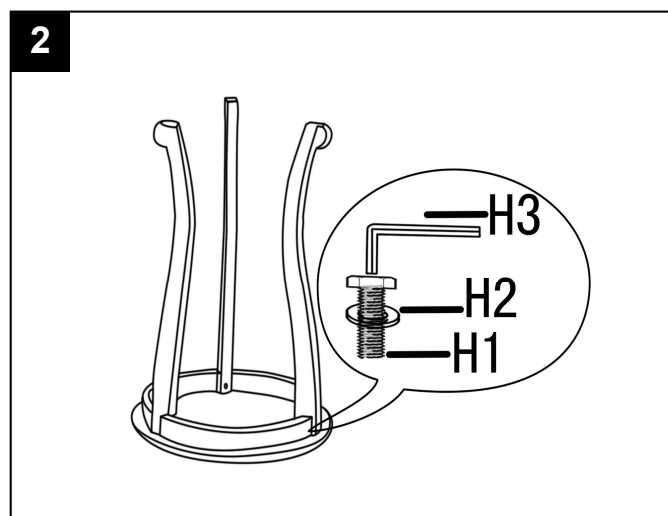

Step 2

Insert other two legs to the corresponding grooves of the table top, secure them by 2 Allen bolt, screws 50mm and washer, do not tighten the screw.

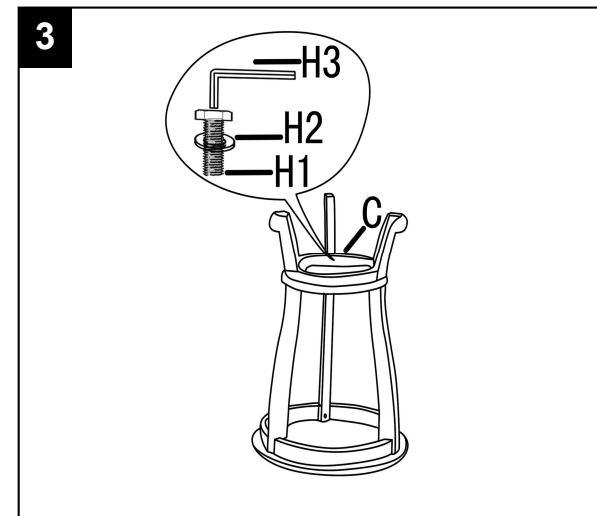

Step 3

Attach the bottom board and the legs by using 3 Allen bolt, screws 40mm and washer. If it seems wobbly, screws need to be tightened a little more.