

# ASSEMBLY INSTRUCTIONS

MODEL #

**CM5546-TV-60/70**

 
**Questions?**

GIVE US A CALL: 1-888-980-5122  
MON-FRI 8:30AM - 5:30PM (PT)

## TOOLS REQUIRED




**Allen Wrench**  
(Included)




**Socket Wrench**  
(Included)



 **Phillips Screwdriver**  
(Not Included)



**Open End Wrench**  
(Included)

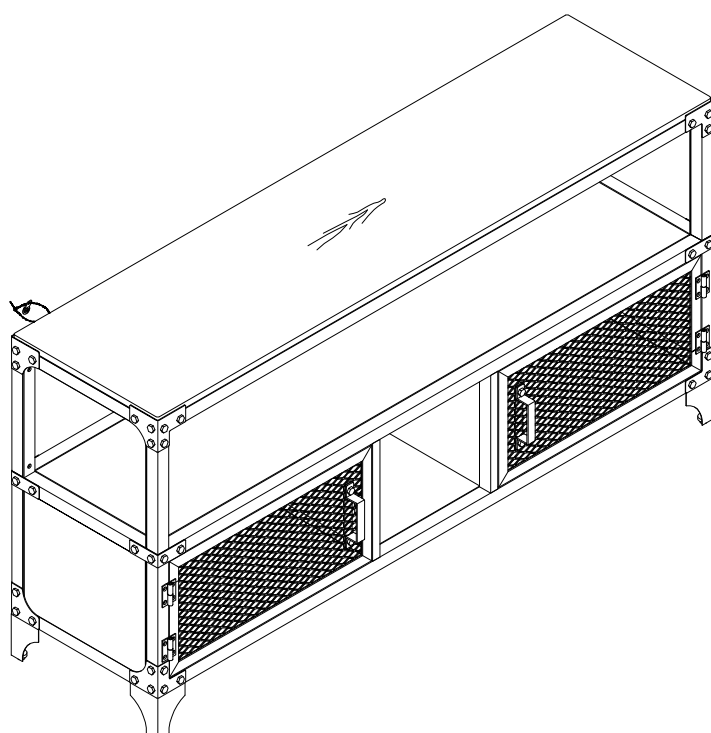 

**2 - People**  
Recommended

## ASSEMBLY RATING



EASY —————> DIFFICULT

The Assembly Rating is a 5-point system showing the level of effort needed to assemble a specific product.



FOA Intro

Thank you for your purchase!

We hope you enjoy this new addition to your home for many years to come.

Our commitment to providing quality products does not simply end when you purchase our product. We fully stand behind our products from start to finish. Our customer service department is available Monday – Friday 8:30 AM – 5:30 PM Pacific Time and can help with assembly questions as well as, if necessary, replacing damaged or missing parts. To help expedite our service, please have these assembly instructions readily available, along with your order receipt.



Consumer Hotline  
Toll-Free 1-888-980-5122



WEBSITE  
[www.foagroup.com](http://www.foagroup.com)



Monday to Friday  
8:30AM- 5:30PM (PT)



E-MAIL  
[cs.ec@foagroup.com](mailto:cs.ec@foagroup.com)



foagroup



FurnitureOfAmerica



## CHECK BEFORE STARTING

☐

### Are you missing anything?

Double-check all parts, hardware and accessories listed are all accounted for.

☐

### Check out our Quick Tips!

We recommend reviewing the pre-assembly handouts. Even experts need a refresher now and then!

☐

### Should we send any replacements?

Are there any irregularities or flaws in the parts? We can send replacements!

☐

### Prep Time!

Please review the assembly instructions and all diagrams prior to assembling.

# PRE ASSEMBLY INTRODUCTION

We understand building ready-to-assemble furniture can be a challenging experience for some. To help avoid confusion, we have provided some helpful tips that may speed up the process.



## Teamwork

ALWAYS have at least two people to help with transporting and assembling the product to avoid potential injury and/or damage.



## Suitable Location

Assembling near the area of the intended location is highly recommended.



## Sufficient Space

Make sure you have enough space to move around during the assembly.



## Avoid Scratches

Use cardboard, blankets or a carpeted area while assembling furniture to prevent to prevent scratches and damages.



## Flat Surface

Make sure the furniture rests on a flat and level surface with each leg evenly touching the floor.

 
# ASSEMBLY AND CARE ADVICE



**FAILURE TO FOLLOW THE GUIDELINES BELOW MAY  
RESULT IN INJURY AND/OR PROPERTY DAMAGE.**



Position each part correctly  
and insert screws or bolts into  
their respective holes.

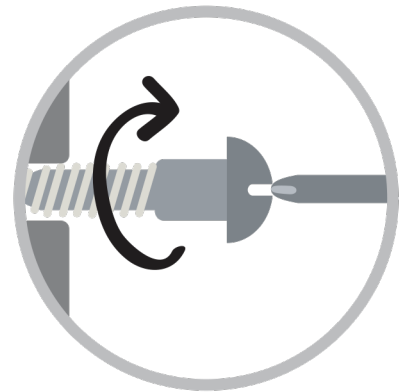

Turn clockwise to tighten and  
only tighten when step is  
completed or when instructed  
to do so.



Save the instructions and store  
any supplied tools for later  
maintenance.

Use the appropriate hand tools  
or power tools for assembly.  
Select steps, such as tightening  
screws and/or bolts, may require  
hand tools to avoid causing  
damage during assembly.



After two weeks, check and  
tighten any loose hardware and  
repeat again every six months  
thereafter.


**IT IS THE USER'S RESPONSIBILITY TO MAINTAIN THE FURNITURE. THE HARDWARE MAY LOOSEN OVER TIME AND MAY CAUSE THE FURNITURE TO BE WOBBLY AND UNABLE TO SUPPORT ITS INTENDED WEIGHT CAPACITY. THIS MAY LEAD TO COLLAPSE AND MAY CAUSE SERIOUS INJURY.**

# TV STAND

CM5546-TV




 - Please keep instructions for future reference.
- Check the quantity and irregularity of parts and hardware before you start.

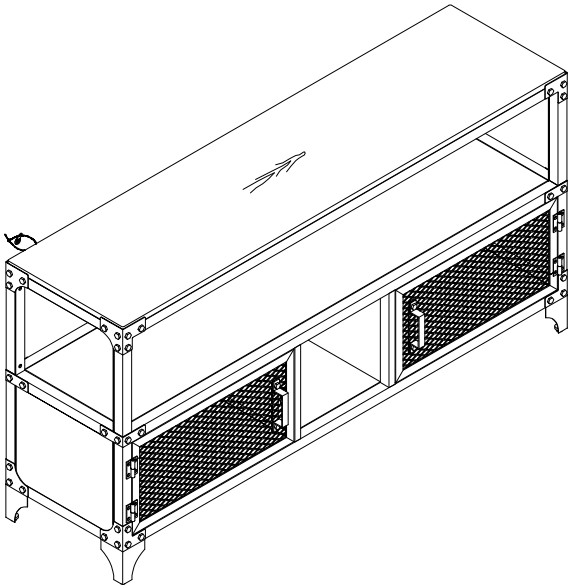


## PARTS
 
#1 1pc

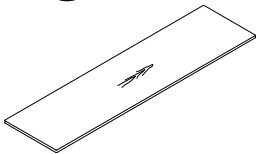


Top board

#2 2pcs

 


Side frame

#3 2pcs

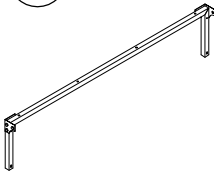 


Up frame

#4 1pc

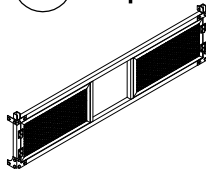 

Front plate

#5 1pc

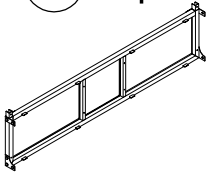 


Back frame

#6 2pcs



 Inside plate

#7 2pcs

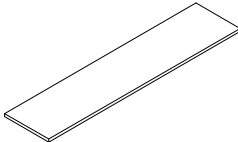

Plate

#8 4pcs



Foot

#9 2pcs




Handle

# TV STAND

CM5546-TV



 - Please keep instructions for future reference.
- Check the quantity and irregularity of parts and hardware before you start.

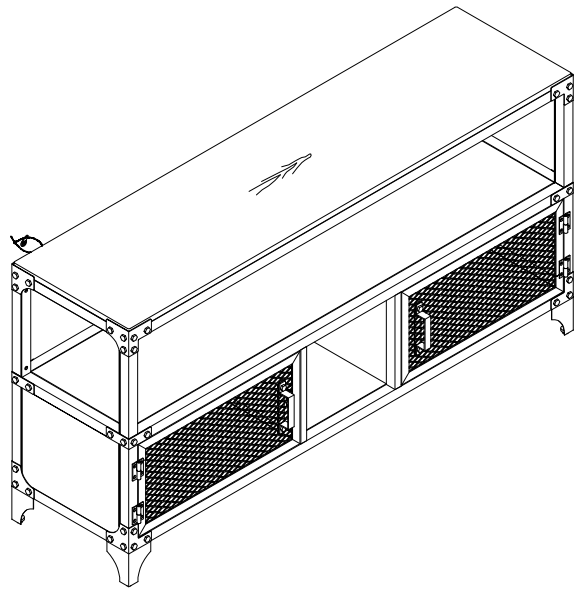

## HARDWARE

#A 8pcs



Bolt 3/16" x 3/8"

#B 20pcs



Bolt 1/4" x 5/8"

#C 8pcs



Bolt 1/4" x 1-5/8"

#D 4pcs



Bolt 3/8" x 5/8"

#E 4pcs



Nut M10

#F 4pcs



Adjustable Foot  
M6 x 16

#G 1pc



 
Allen Wrench M4

#H 1pc



Socket Wrench M10

#I 1pc



Open End Wrench

#J 1pc



Screw M4x37

#K 2pcs



Metal Plate

#L 1pc



Anchor

#M 1pc

 


Girding

# ASSEMBLY INSTRUCTIONS

1




## Exploded View

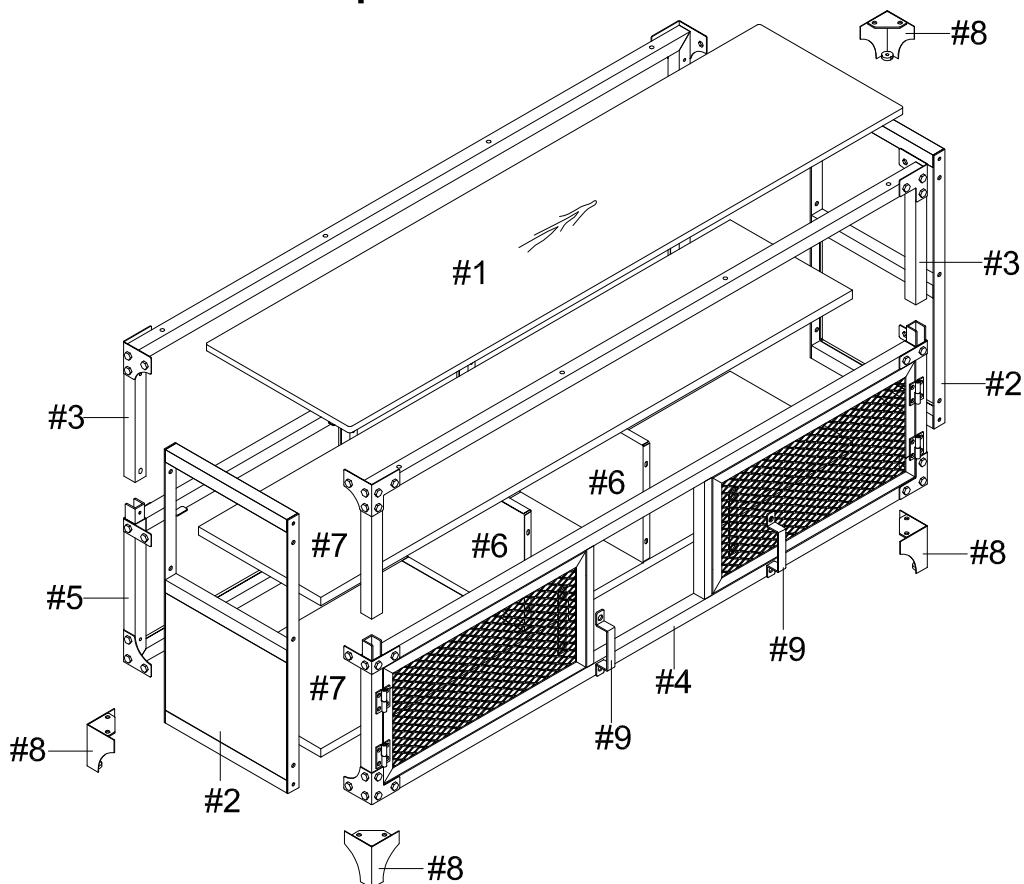

2

- Part #2 x 2pcs
- Part #3 x 2pcs
- Part #4 x 1pc
- Part #5 x 1pc
- Hardware #B x 12pcs
- Hardware #G x 1pc

   Align frames (#3) to frames (#4,5), then align side frames to the front and back frame. Secure by using bolts (#B).

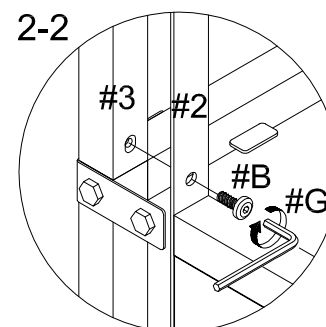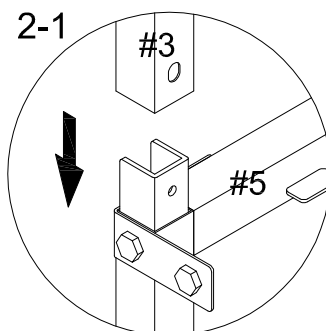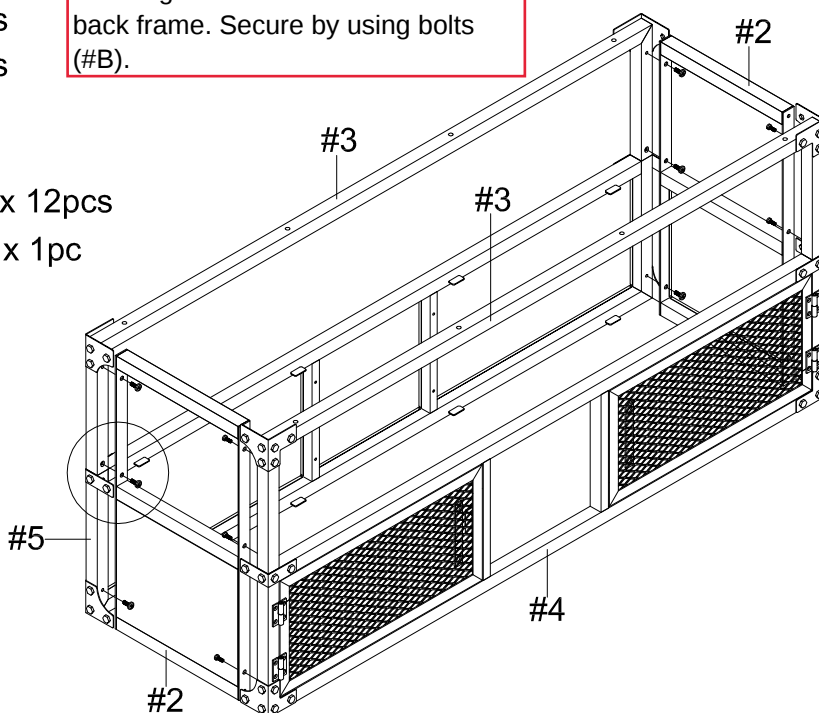


# ASSEMBLY INSTRUCTIONS

## 3


Part #7 x 1pc

 Place plate (#7) to the bottom of the frame.

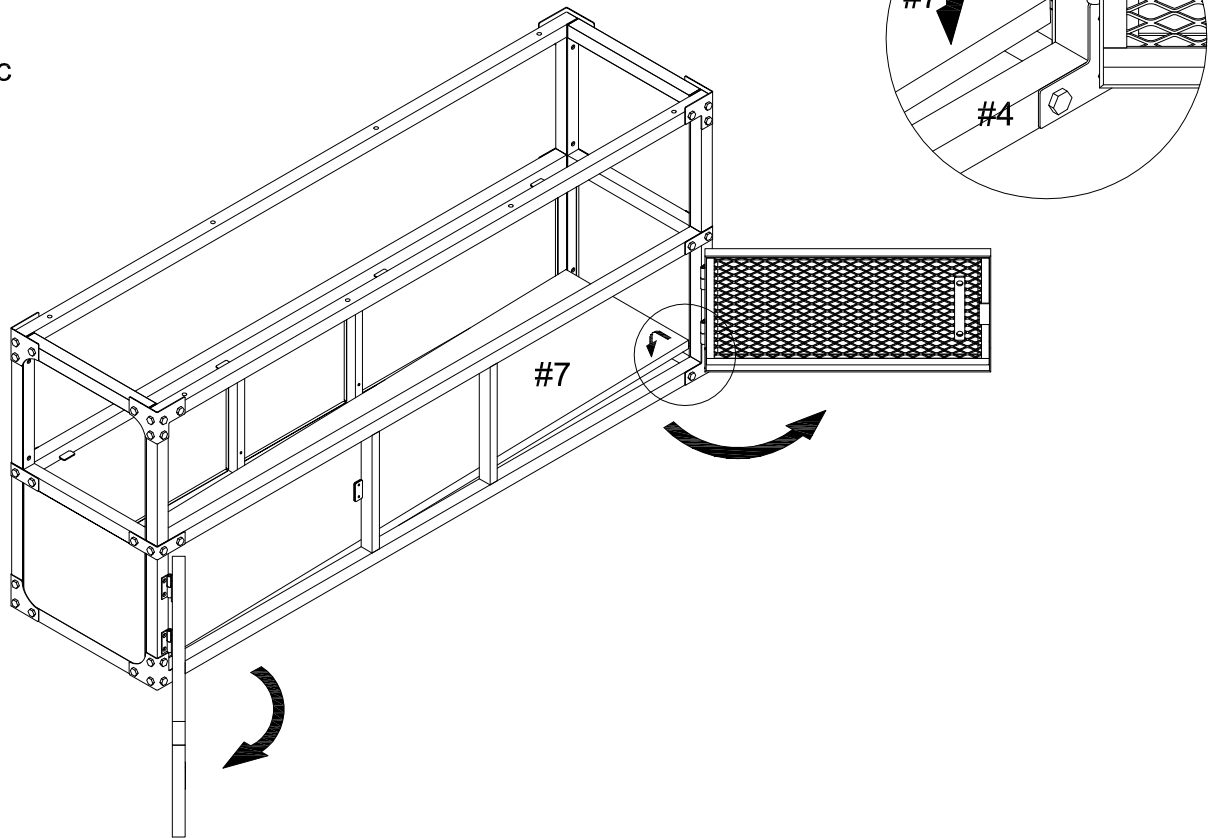

## 4

 Part #6 x 2pcs  
Hardware #A x 8pcs

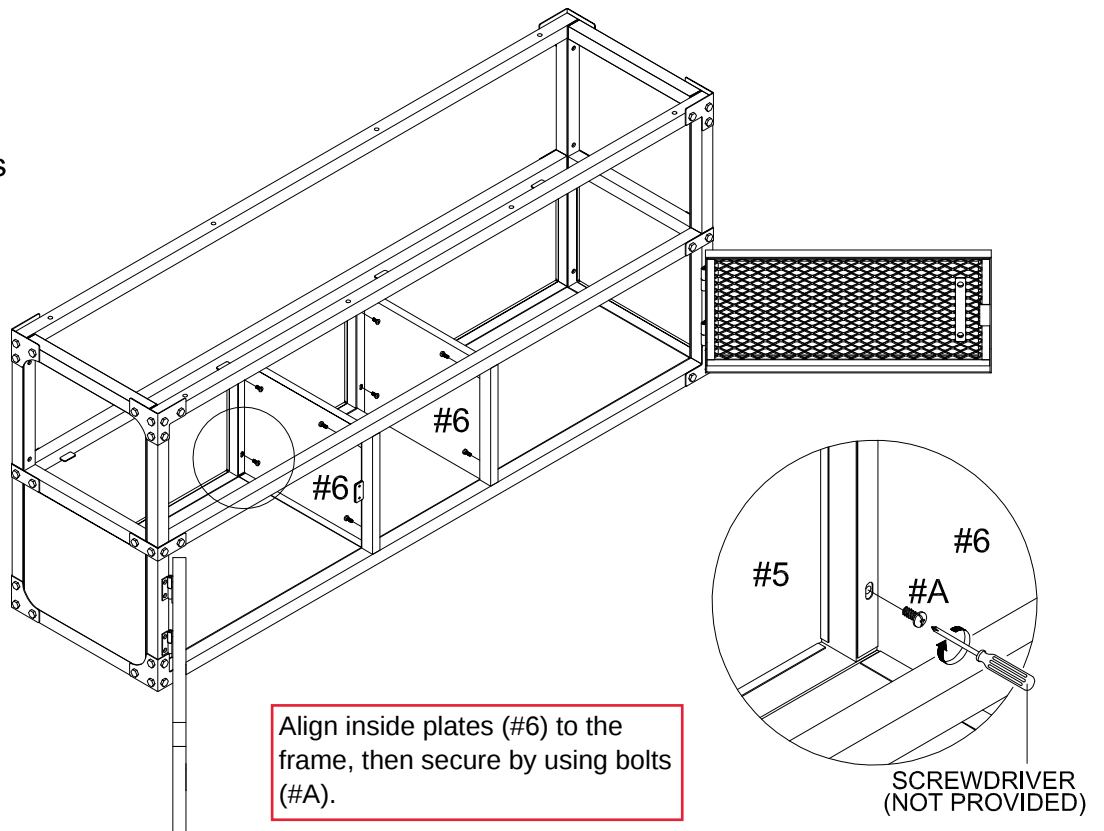

Align inside plates (#6) to the frame, then secure by using bolts (#A).

# ASSEMBLY INSTRUCTIONS

## 5

 
Part #9 x 2pcs

Hardware #D x 4pcs

Hardware #E x 4pcs

Hardware #H x 1pc


Hardware #I x 1pc

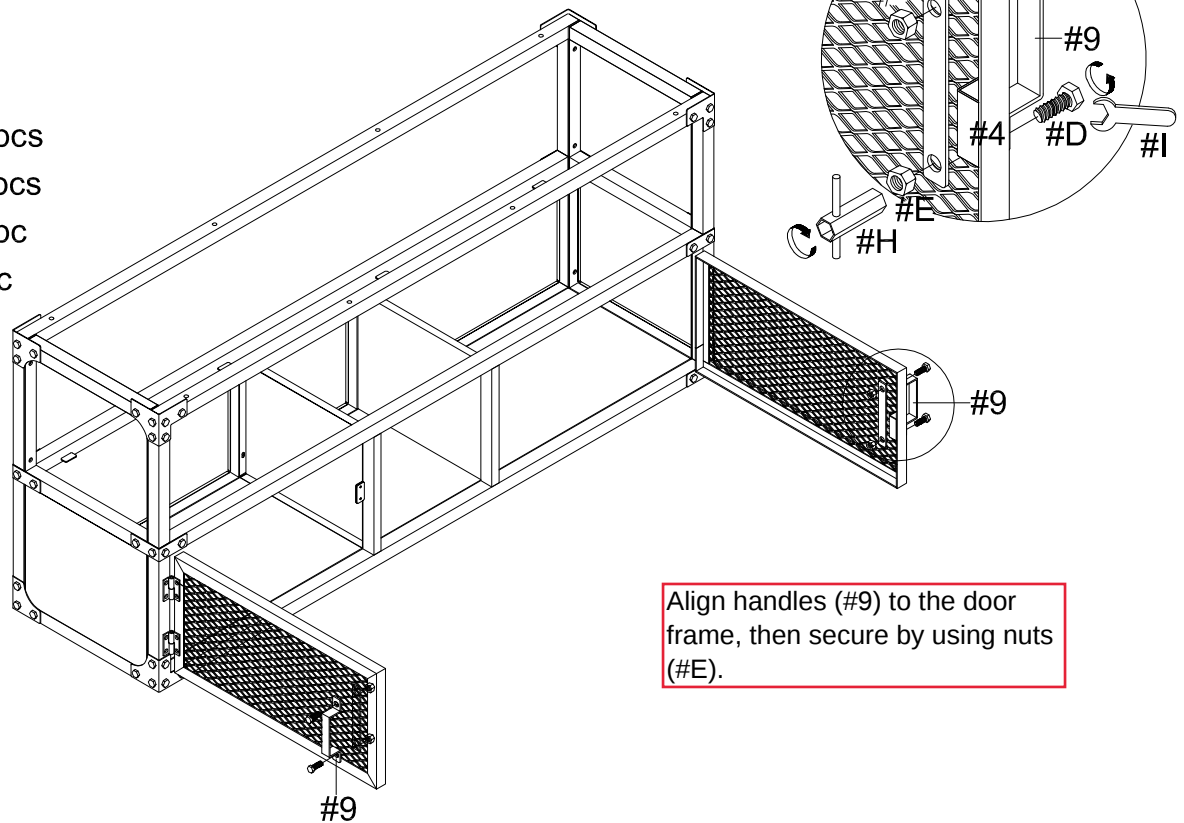

Align handles (#9) to the door frame, then secure by using nuts (#E).

## 6

 Part #7 x 1pc

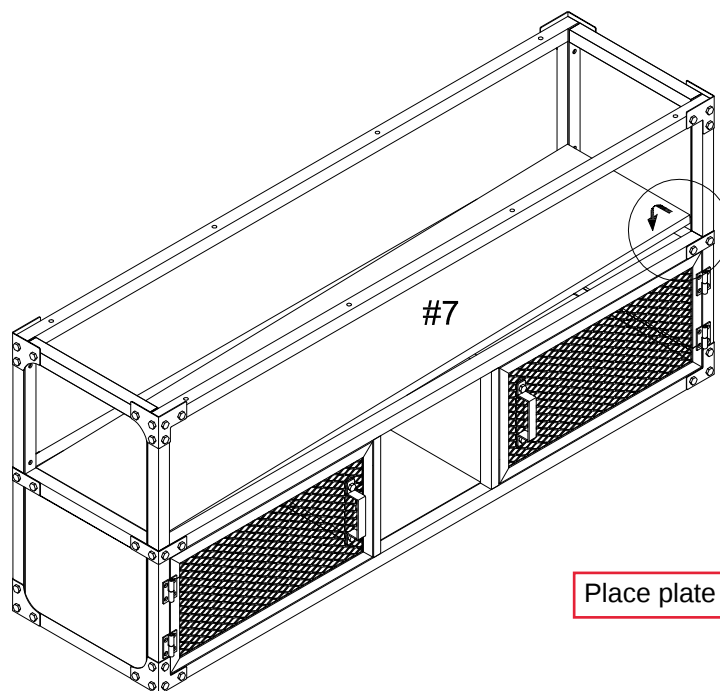

Place plate to the middle of the frame.

# ASSEMBLY INSTRUCTIONS

## 7

 
 
Part #1 x 1pc

Hardware #C x 8pcs

Hardware #G x 1pc

Hardware #K x 1pc

Align top board (#1) to the top of the frame, then secure by using bolts (#C).

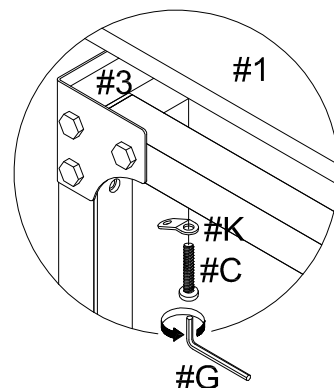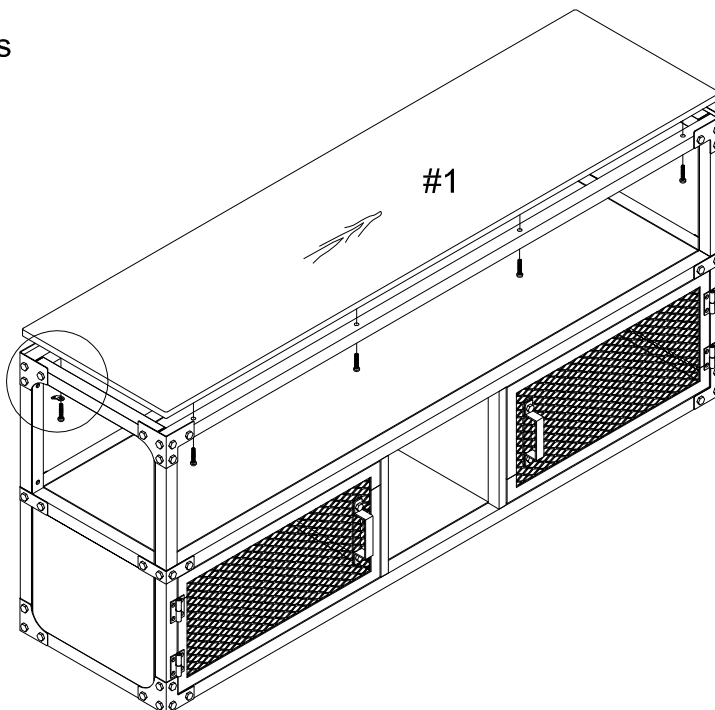



## 8

Part #8 x 4pcs

Hardware #B x 8pcs

Hardware #F x 4pcs

  Hardware #G x 1pc

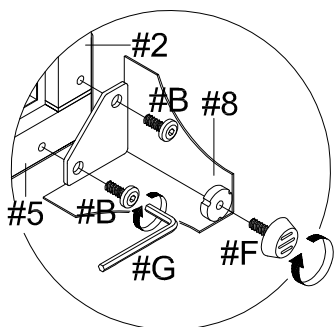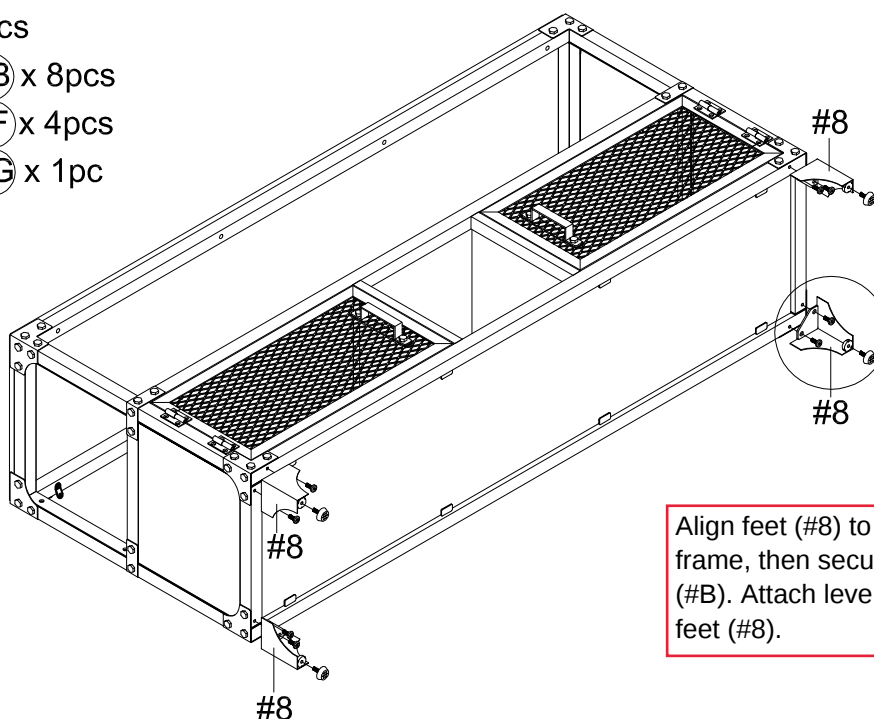

Align feet (#8) to the bottom of the frame, then secure by using bolts (#B). Attach levelers (#F) to the feet (#8).


# ASSEMBLY INSTRUCTIONS

 9

Hardware #J x 1pc


Hardware #K x 1pc

Hardware #L x 1pc

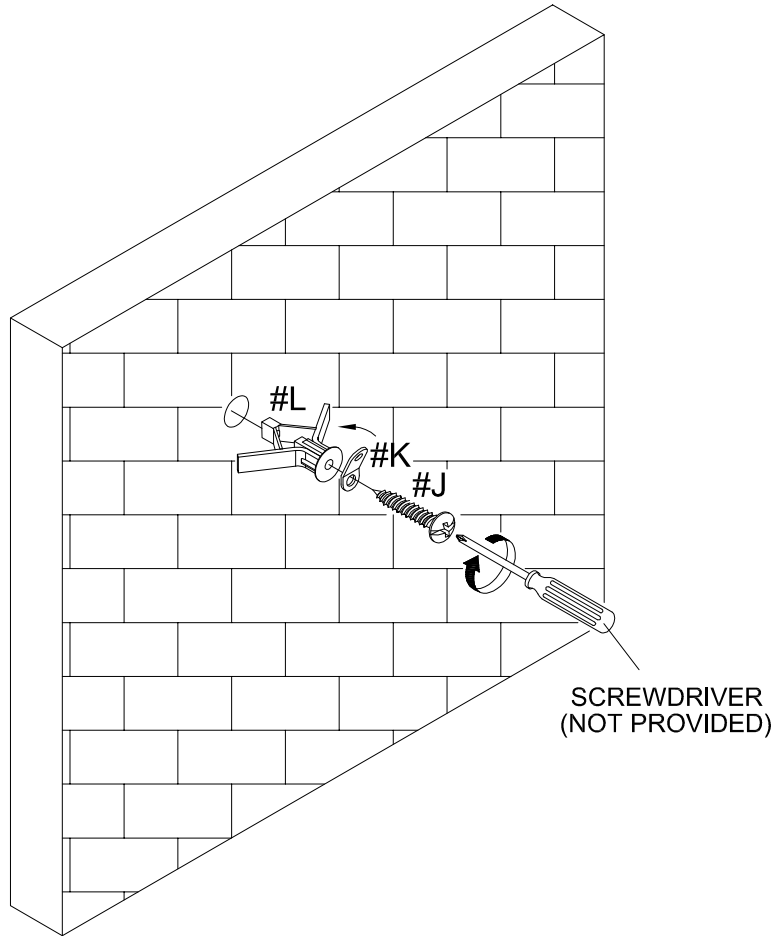


10

 Hardware #M x 1pc

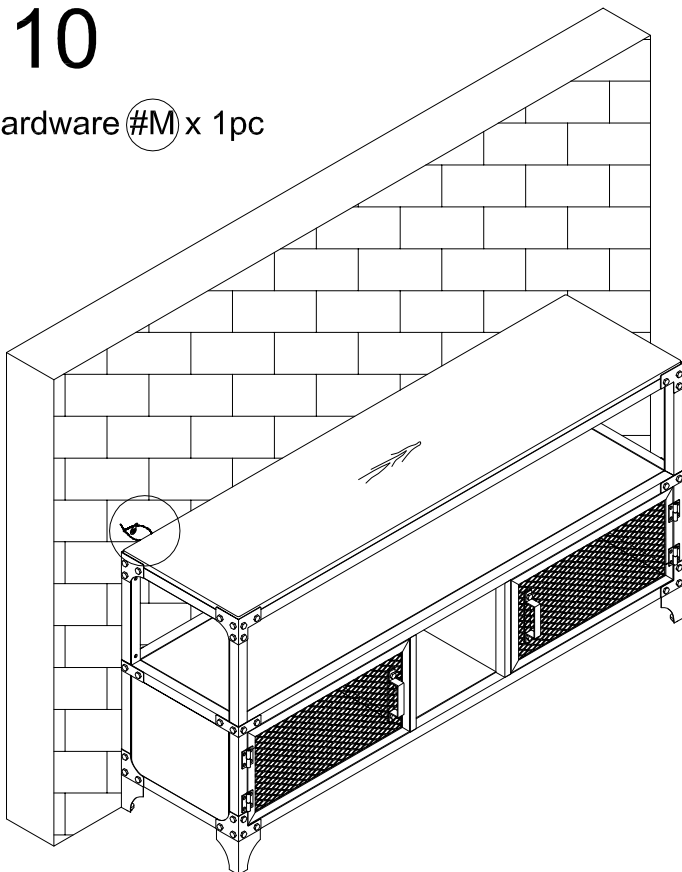

 To Prevent Tip over  
Product Must Be  
Attached To Wall

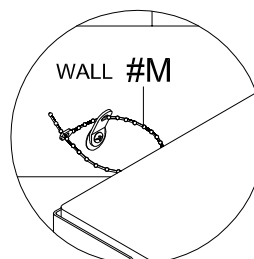

## ASSEMBLY COMPLETED



Please ensure the furniture rests on an even and flat surface. If the product wobbles or feels loose, double-check all bolts and/or screws are properly tightened and secured.



### Keep this handy!

Please retain this instruction manual and any order-related information for future reference.



### Lift, don't drag!

To avoid damage to product please always LIFT the product when transporting or adjusting the placement.

 
# ASSEMBLY INSTRUCTIONS

## Wall Mounting and Fixing



### EXPANSION WALL ANCHOR

Our provided expansion wall anchors are only suitable for masonry walls, such as drywall, plaster or concrete, and are best for holding lightweight items or for anti-tip prevention. If you are unsure of the correct wall anchor to use with the product, please request professional guidance. Liability for product damage or failure due to using the incorrect anchors will fall on the installer.

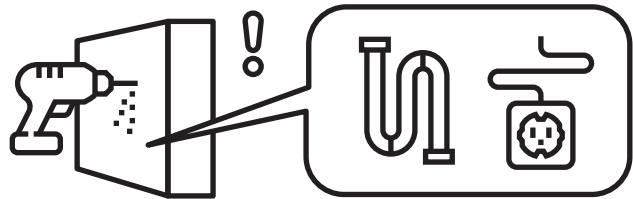


### CHECK BEFORE PROCEEDING


Prior to drilling or hammering, please check for wires or pipes. We recommend using a stud finder to locate a stud, which will offer more appropriate resistance and hold more weight.

## QUICK TIPS

 
1. If unsure of the proper size, always choose a larger screw and wall anchor.

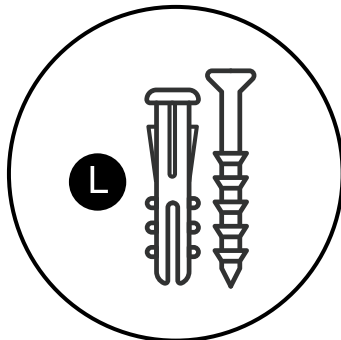

 
2. Match the drill bit to the wall anchor and hole size.

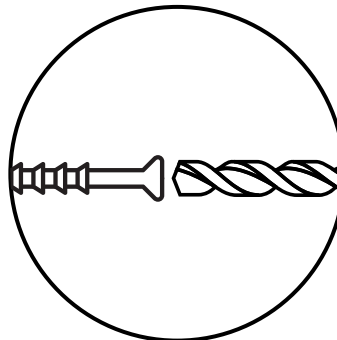

 3. Only drill horizontally. Do not force the drill or enlarge the hole for the wall anchor.

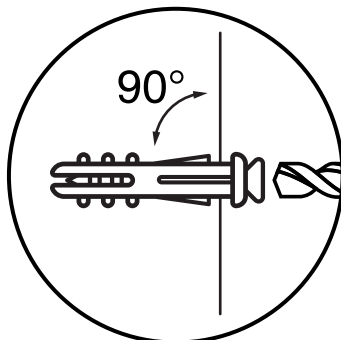

 4. Take extra care when drilling into high walls or ceramic tiles. Wall anchors should be a tight fit for the hole. Never use wall anchors in ceilings.

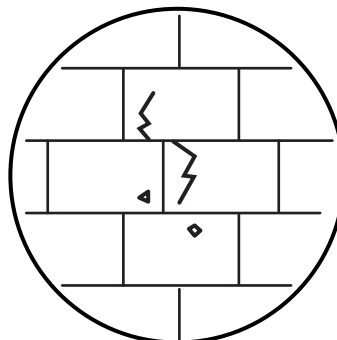

### MAINTENANCE



We recommend a yearly check to see if the wall anchor or screw has loosened. If so, please remove the existing wall anchor and screw, and use a new anchor.