TOOLS REQUIRED





Philips Screwdriver

(Not Included)



2 - Persons Recommended

ASSEMBLY RATING



EASY → DIFFICULT

The Assembly Rating is a 5-point system showing the level of effort needed to assemble a specific product.

VERSION # 19-09-18



Are you missing anything?	Check out our Quick Tips!
Double-check all parts, hardware and accessories listed on Page 6 are accounted for.	We recommend reviewing the pre-assembly handouts. Even experts need a refresher now and then!
Should we send any replacements?	Prep Time!
Are there any irregularities or flaws in the parts? We can send replacements!	Please review the assembly instructions and all diagrams prior to assembling. Arrange parts as recommended on Page 7 and group identical hardware together to make assembling easier.

PRE ASSEMBLY INTRODUCTION

We understand building ready-to-assemble furniture can be a challenging experience for some. To help avoid confusion, we have provided some helpful tips that may speed up the process.





Teamwork

ALWAYS have at least two people to help with transporting and assembling the product to avoid potential injury and/or damage.





Suitable Location

Assembling near the area of the intended location is highly recommended.





Sufficient Space

Make sure you have enough space to move around during the assembly.





Avoid Scratches

Use cardboard, blankets or a carpeted area while assembling furniture to prevent scratches.





Flat Surface

Make sure the furniture rests on a flat and level surface with each leg evenly touching the floor.

ASSEMBLY AND CARE ADVICE




FAILURE TO FOLLOW THE GUIDELINES BELOW MAY RESULT IN INJURY AND/OR PROPERTY DAMAGE.



Position each part correctly and insert screws or bolts into their respective holes.



Use the appropriate hand tools or power tools for assembly. Select steps, such as tightening screws and/or bolts, may require hand tools to avoid causing damage during assembly.

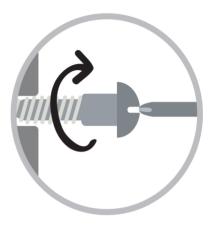

Turn clockwise to tighten and only tighten when step is completed or when instructed to do so.



Save the instructions and store any supplied tools for later maintenance.



After two weeks, check and tighten any loose hardware and repeat again every six months thereafter.

IT IS THE USER'S RESPONSIBILITY TO MAINTAIN THE FURNITURE. THE HARDWARE MAY LOOSEN OVER TIME AND MAY CAUSE THE FURNITURE TO BE WOBBLY AND UNABLE TO SUPPORT ITS INTENDED WEIGHT CAPACITY. THIS MAY LEAD TO COLLAPSE AND MAY CAUSE SERIOUS INJURY.


CAM LOCK FASTENER ASSEMBLY INSTRUCTIONS

Note:

Every cam lock bolt must have a cam lock connector in order to fasten the parts together.






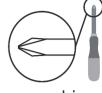


cam bolt

cam lock


screwdriver

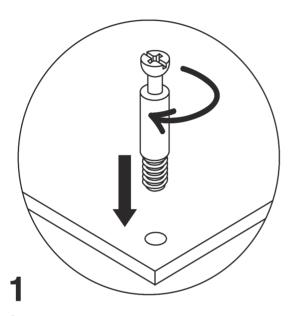


Screw the cam bolt into panel.

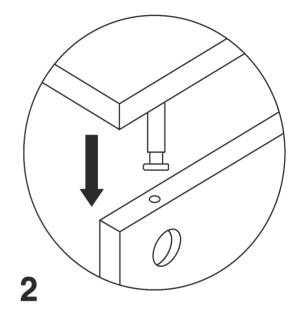

Insert the cam bolt into the bolt hole of joint panel.

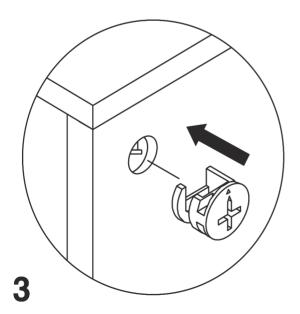

Align the cam lock with its side opening (or arrow) pointing to cam bolt.

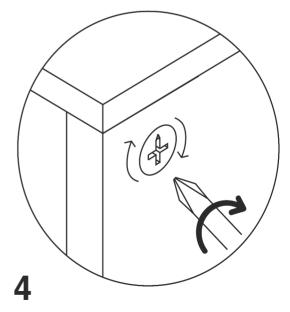


Turn the cam lock clockwise gently until it will not turn any more.


END TABLE



Front Right Leg

- Please keep instructions for future reference.
- Check the quantity and irregularity of parts and hardware before you start.

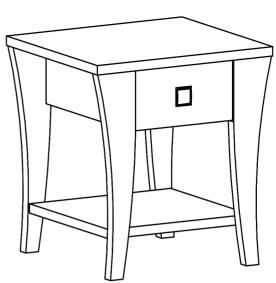

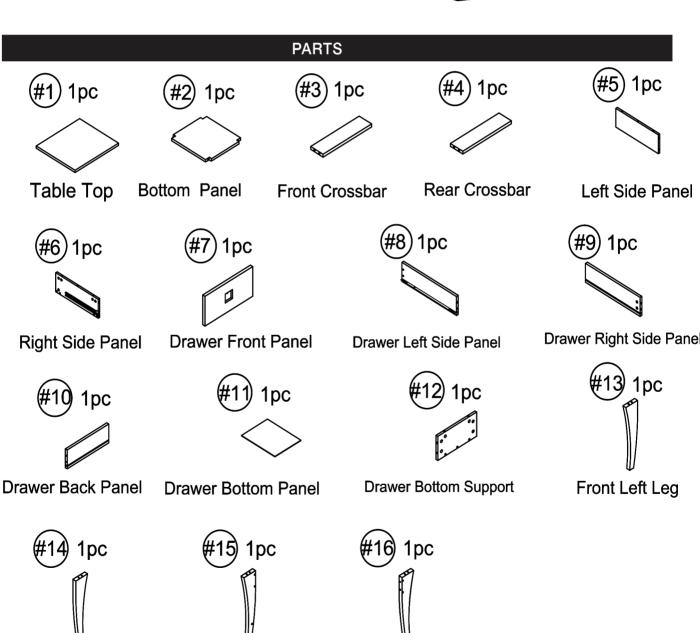

Rear Right Leg

Rear Left Leg

END TABLE



- Please keep instructions for future reference.
- Check the quantity and irregularity of parts and hardware before you start.



HARDWARE



32pcs



32pcs



12pcs



4pcs





⊕⇒**∑**m

Large Cam Bolt L29

Large Cam Lock Ø15

Wood Dowel Ø8x25

Small Cam Bolt L20

4pcs



1pc

#H) 1pc



(*)DDDDD-

Small Cam Lock Ø12

Screw Ø4x30

Handle 48x48x14

Handle Screw Ø4x10

4pcs



Sticker Ø22

4pcs




Foot Tack

1pc



Glue

Part \$\pi\$ x1pc
Part \$\pi\$ x1pc

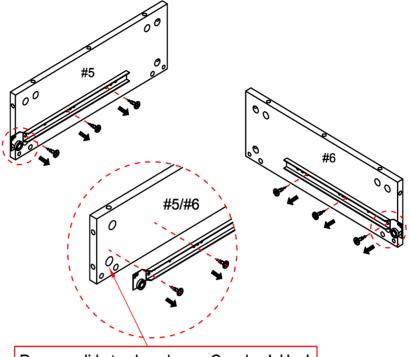

Remove slide track and open Cam Lock Hoel.




Tip: Place parts on the flat level surface to ease alignment and assemble.

2

Attach dowels (#C) and cam bolts (#A) to the holes of the left and right side panels (#5,6). Align front and rear crossbars (#3,4) to the cam bolts (#A) and dowels (#C) of left and right side panels (#5,6). Secure by using cam locks (#B).

Part #3 x1pc
Part #4 x1pc
Hardware #A x4pcs
Hardware #B x 4pcs
Hardware #C x 4pcs




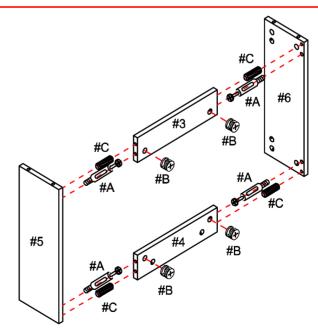

Attach cam bolts (#A) to the holes of the rear left and right legs (#15,16). Align drawer bottom support (#12) to the cam bolts (#A) of rear left and right legs (#15,16). Secure by using cam locks (#B).


3


Part #12 x1pc
Part #15 x1pc
Part #16 x1pc
Hardware #A ×4pcs
Hardware #B ×4pcs

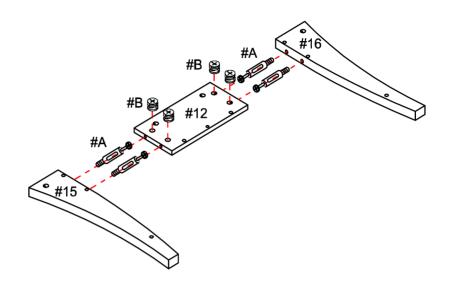

4

Hardware#A ×6pcs
Hardware#B ×6pcs
Hardware#C ×1pc

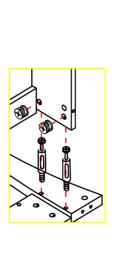

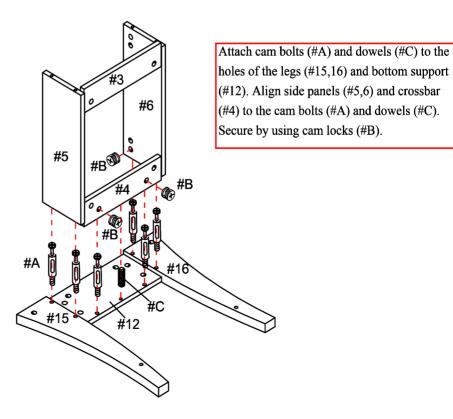


9 / 15

5

Part #2 x1pc
Hardware #A x2pcs
Hardware #B x2pcs

Attach cam bolts (#A) to the holes of the legs (#15,16). Align bottom panel (#2) to the cam bolts (#A) of the legs (#15,16). Secure by using cam locks (#B).

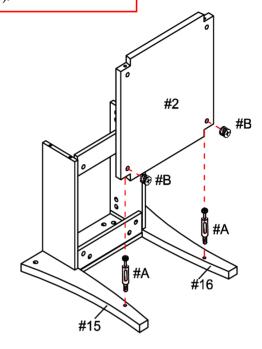

6


Attach cam bolts (#A) to the holes of the legs (#13,14). Align legs (#13,14) to the holes of the product. Secure by using cam locks (#B).


Part #13 x1pc

Part #14 x1pc

Hardware #A × 6 pcs


Hardware#B ×6pcs

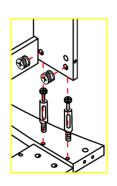

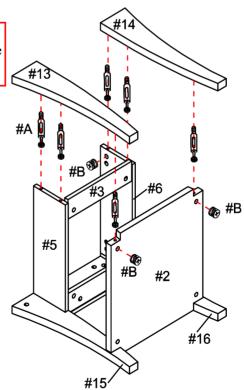


7



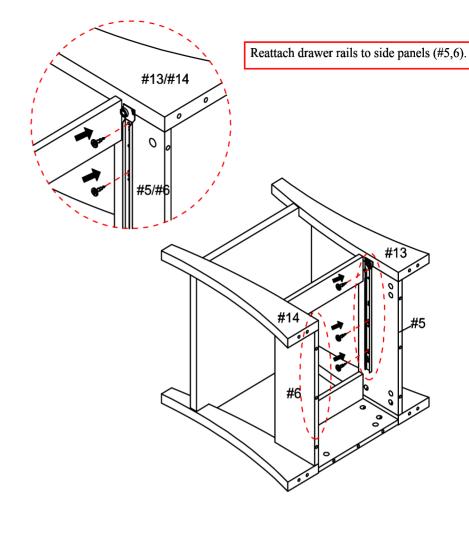


8

Part #1 x1pc Hardware #A x10pcs Attach cam bolts (#A) to the holes of the top panel (#1).

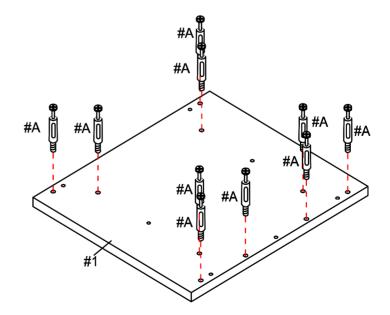


9

Hardware #B ×10pcs
Hardware #C ×7pcs
Hardware #I ×4pcs

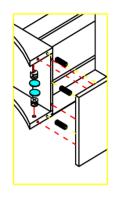


Attach dowels (#C) to the holes of the top panel (#1), then align top panel (#1) to the holes of the base. Secure by using cam locks (#B), then cover cam locks (#B) by using stickers (#I).

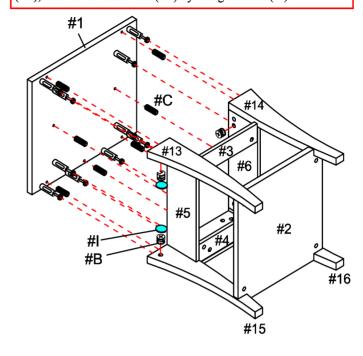

10


Hardware #J ×4pcs

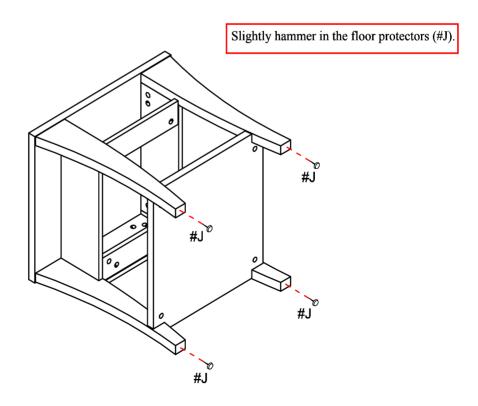


11

Align handles to the front drawer panel (#7), then secure by using bolts and washers (#H).

Part #7 x 1pc
Hardware #6 x 1pc
Hardware #H x 1pc

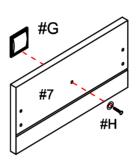

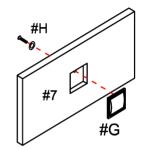

12

Align side drawer panels (#8,9) to the holes of the back drawer panel (#10), then secure by using screws (#F).


#Fx 4pcs

Part #8 x 1pc

Part #9 x 1pc

Part #10 x 1pc

Hardware#F x 4pcs

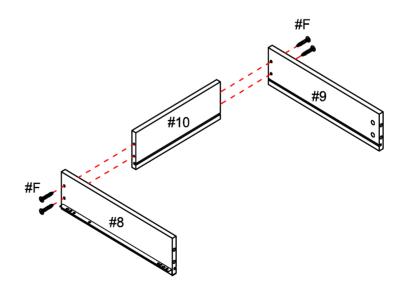




Align and slide bottom panel (#11) through the thin lined gaps of the drawer panels.

13


Part #11 x 1pc

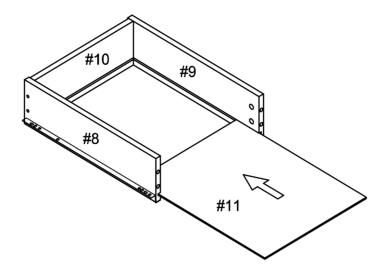

14

Attach cam bolts (#D) to the holes of the front drawer panels (#7). Align front drawer panel (#7) to the holes of the drawer. Secure by using cam bolts (#E).

Hardware#D × 4pcs
Hardware#E × 4pcs

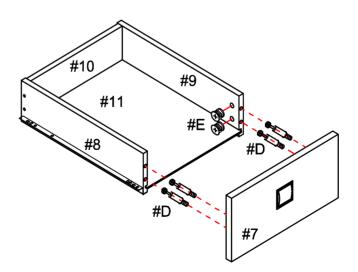



ASSEMBLY COMPLETED



Please ensure the furniture rests on an ever and flat surface. If the product wobbles or feels loose, double-check all bolts and/or screws are properly tightened and secured.

✓ Keep this handy!

Please retain this instruction manual and any order-related information for future reference.