





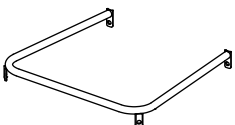
CROSLEY

FURNITURE


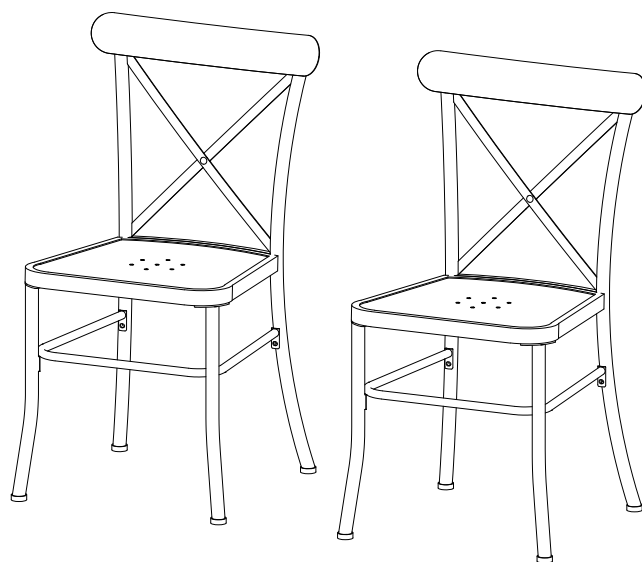


Outdoor Dinning Chair Set
CO6270



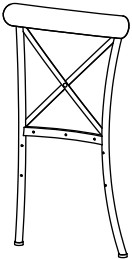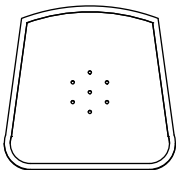PART LIST


A 	B 	C 	D 
Back Panel 2 PCS	Seat Panel 2 PCS	Leg 4 PCS	Bottom Frame 2 PCS

  HARDWARE LIST

#1 	#2 	#3 	#4 
1/4' x 1"L Long Bolt 6 PCS (Extra 1)	1/4' x 1/2"L Bolt 20 PCS (Extra 1)	Washer 26 PCS (Extra 1)	Allen Wrench 1 PC


Step 1. Lay back panel (part A) on a soft flat surface, such as carpet, as shown below. Attach seat panel (part B) to back panel (part A) using long bolts (part #1), bolts (part #2), washers (part #3) and allen wrench (part #4).

NOTE: Please do not fully tighten bolts until unit is fully assembled.

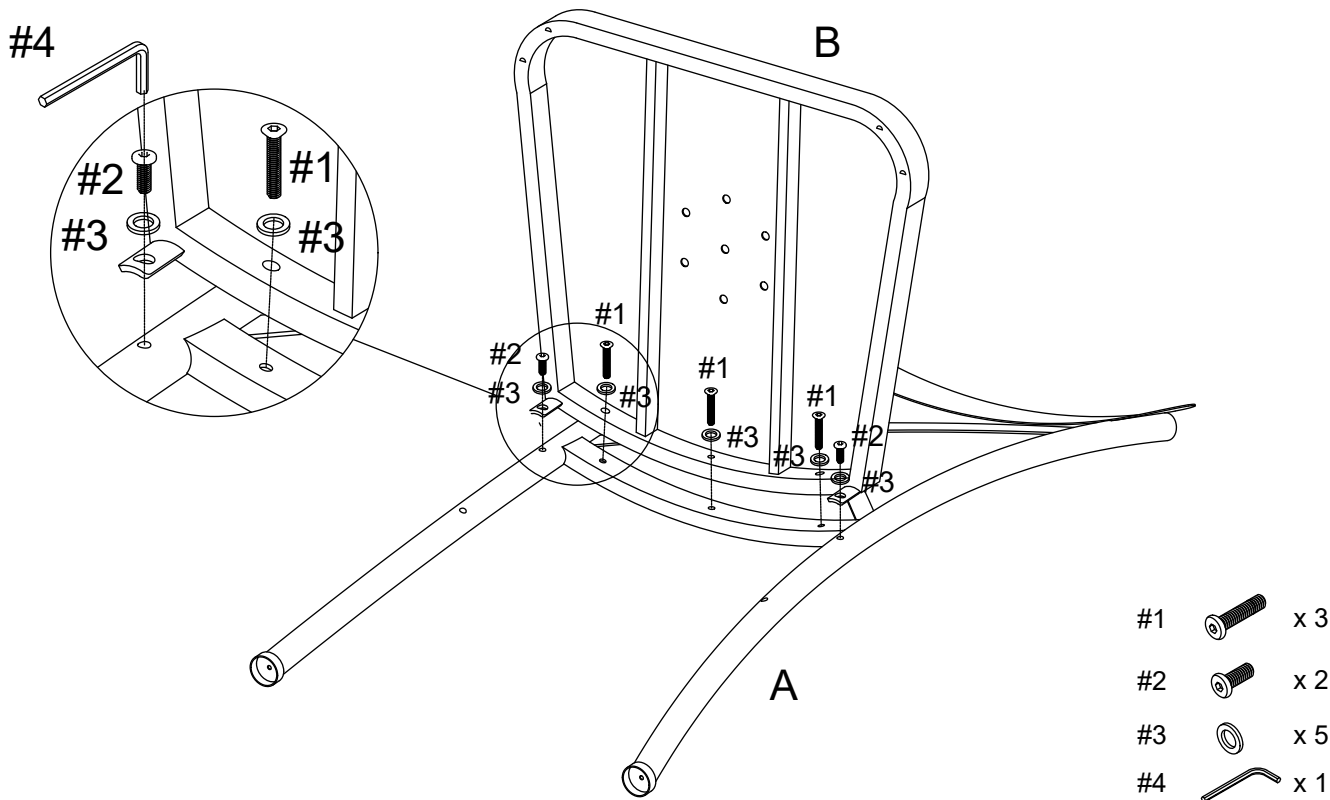


Step 2. Attach legs (part C) to seat panel (part B) using bolts (part #2), washers (part #3) and allen wrench (part #4).

NOTE: Please do not fully tighten bolts until unit is fully assembled.

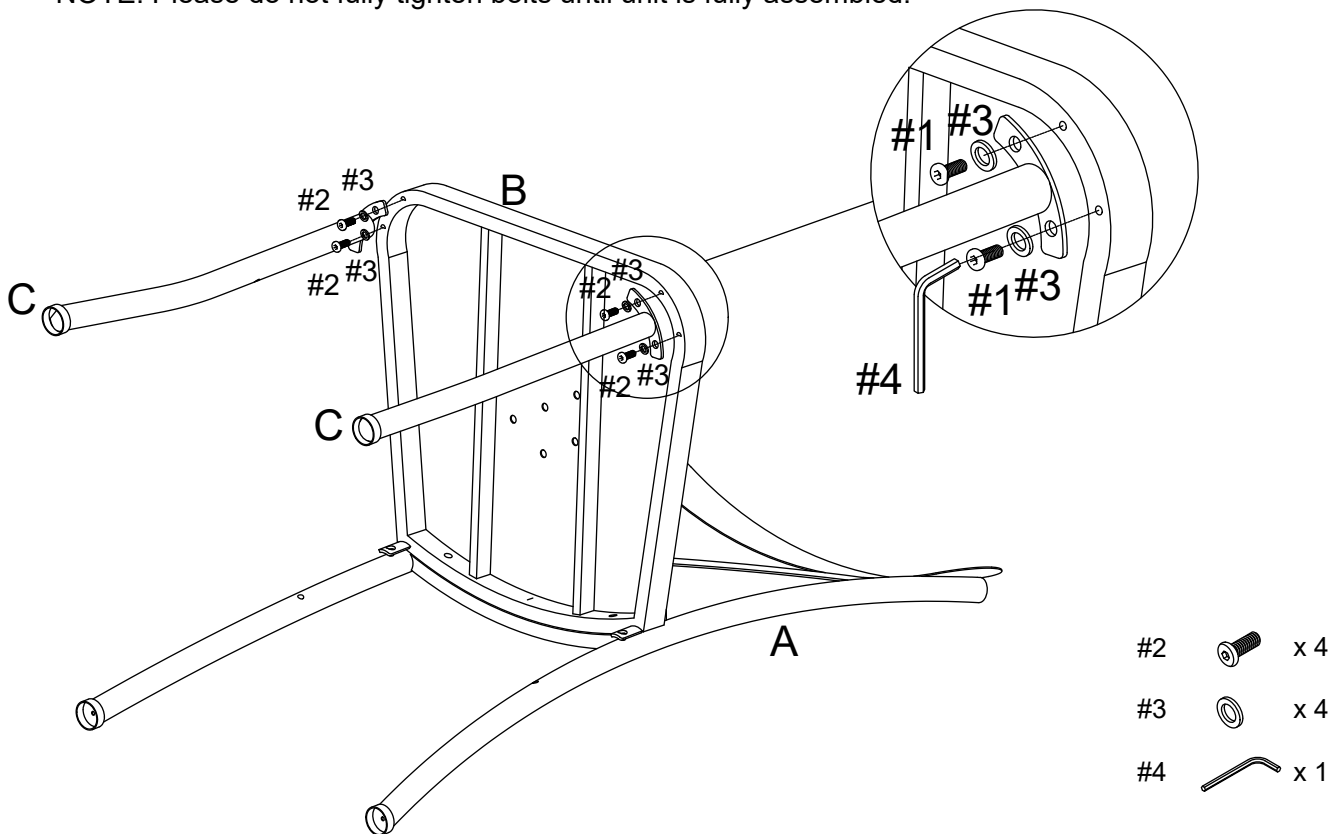

Step 3. Attach bottom frame (part D) to back panel (part A) and legs (part C) using bolts (part #2), washers (part #3) and allen wrench (part #4).

NOTE: Please fully tighten all bolts at this time.

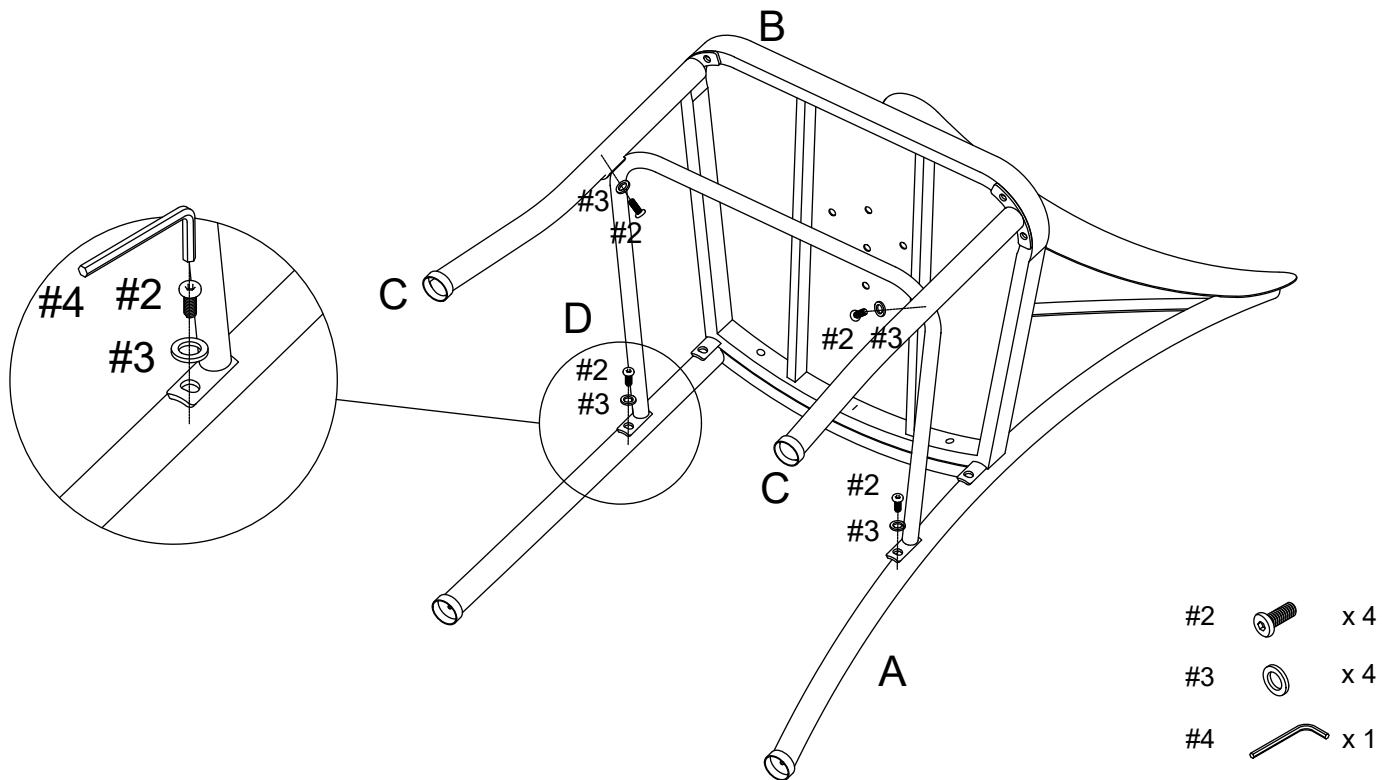

Step 4. Carefully turn units upright. Repeat steps 1-3 to assemble remaining chair.

