
ASSEMBLY INSTRUCTIONS

 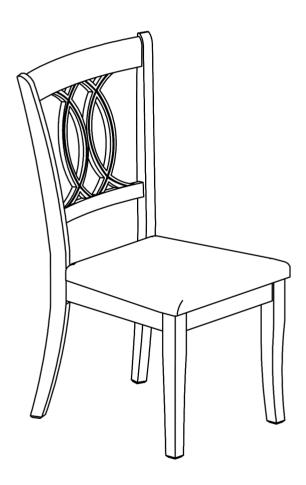


TOOLS REQUIRED



Allen Wrench

(Included)



2 - Persons Recommended

ASSEMBLY RATING



EASY — DIFFICULT

The Assembly Rating is a 5-point system showing the level of effort needed to assemble a specific product.



Are you missing anything?	Check out our Quick Tips!
Double-check all parts, hardware and accessories listed on Page 6 are accounted for.	We recommend reviewing the pre-assembly handouts. Even experts need a refresher now and then!
Should we send any replacements?	Prep Time!
Are there any irregularities or flaws in the parts? We can send replacements!	Please review the assembly instructions and all
• •	diagrams prior to assembling. Arrange parts as recommended on Page 7 and group identical hardware together to make assembling easier.

PRE ASSEMBLY INTRODUCTION

We understand building ready-to-assemble furniture can be a challenging experience for some. To help avoid confusion, we have provided some helpful tips that may speed up the process.





Teamwork

ALWAYS have at least two people to help with transporting and assembling the product to avoid potential injury and/or damage.





Suitable Location

Assembling near the area of the intended location is highly recommended.





Sufficient Space

Make sure you have enough space to move around during the assembly.





Avoid Scratches

Use cardboard, blankets or a carpeted area while assembling furniture to prevent scratches.





Flat Surface

Make sure the furniture rests on a flat and level surface with each leg evenly touching the floor.

ASSEMBLY AND CARE ADVICE



FAILURE TO FOLLOW THE GUIDELINES BELOW MAY RESULT IN INJURY AND/OR PROPERTY DAMAGE.



Position each part correctly and insert screws or bolts into their respective holes.




Use the appropriate hand tools or power tools for assembly. Select steps, such as tightening screws and/or bolts, may require hand tools to avoid causing damage during assembly.



Turn clockwise to tighten and only tighten when step is completed or when instructed to do so.



Save the instructions and store any supplied tools for later maintenance.

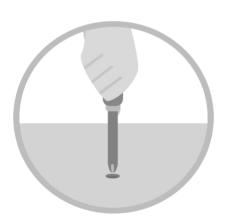


After two weeks, check and tighten any loose hardware and repeat again every six months thereafter.

IT IS THE USER'S RESPONSIBILITY TO MAINTAIN THE FURNITURE. THE HARDWARE MAY LOOSEN OVER TIME AND MAY CAUSE THE FURNITURE TO BE WOBBLY AND UNABLE TO SUPPORT ITS INTENDED WEIGHT CAPACITY. THIS MAY LEAD TO COLLAPSE AND MAY CAUSE SERIOUS INJURY.

CHAIR



- · Please keep instructions for future reference.
- Check the quantity and irregularity of parts and hardware before you start.

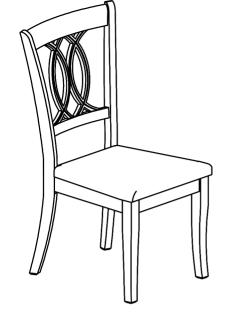

PARTS



(#1)1pc x2



Chair Back



(#2)1pc x2



Cushion Frame



(#3)2pcs x2



Front Legs

HARDWARE



) 4pcs x2



Bolt Ø1/4" x 3"





Lock Washer Ø1/4"x13mm



#B) 4pcs x2



Bolt Ø1/4" x 2-3/8"



#E) 9pcs x2



Flat Washer Ø1/4"x19mm



#C) 1pc x2




Bolt Ø1/4" x 1-1/2"





Allen Wrench M4

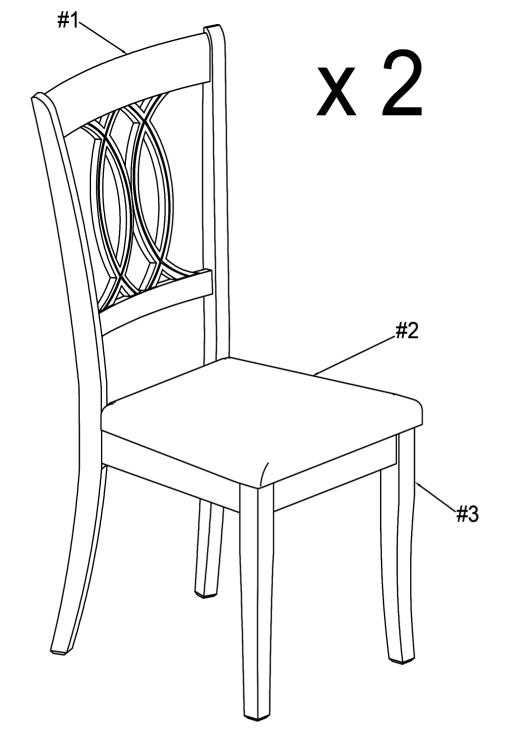

ASSEMBLY INSTRUCTIONS


Prepare 1 bolt assembly by inserting lock washer (#D), then flat washer (#E) onto bolts (#C). Align chair seat (#2) to the holes of the chairback (#1). Secure center hole with bolts (#C), but do not fully tighten. #2 #C Hardware#C) x1pc Hardware #D x1pc Hardware#E x1pc #1

Part #1) x1pc

Part #2 x1pc

Hardware#A x4pcs Hardware (#D) x4pcs Hardware#E x4pcs


Prepare 4 bolts assembly by inserting lock washer (#D), then flat washer (#E) onto bolts (#A). Secure corner holes with bolts (#A) and fully tighten all bolts.

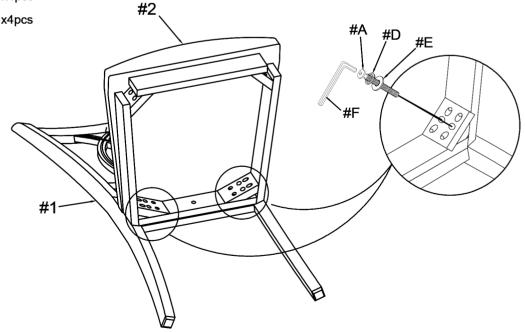


ASSEMBLY INSTRUCTIONS

3

Prepare 4 bolts assembly by inserting lock washer (#D), then flat washer (#E) onto bolts (#B). Align and secure legs (#3) onto chair seat (#2) by using bolts (#B). Fully tighten bolts.

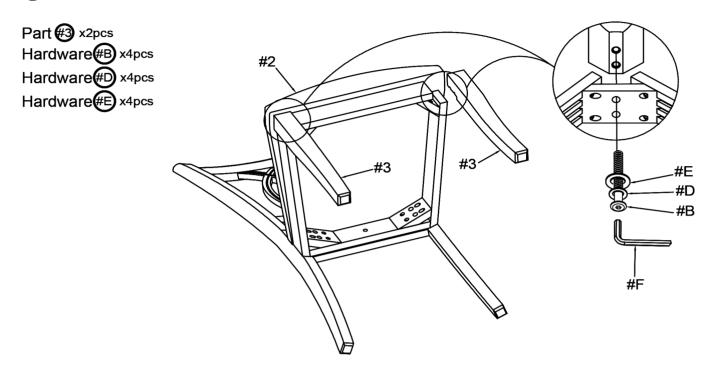

4

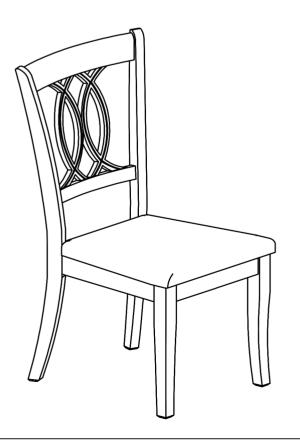





furniture rests on an even and flat surface. If the product wobbles or feels loose, double-check all bolts and/or screws are properly tightened and secured.

✓ Keep this handy!

Please retain this instruction manual and any order-related information for future reference.