

Product Name:	Metal Solar Outdoor Table Lantern
SKU #:	WHSL1550


Thank you for purchasing this LuxenHöme product. This product has been manufactured with the highest standards of safety and quality.

PLEASE READ ALL INSTRUCTIONS BEFORE USE.

Unpack the lantern carefully to ensure there are no missing or damaged parts. If any parts are missing or damaged, do not attempt to use the product.



Button Switch(ON/OFF)

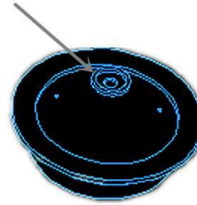

Battery



Instructions:

- On/Off Push Button: Push the on/off button down for the “ON” position.
- For best results, allow to charge in direct sunlight for a minimum of 8 hours.
- After fully charged, product will automatically light at night.
- To extend battery life, turn to the off position when not in use.
- Battery: rechargeable AA Ni-MH 300mAh 1.2V 1pc (included)

Trouble Shooting Tips:

If your solar light does not turn on at night, it may be caused by the following:

1. Check to see if the button is in the “OFF” position.
Resolution: Push the button down to the “ON” position and allow the solar light to be charged for at least 8 hours in direct sunlight.
2. Battery may not be fully charged.
Resolution: Make sure the solar light is placed in an area where the solar panel receives the maximum amount of full direct sunlight every day.
3. The solar light may be located too close to other light sources (such as porch light or street lantern).
Resolution: Relocate away from external light source.
4. The rechargeable battery may need to be replaced.
Resolution: Replace with batteries of identical specification.