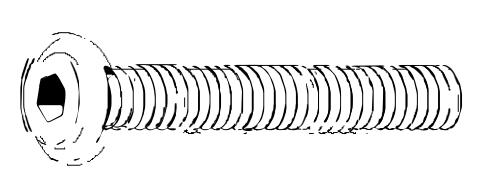
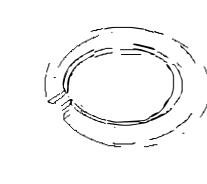
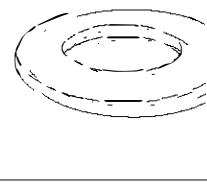
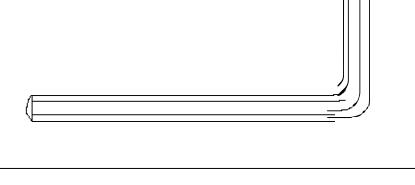





DINNING TABLE


Read instructions carefully prior to assembly.

Thank you for purchasing this quality product. Check carefully for small parts which may come loose during shipment. Remove all components from pack and place top down on soft surface such as carpet or cloth to prevent scratching the finish. Identify and count all parts as specified below.


It is recommended to use two or more people during the assembly process.

HARDWARE LIST:				
No.	Description	Sketch	Size	Q.ty
1	Allen Bolt		φ5/16" x 75mm	8 pcs
2	Lock Washer		φ5/16" x 13mm	8 pcs
3	Flat Washer		φ5/16" x 19mm	8 pcs
4	Allen Key		4mm	1 pc

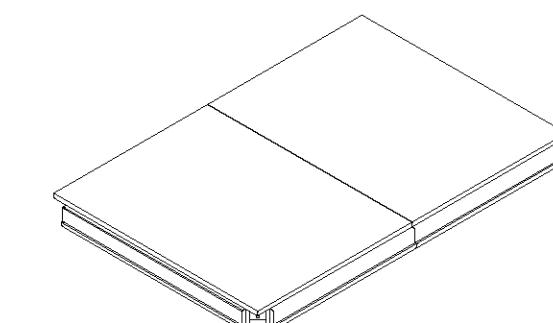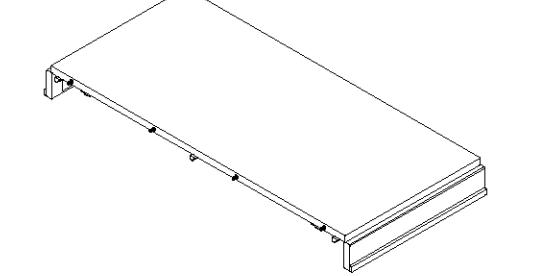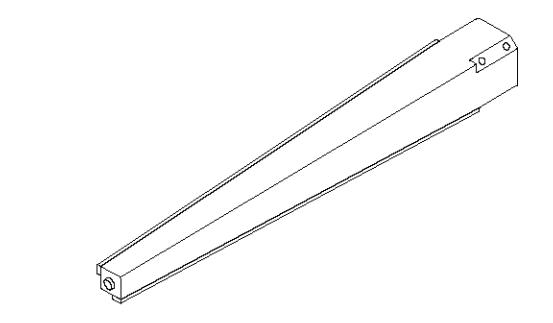
PARTS LIST:			
No.	Description	Sketch	Q.ty
A	Table Top		1 pc
B	Table Leaf		1 pc
C	Table Leg		4 pcs

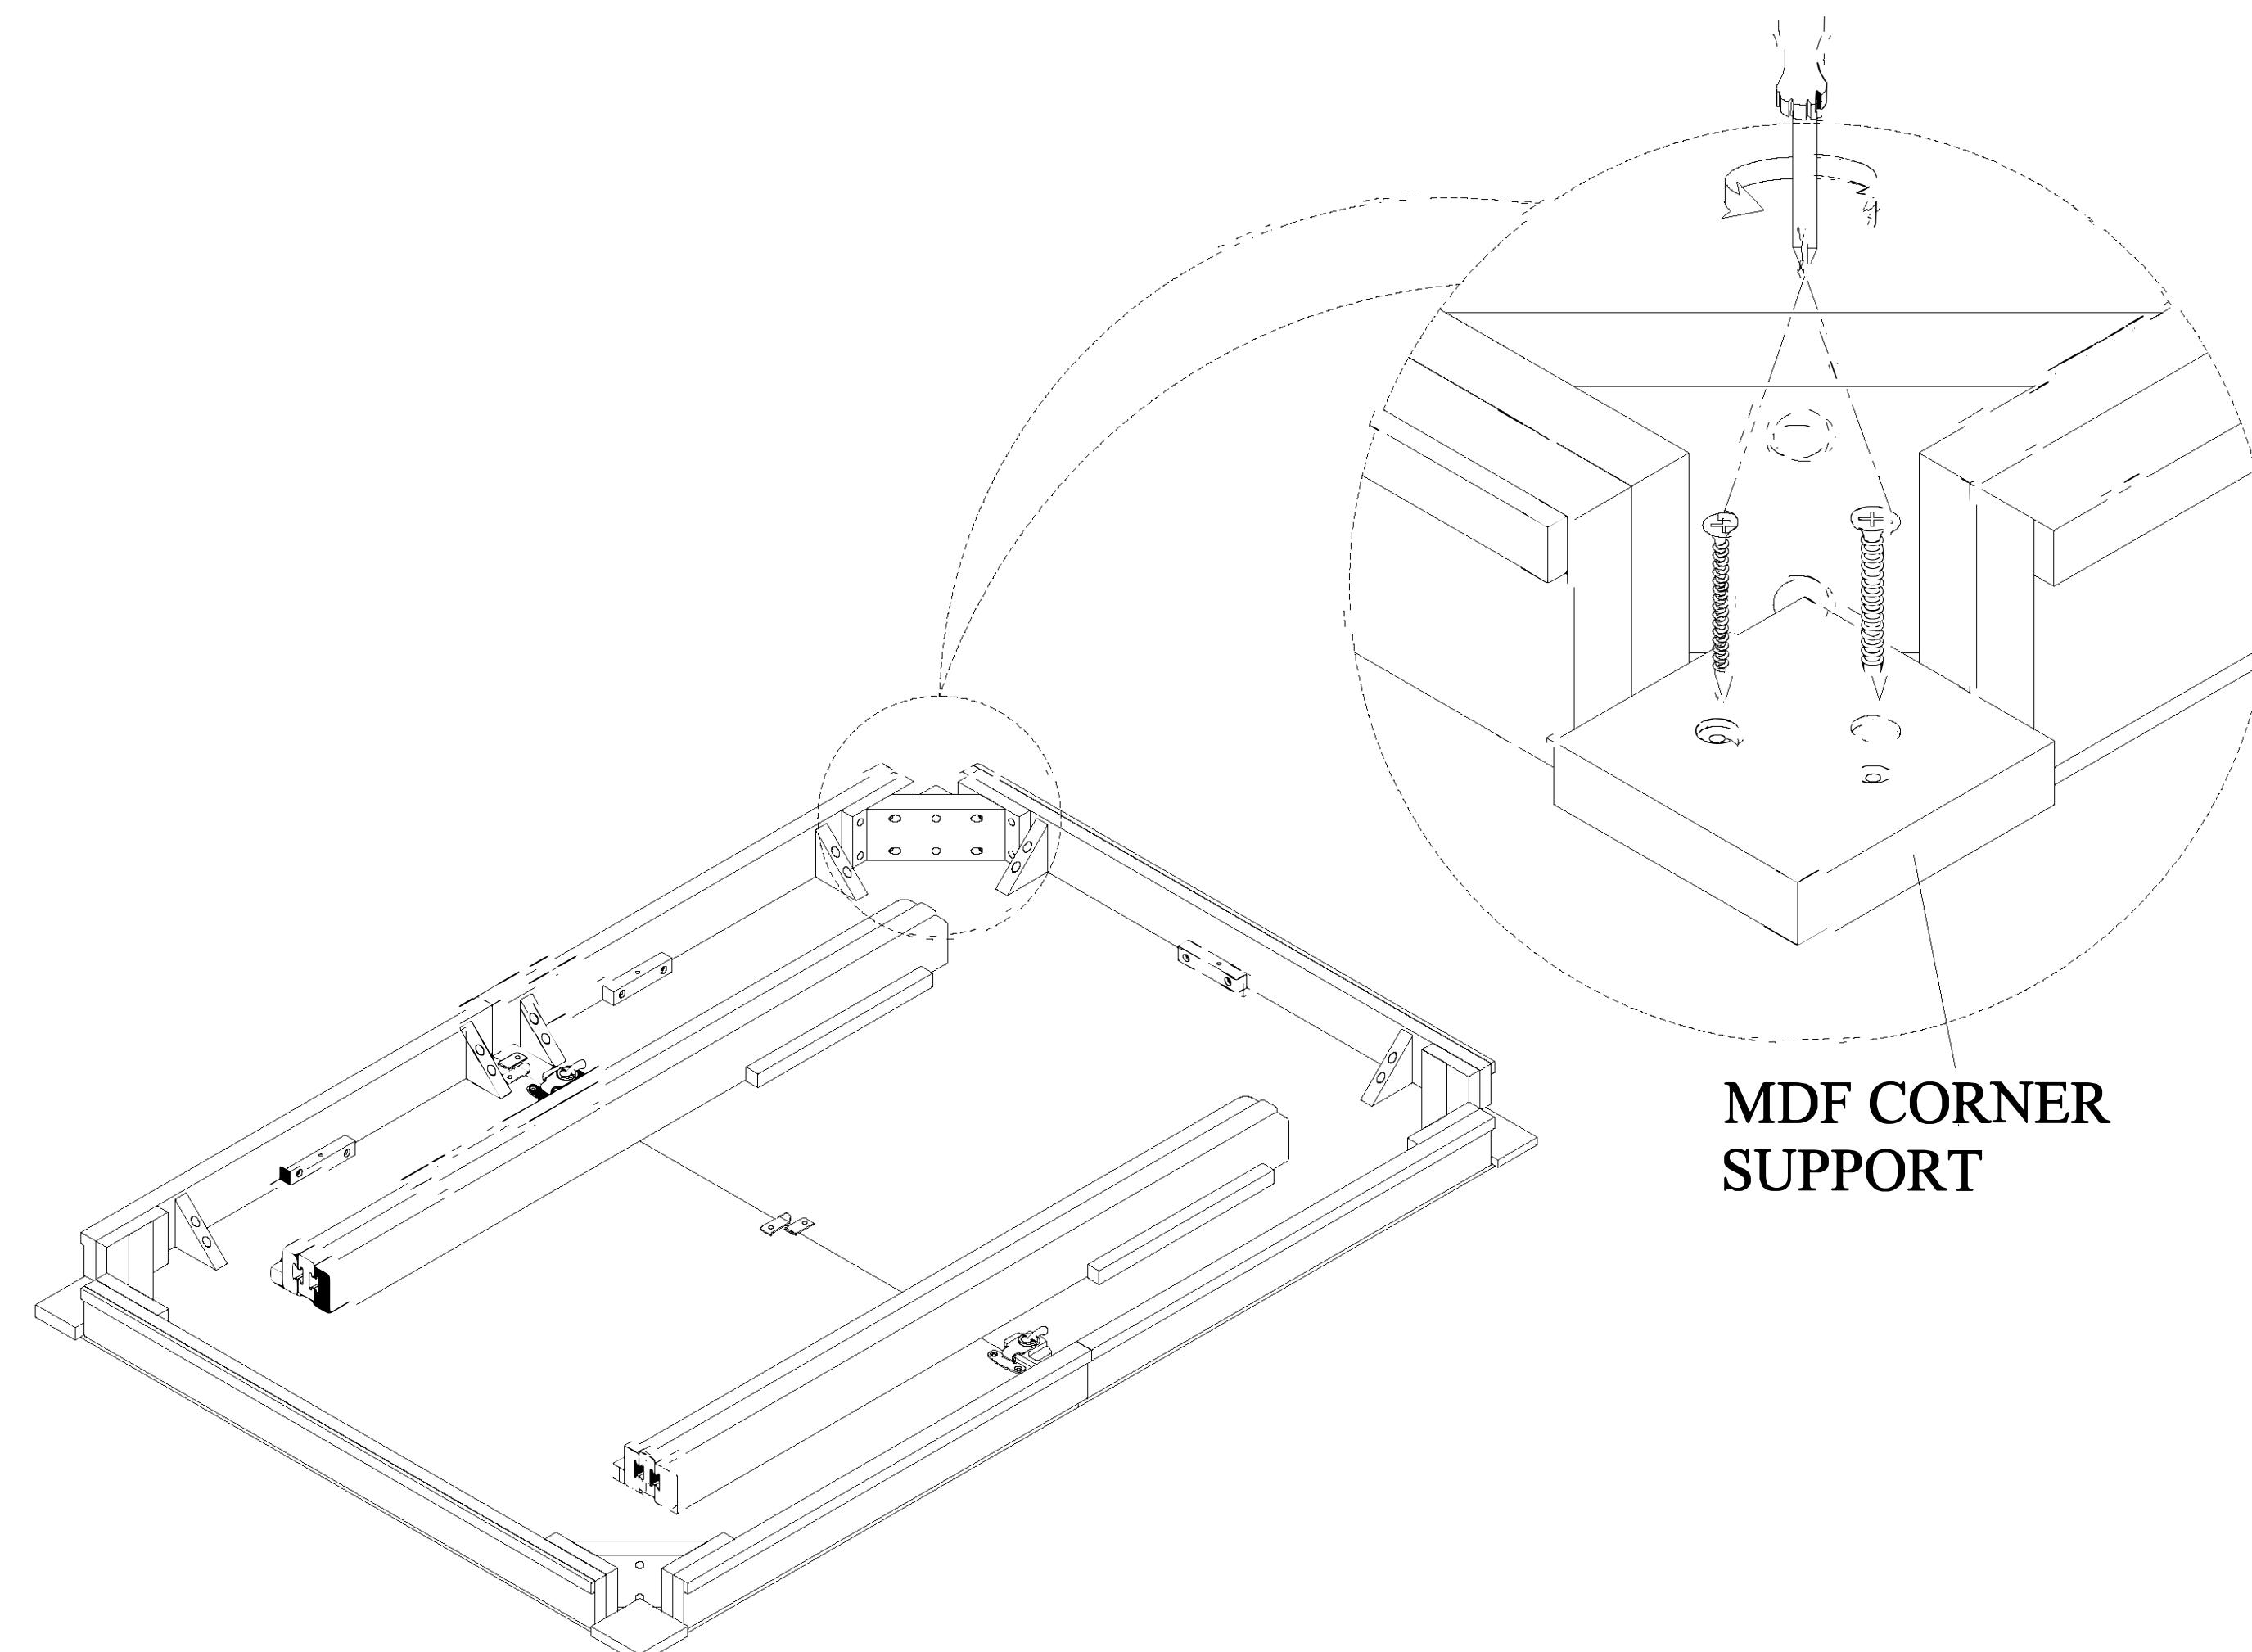

Step 1: Turn Table Top (A) upside down and put on soft surface such as carpet or cloth and then take out MDF corner support on Table Top corner by using Phillips screw driver (not included).

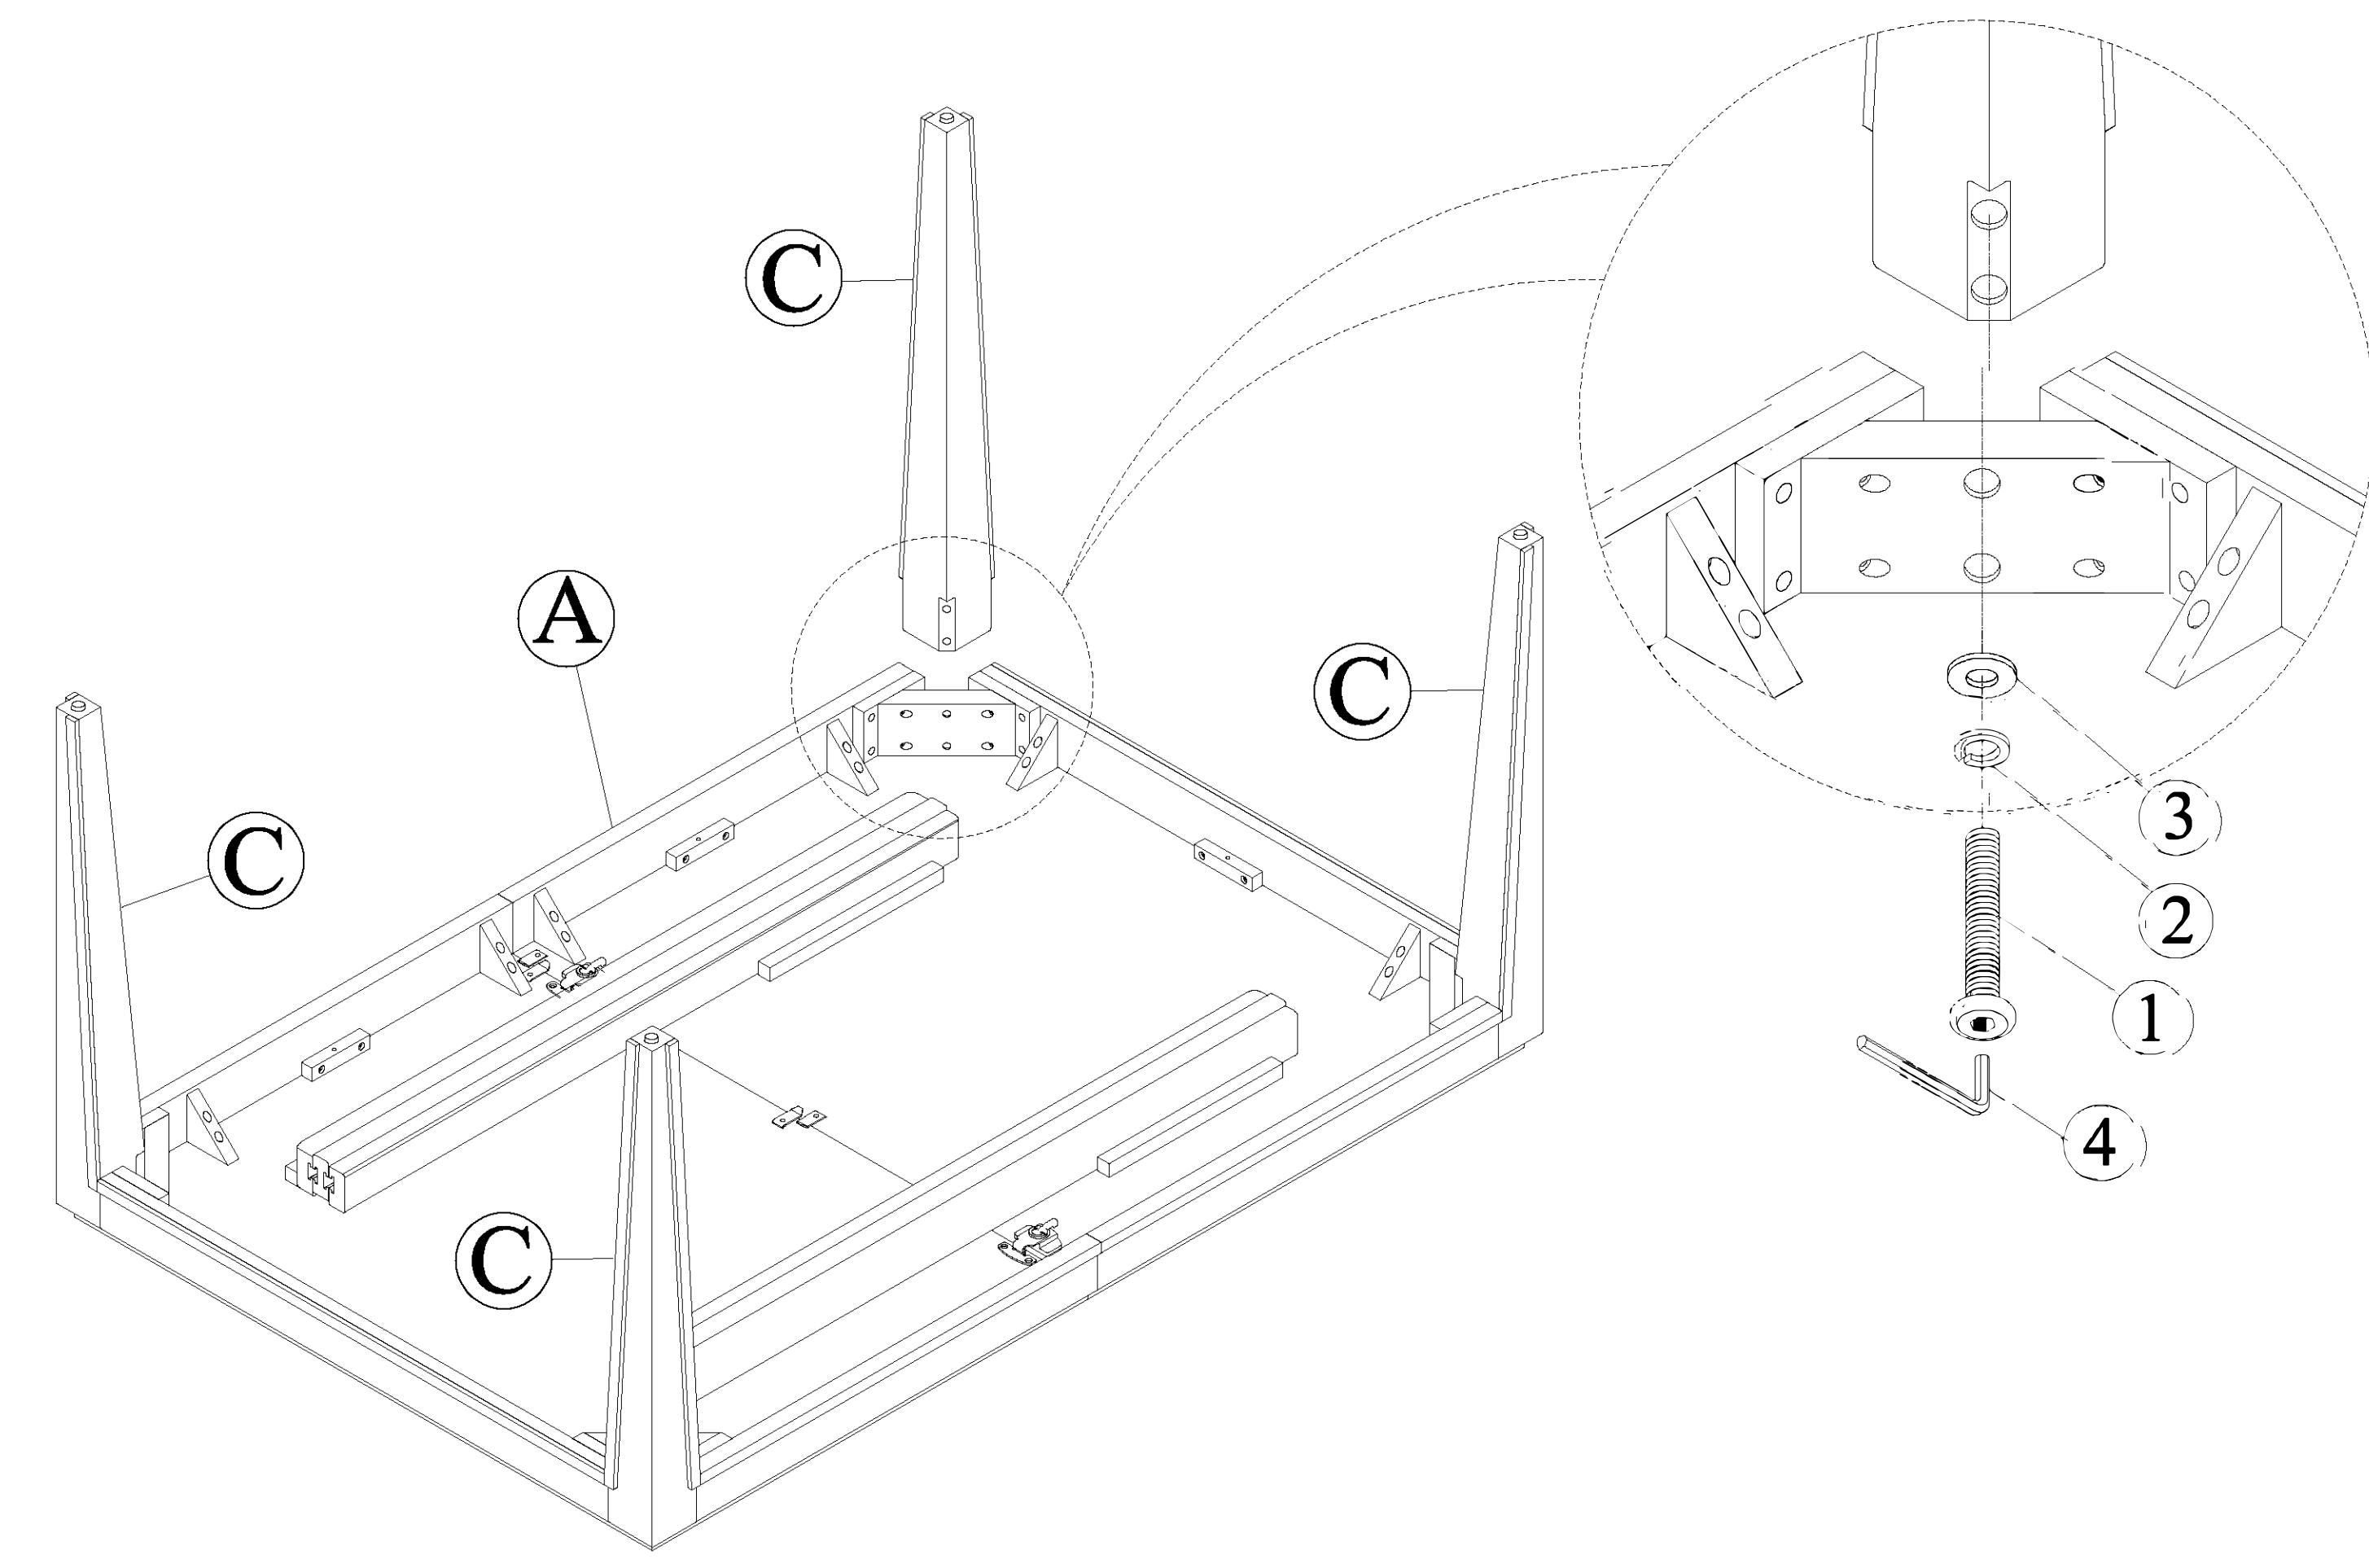


Step 2: Attach Table Legs (C) to the Table Top (A) by using Flat Washer (3), Lock Washer (2), Allen Bolt (1) and tighten with Allen Key (4).

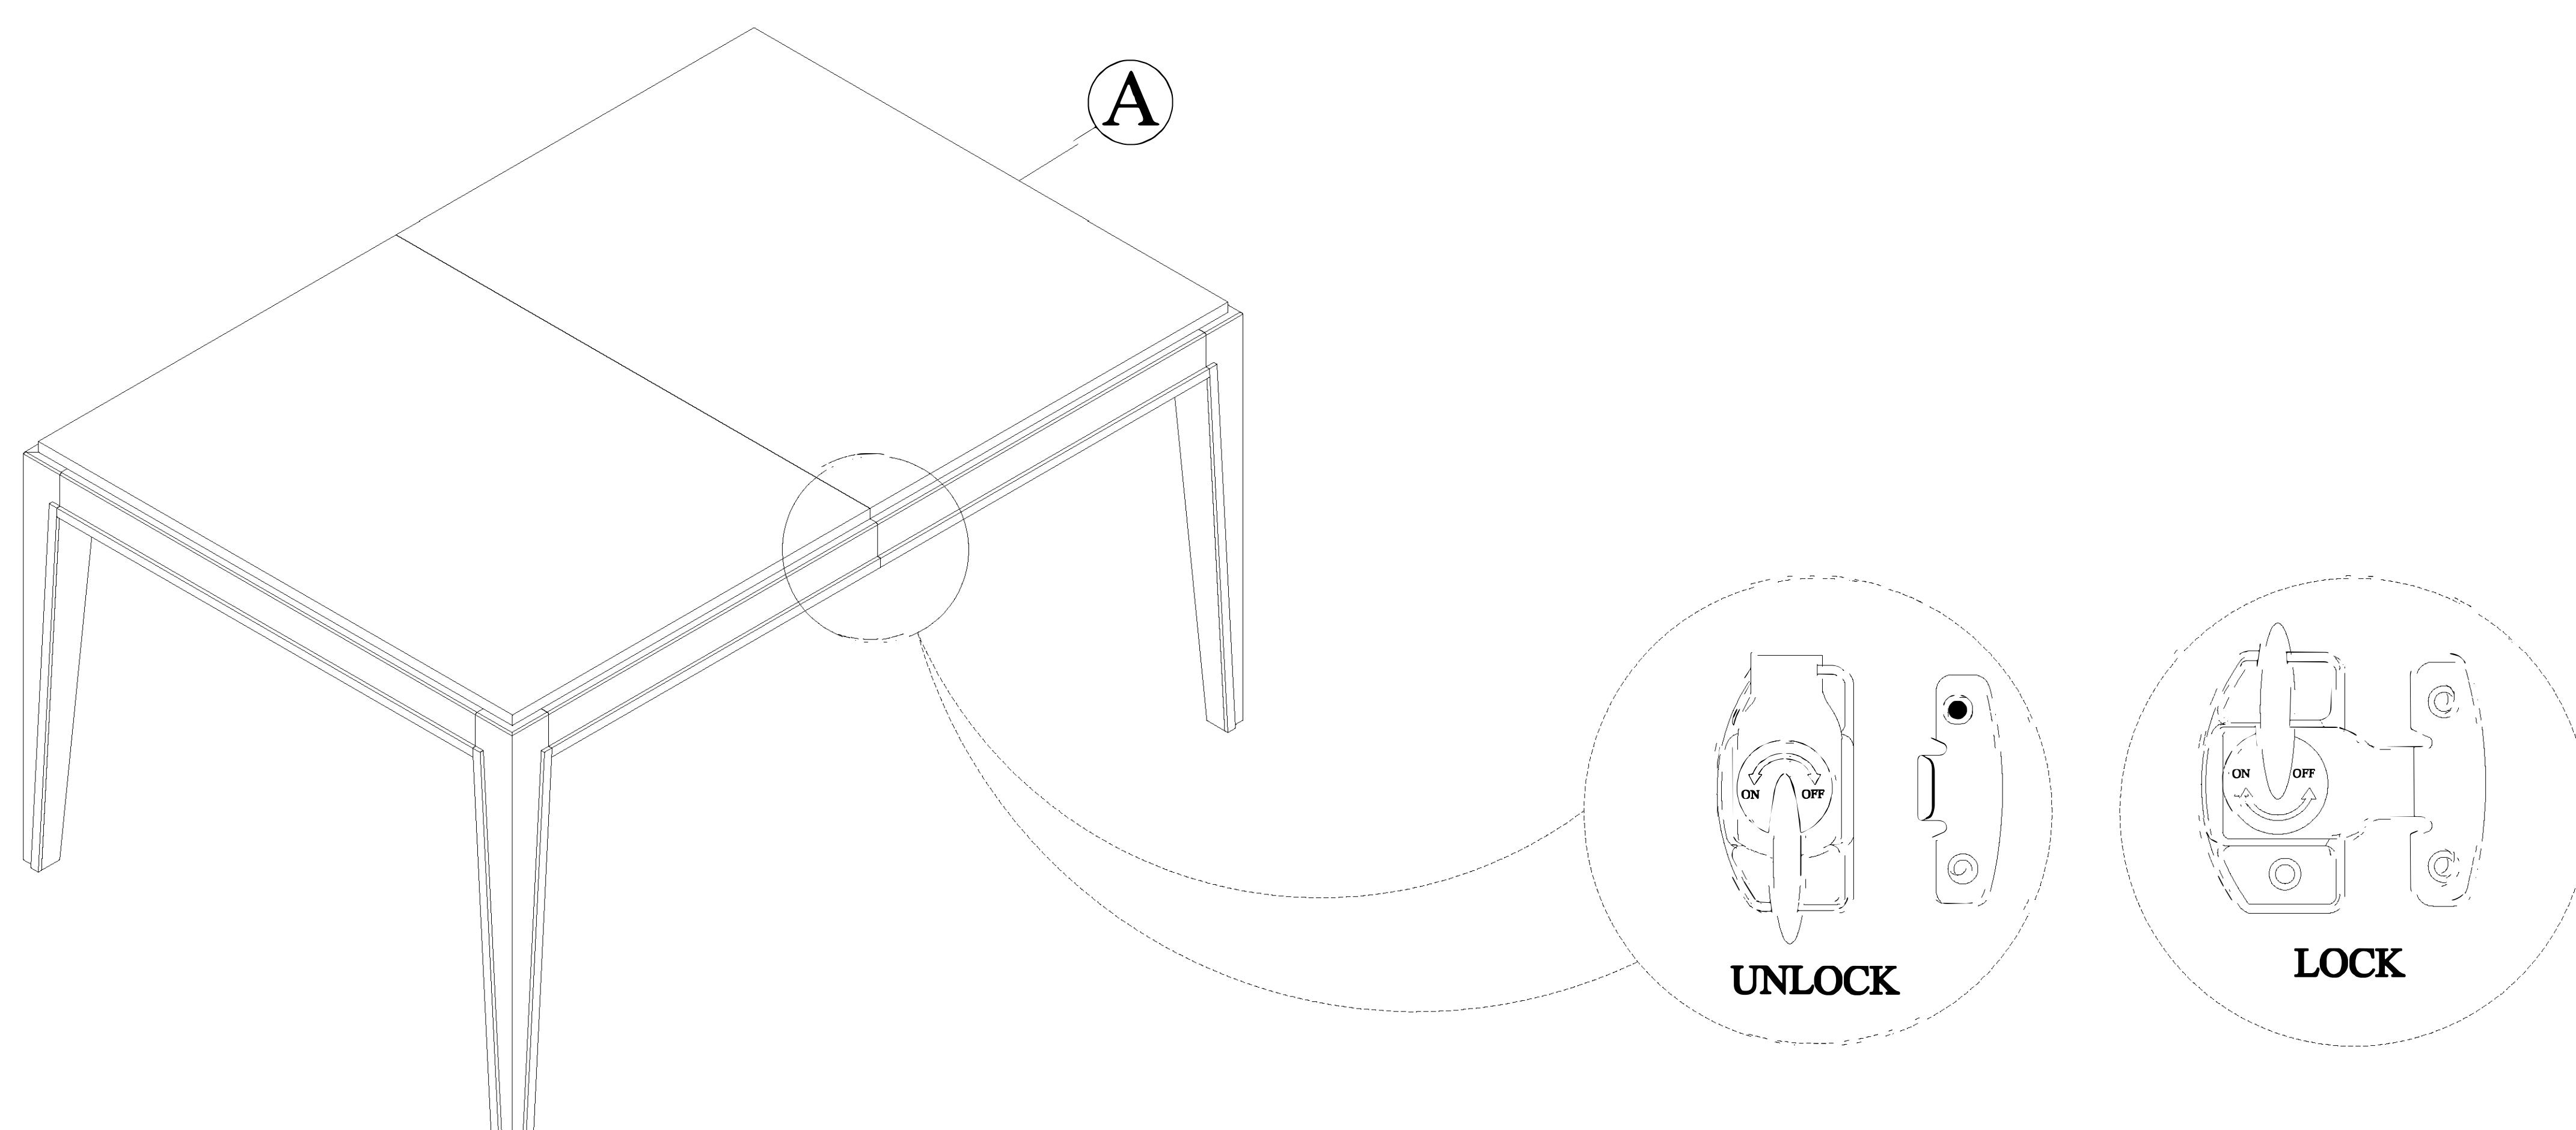

Step 3: Turn up table on upright position on level surface so that the table will not wobble and tighten all Allen Bolts by using Allen Key (4). Unlock Sash lock underneath Table Top (A).

DINNING TABLE

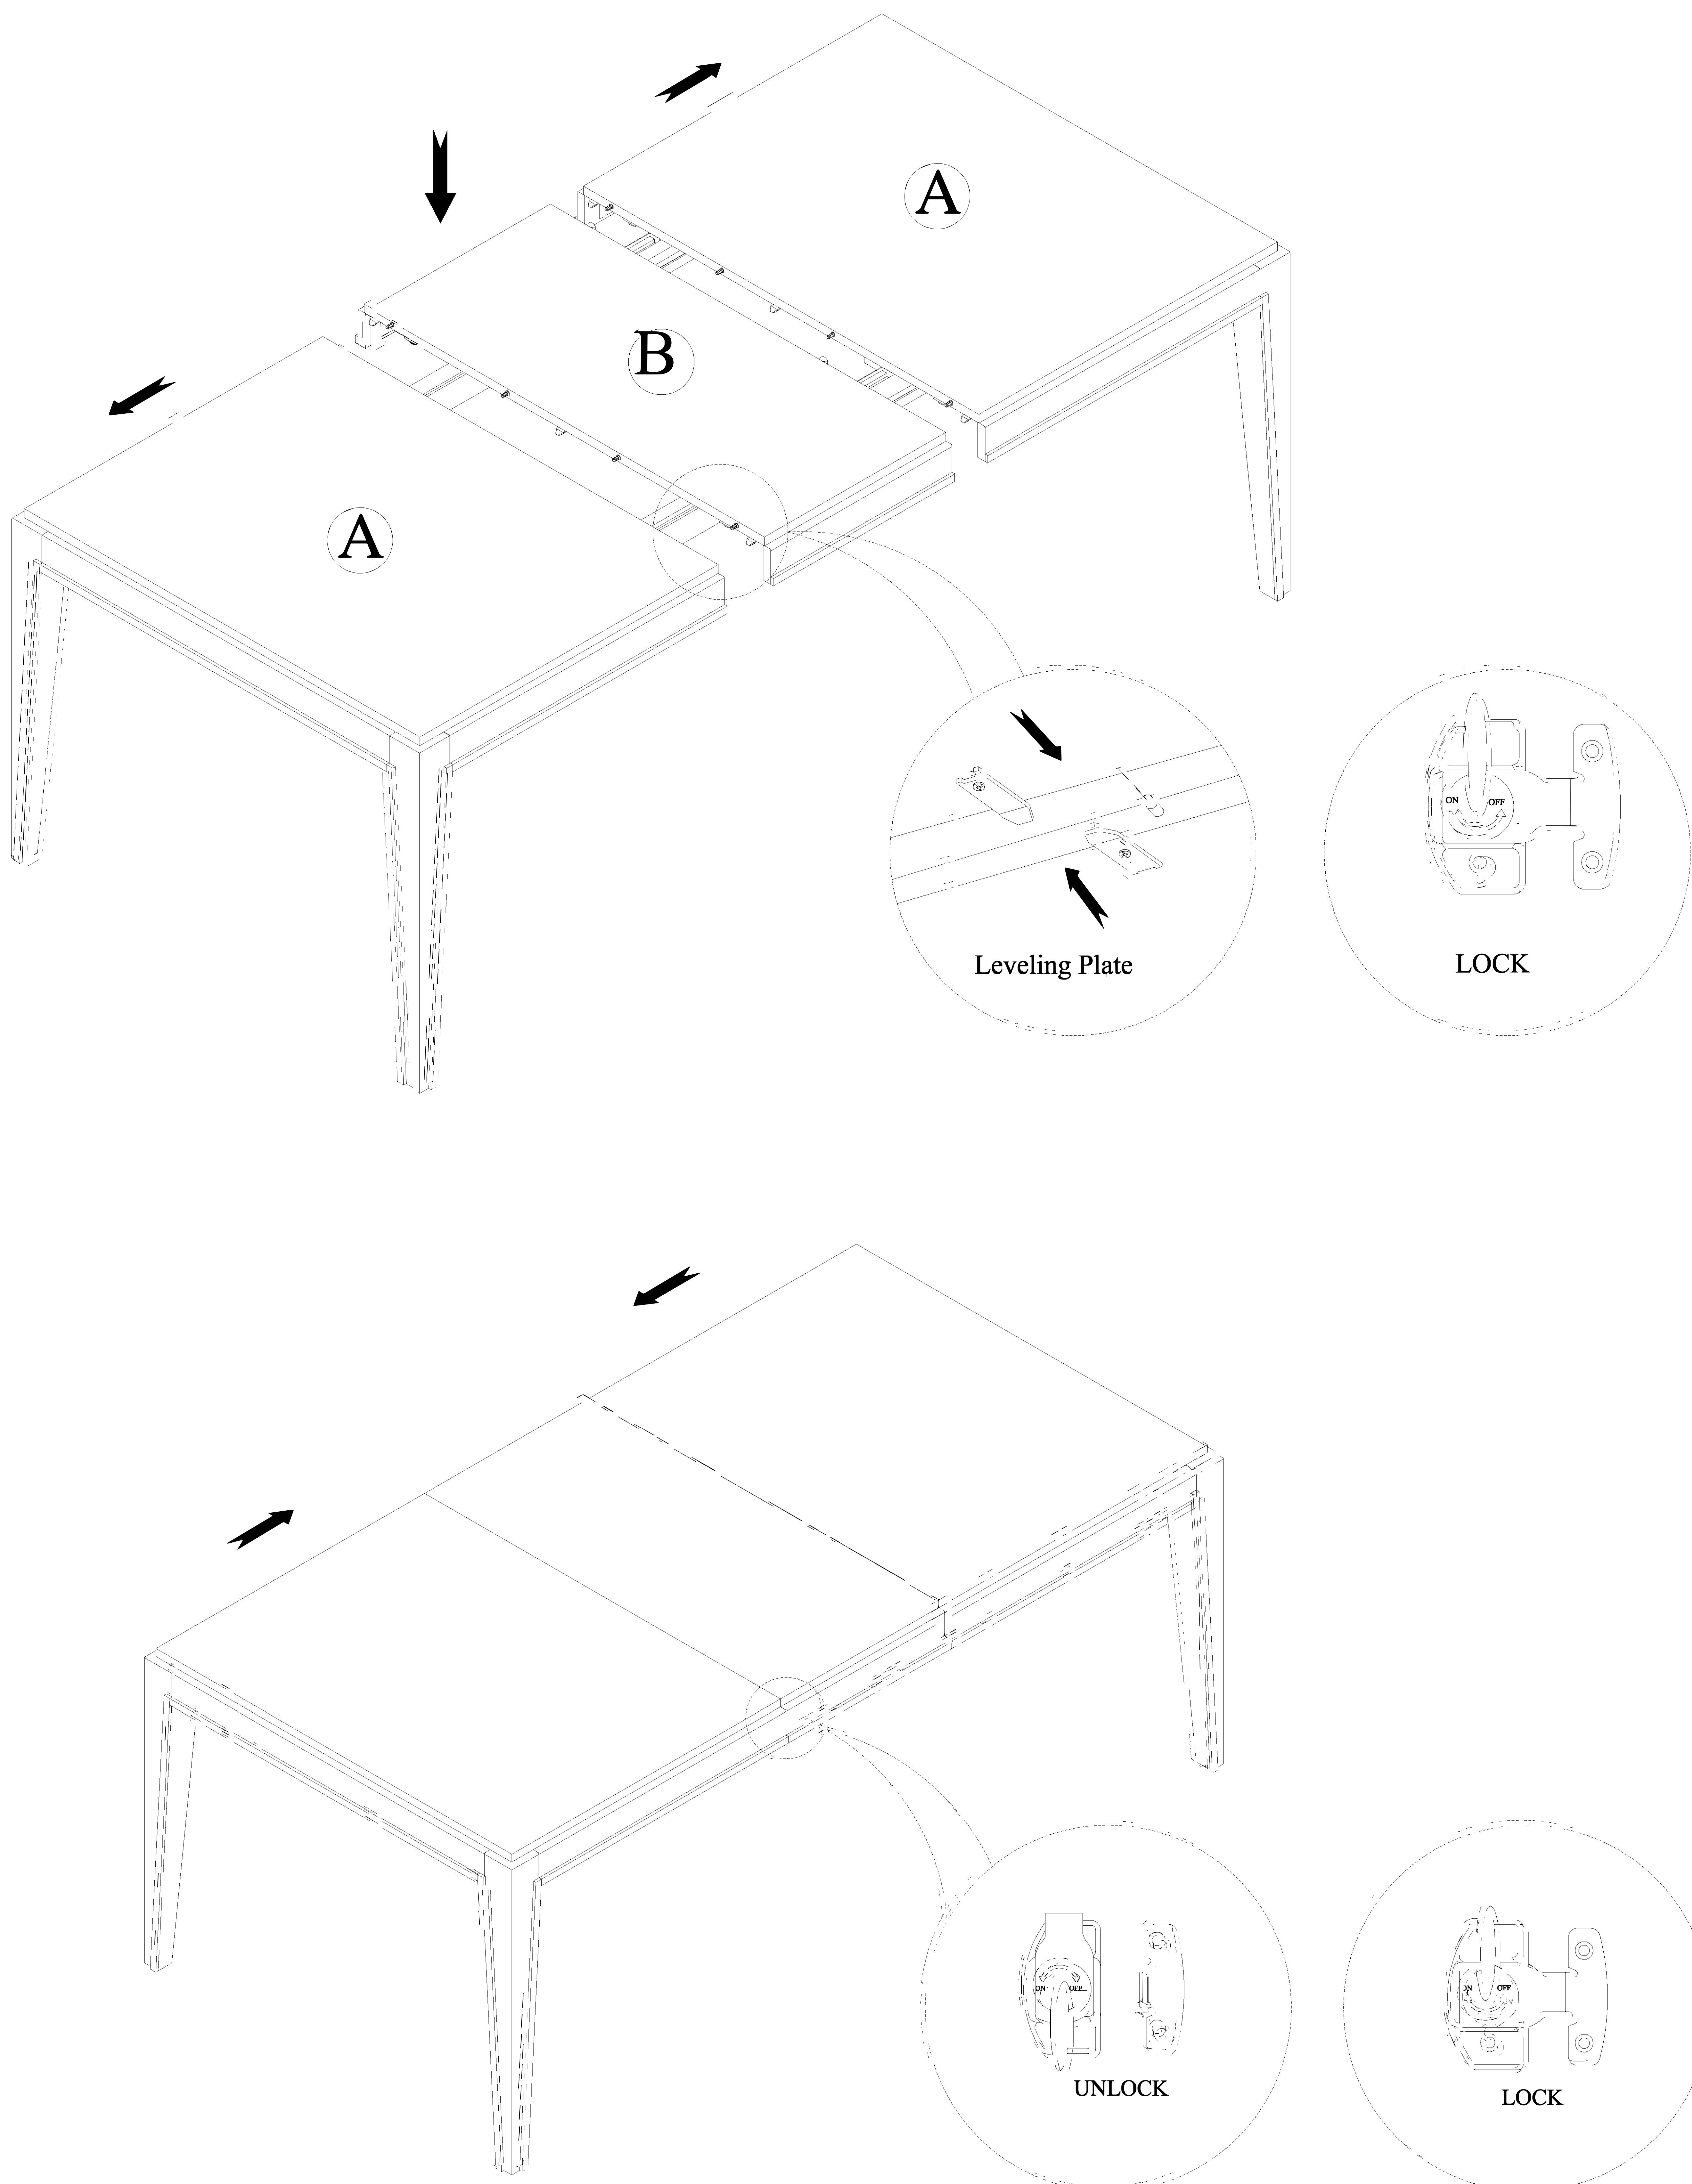

Step 4: Pull both of end side of Table Top (A). Insert Table Leaf (B) to Table Top (A). And then securing Sash lock.