CARE AND MAINTENANCE

Store outdoor furniture indoors or cover well when not in use. Remove wooden furniture from standing water. Dust regularly with small brush or vacuum Spills should be taken care of immediately before they harden or stain with a slightly dampened sponge.

SAFAVIEH OUTDOOR

NOTICE

- * Please make sure that you have all parts indicated before you begin assembly of this item
- * This item should be assembled on a soft surface to prevent scratching the finish during assembly
- * This item may require periodic tightening

Part List and Hardware List

PIECE	DESCRIPTION	PICTURE	QUANTITY
А	Frame back		1X
В	Frame leg 1		1X
С	Frame leg 2		1X
D	Frame Seat		1X
Е	Screws	⊚ M7x70	6X
F	Screws	⊚ M7×60	2X
G	Screws	⊚ M6x45	2X
Н	Allen key	LG4	1X

Weight Capacity: 600 Ibs

Warning: Do not stand on chair

Warning: Do not over torque bolts / screws








Model# CPT1021A

Product Dimensions:28.34" W x 37.0" D x 39" H

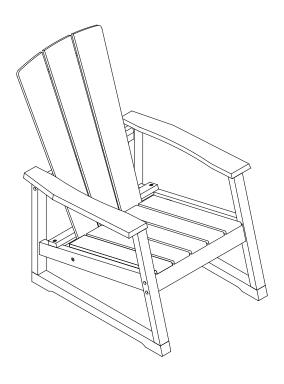


PREPARATION

Before beginning assembly of product, make sure all parts are present. Compare parts with package contents list and hardware contents list. If any part is missing or damaged, do not attempt to assemble the product.

Estimated Assembly Time: 10 minutes.

Tools Required for Assembly (included): Allen Key

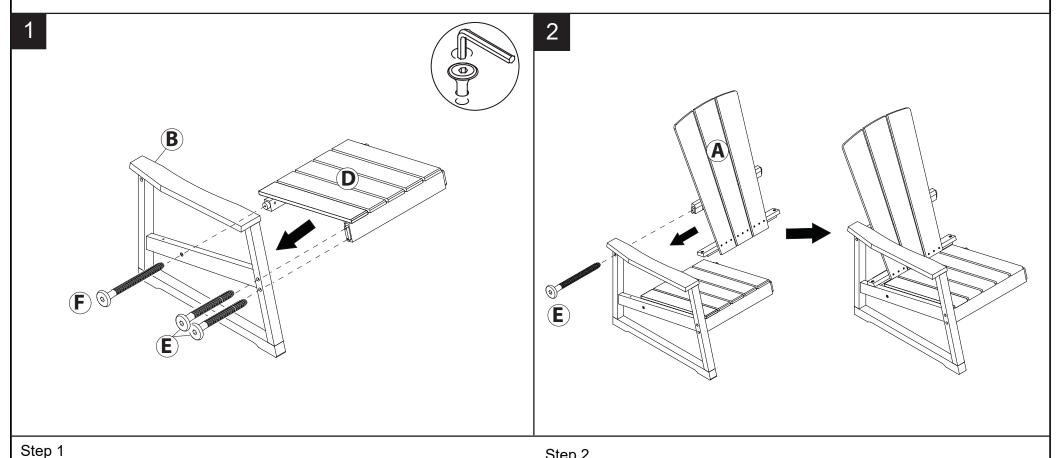

Attach Frame Seat (D) to Frame Leg 1 (B) ,use Screws (E) and Screws (F), tighten with allen key (H).


Step 2
Attach Frame Back (A) and Frame leg1 (B),use Screws(E), tighten with allen key (H).

PREPARATION

Before beginning assembly of product, make sure all parts are present. Compare parts with package contents list and hardware contents list. If any part is missing or damaged, do not attempt to assemble the product.

Estimated Assembly Time: 10 minutes.

Tools Required for Assembly (included): Allen Key

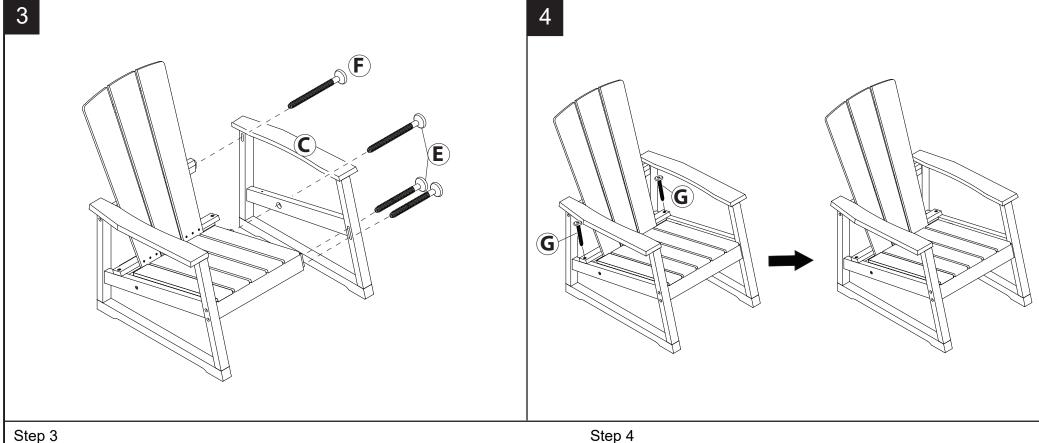

Attach Frame leg2 (C) to Frame Seat(D), Frame back(A) ,use Screws (E) and Screws (F), tighten with allen key (H)

Step 4
USE Screws(G) tighten Frame Back(A) with frameleg .Complete