

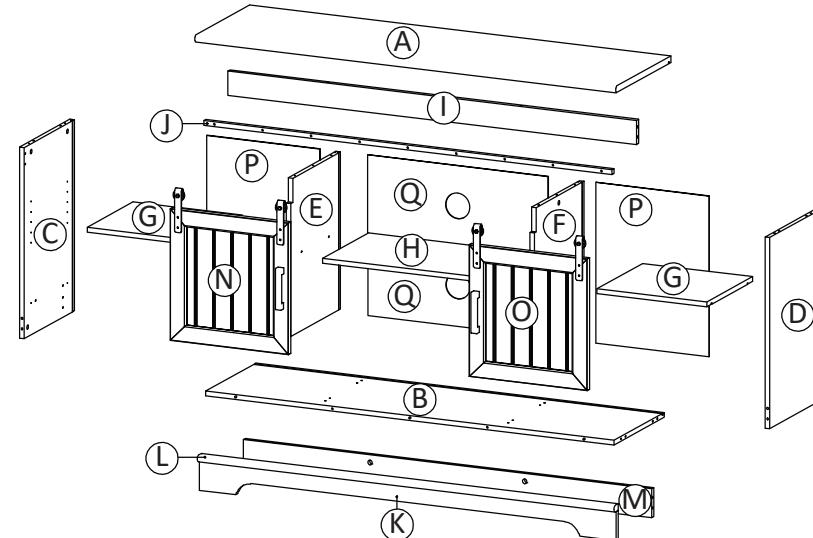
CARE AND MAINTENANCE

Always use felt pads under all articles to prevent discoloration or softening of the lacquer. Plastic and rubber bases on items can discolor wood. Wipe up spills immediately and avoid common hazards such as hot dishes, harsh solvents and abrasives. Cleaning should be done with a soft lint free cotton cloth dampened with water or furniture polish. On highly used surfaces we recommend applying a quality paste wax which should be used on a regular basis to provide additional protection from scratches and spills. How often you apply the wax depends on how much wear the furniture receives.

NOTICE

- * Please make sure that you have all parts indicated before you begin assembly of this item
- * This item should be assembled on a soft surface to prevent scratching the finish during assembly
- * This item may require periodic tightening

Part List and Hardware List

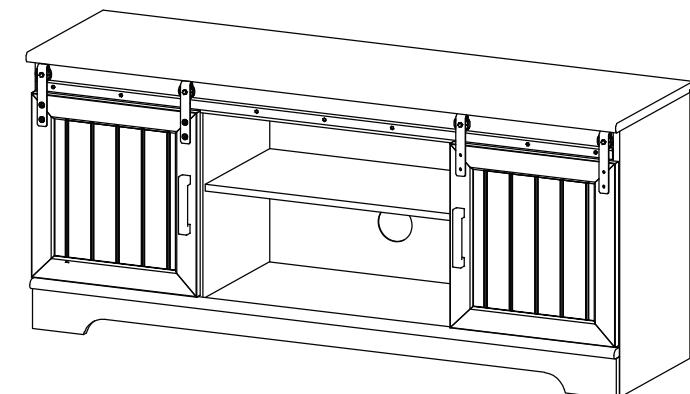


HW1x20 Ø 6 x 35 mm	HW2x20 Ø 15 mm	HW3x43 Ø 8 x 30 mm	HW4x4 M 7 x 50 mm	HW5x1 L 4	HW6x8 M 6.4 x 14 mm
HW7x8 Ø 5 x 15 mm	HW8x14 M 3.5 x 15.5 mm	HW9x14 9 x 14 x 10 mm	HW10x4 M 7 x 50 mm	HW11x1 L 4	HW12x9 M 6.4 x 25 mm
HW13x4 M 3.5 x 13 mm	HW14x2 Ø 15 mm	HW15x4 Ø 5 x 20 mm	HW16x2 M 4 x 17 mm	HW17x2 M 3.5 x 25 mm	HW18x4 M 3.5 x 25 mm
HW19x6 Ø 15 mm	HW20x8 Ø 15 mm	HW21x2 Ø 15 mm	HW22x2 Ø 15 mm		

 **SAFAVIEH**
FURNITURE

Model# MED9605

Product Dimensions: 54.8" W x 15.4" D x 24.2" H



 **WARNING :**
WEIGHT CAPACITY: 57 LBS.
DO NOT STAND ON TV STAND

Part List & HW for Multi-Box Items

Piece	Description	Qty	Carton Call
A	Top Board	1	1 of 2
B	Bottom Board	1	1 of 2
C	Side Board Left	1	2 of 2
D	Side Board Right	1	2 of 2
E	Centre Board Left	1	2 of 2
F	Centre Board Right	1	2 of 2
G	Adjustable Shelf	2	1 of 2
H	Fixed Shelf	1	1 of 2
I	Front Skirt 1	1	1 of 2
J	Front Skirt 2	1	1 of 2
K	Bottom Skirt 1	1	1 of 2
L	Bottom Skirt 2	1	1 of 2
M	Support Board	1	1 of 2
N	Frame Door Left	1	2 of 2
O	Frame Door Right	1	2 of 2
P	Back Board 1	2	2 of 2
Q	Back Board 2	2	1 of 2

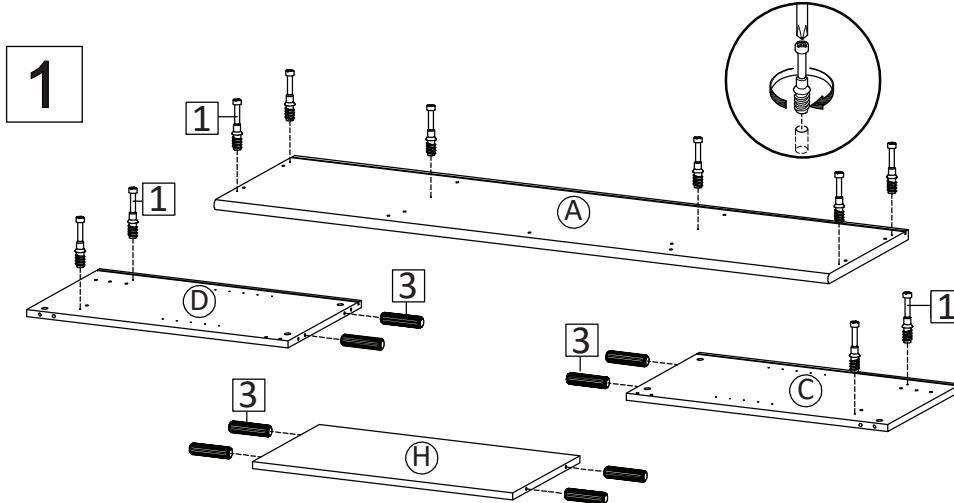
Piece	Description	Qty	Carton Call
HW1	Cambolt	20	2 of 2
HW2	CamLock	20	2 of 2
HW3	Dowel Big	43	2 of 2
HW4	Screw M 7 x 50 mm	4	2 of 2
HW5	Allen Key	1	2 of 2
HW6	Screw M 6.4 x 14 mm	8	2 of 2
HW7	Shelf Pin	8	2 of 2
HW8	Screw M 3.5 x 15.5 mm	14	2 of 2
HW9	Wedge	14	2 of 2
HW10	Barn Sliding	4	2 of 2
HW11	Aluminium Plate	1	1 of 2
HW12	Screw M 6.4 x 25 mm	9	2 of 2
HW13	Screw M 3.5 x 13 mm	4	2 of 2
HW14	Sliding Plate	2	2 of 2
HW15	Dowel Small	4	2 of 2
HW16	Stopper	2	2 of 2
HW17	Handle	2	2 of 2
HW18	Screw M 3.5 x 25 mm	4	2 of 2
HW19	Screw Cup	6	2 of 2
HW20	Foam Pad	8	2 of 2

PREPARATION

Before beginning assembly of product, make sure all parts are present. Compare parts with package contents list and hardware contents list.

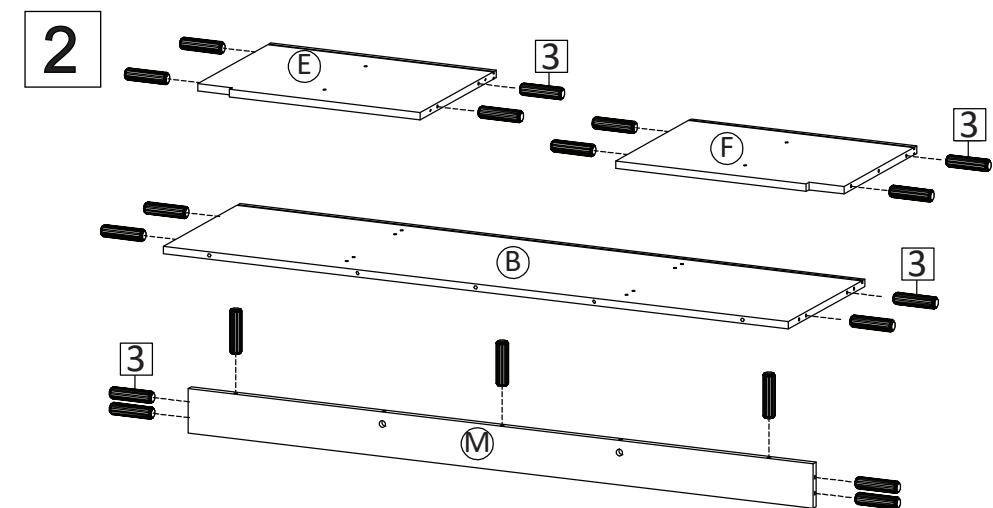
If any part is missing or damaged, do not attempt to assemble the product.

Estimated Assembly Time: 60 minutes.

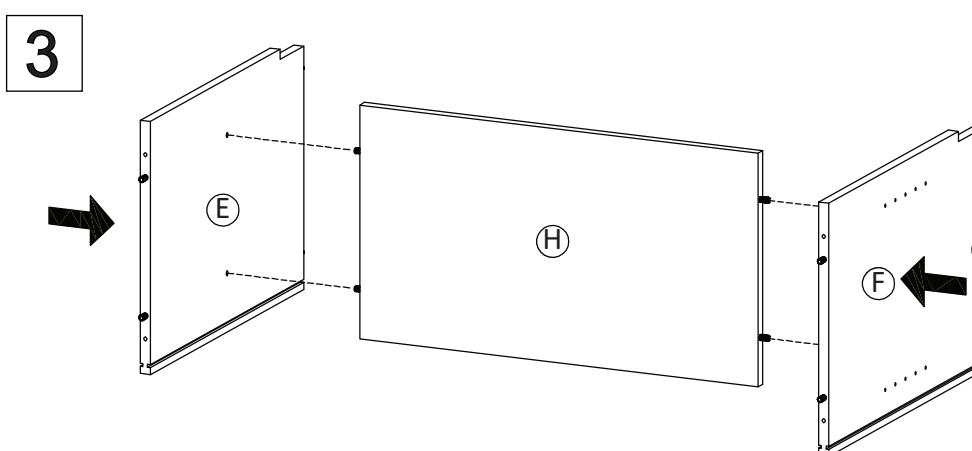


Insert Cambolt (HW1) into Top Board (A), Side Board Left (C) and Side Board Right (D).

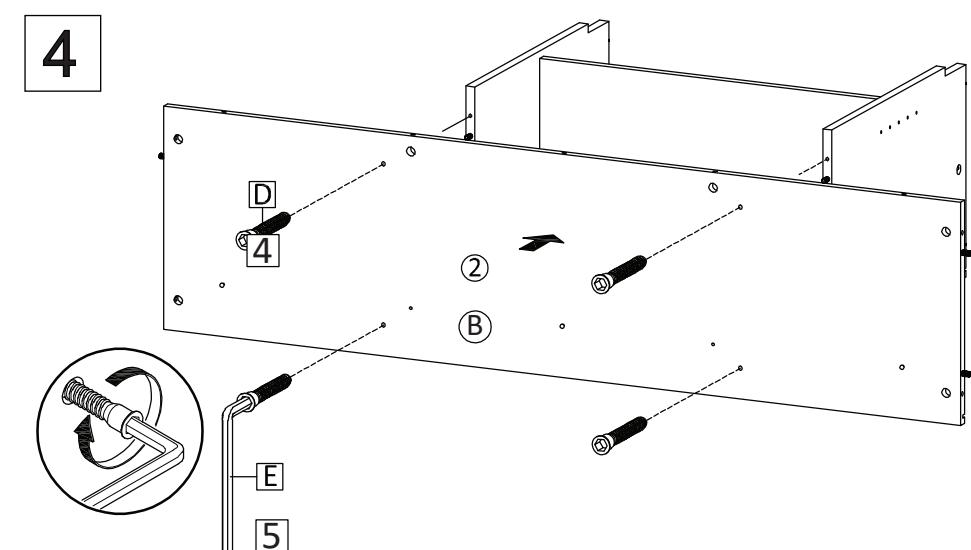
Insert Dowel Big (HW3) into Side Board Left (C) and Side Board Right (D) and Fixed Shelf (H).



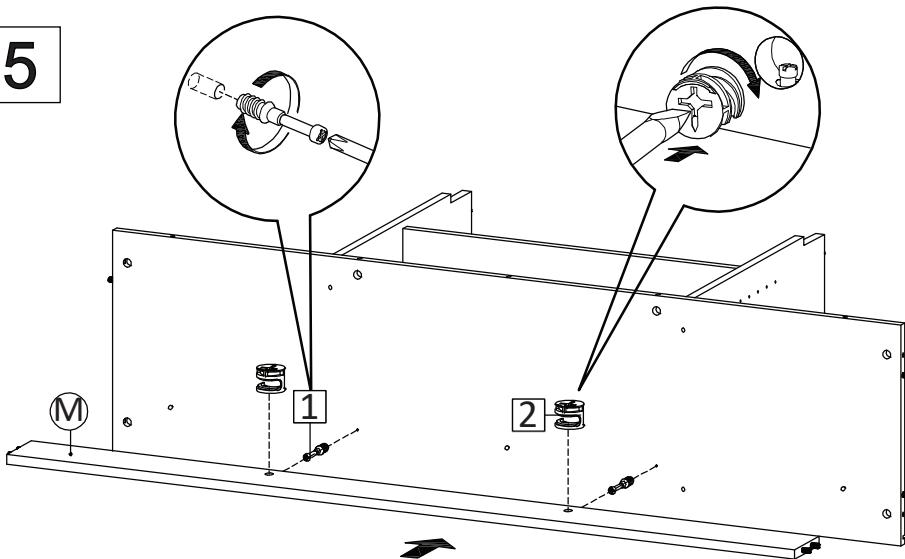
Insert Dowel Big (HW3) into Centre Board Left (E), Centre Board Right (F), Bottom Board (B) and Support Board (M).



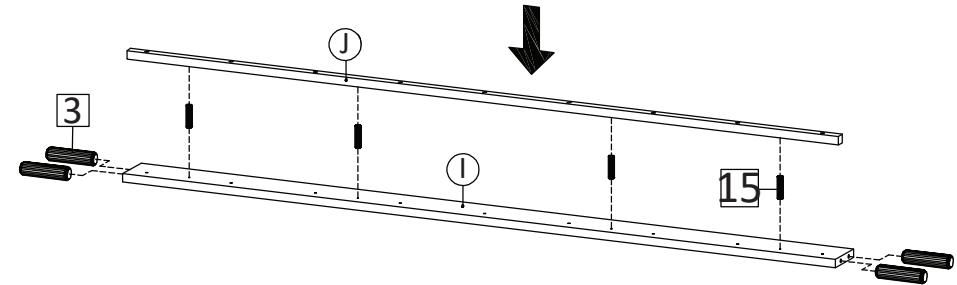
Attach Centre Board Left (E) and Centre Board Right (F) to Fixed Shelf (H). Please refer to above image to see Centre Board Left (E) and Centre Board Right (F) position.



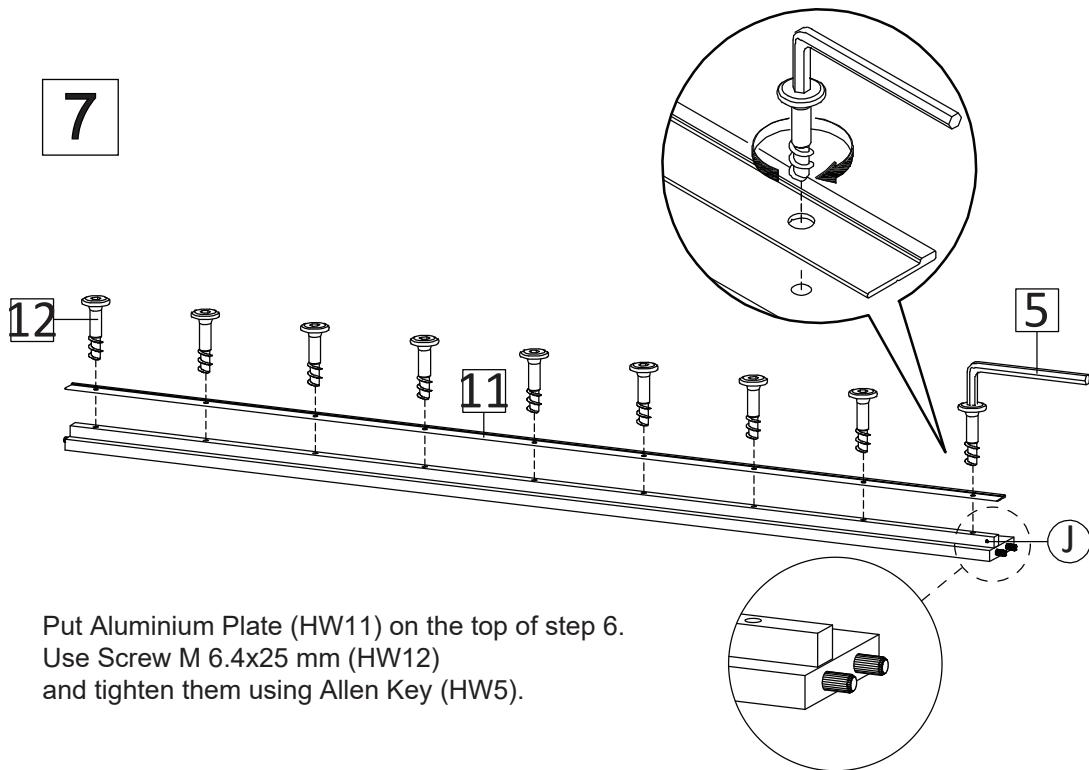
Tighten Screw M 7x50 mm (HW4) by using Allen Key (HW5) to attach Bottom Board (B) to step 3.

5

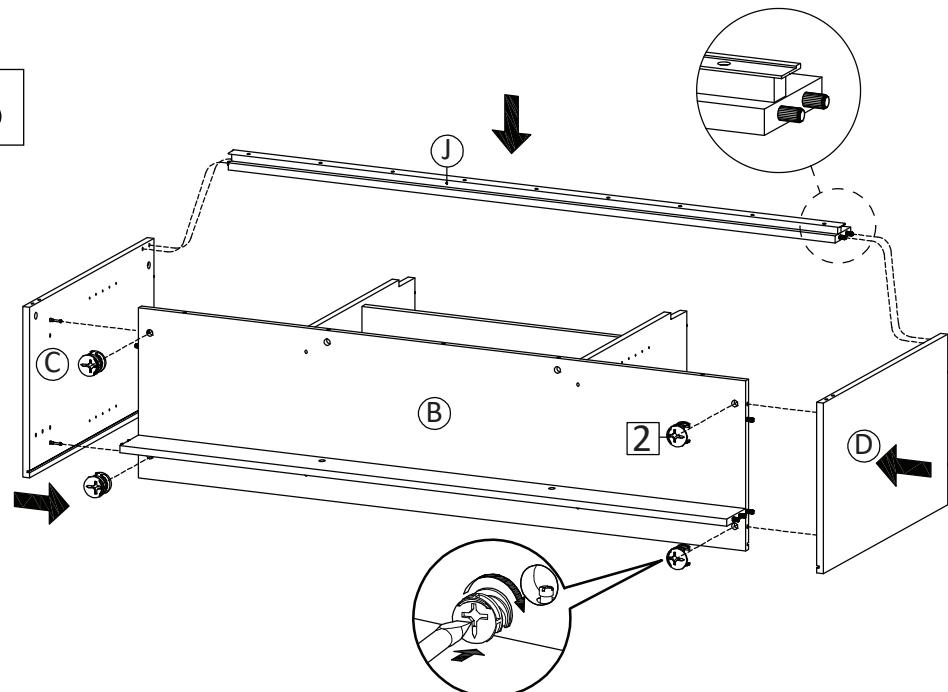
Insert Cambolt (HW1) into Camlock (HW2), tighten Camlock (HW2) using screwdriver to attach Support Board (M) to step 4.

6

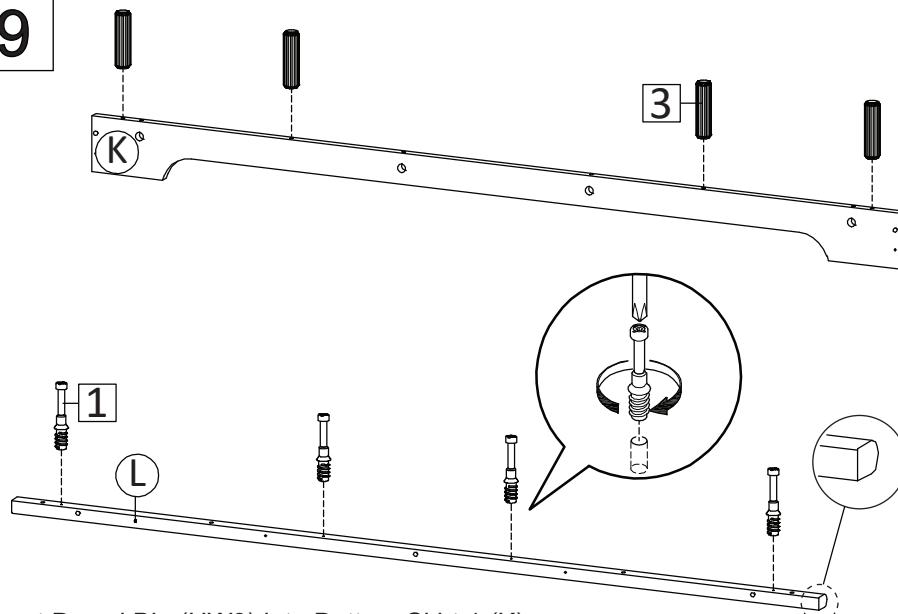
Put Front Skirt 1 (I) and Front Skirt 2 (J) together by using Dowel Big (HW3) and Dowel Small (HW15).

7

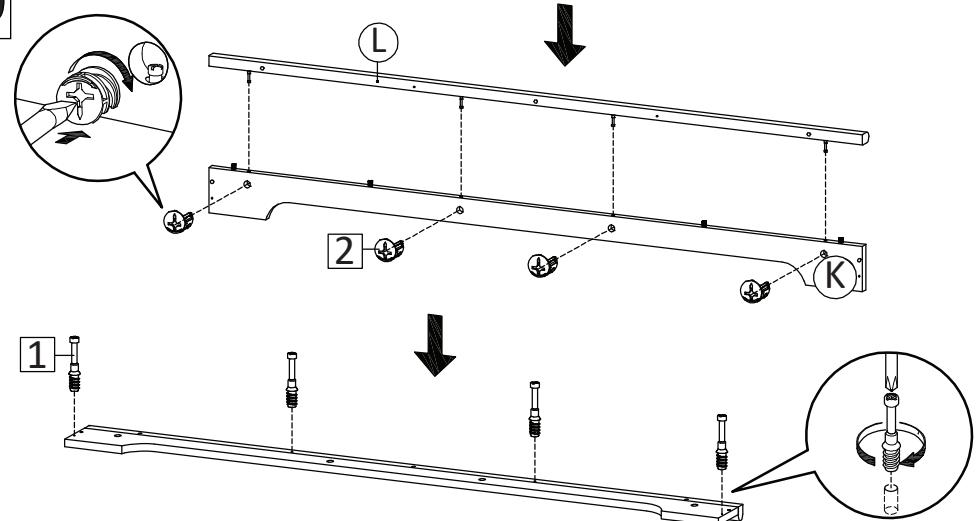
Put Aluminium Plate (HW11) on the top of step 6.
Use Screw M 6.4x25 mm (HW12)
and tighten them using Allen Key (HW5).

8

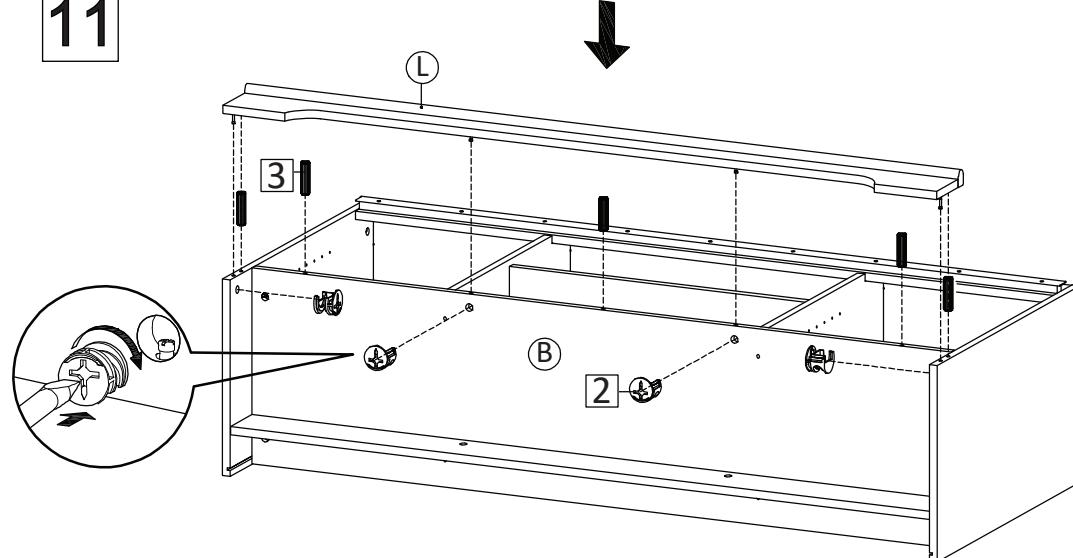
Combine step 4, step 7, Side Board Left (C) and Side Board Right (D) by using Camlock (HW2) and screwdriver.

9

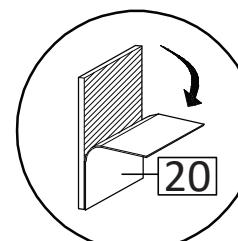
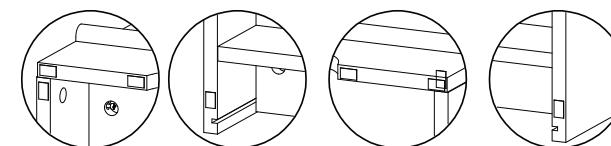
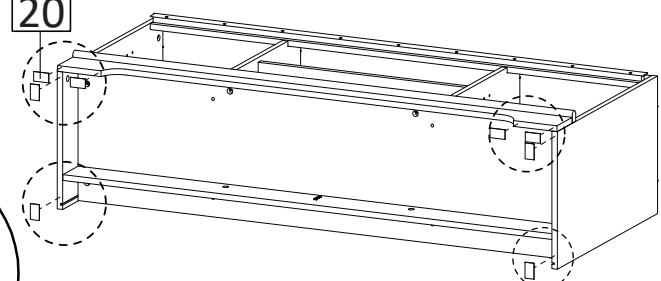
Insert Dowel Big (HW3) into Bottom Skirt 1 (K),
Insert Cambolt (HW1) into Bottom Skirt 2 (L).

10

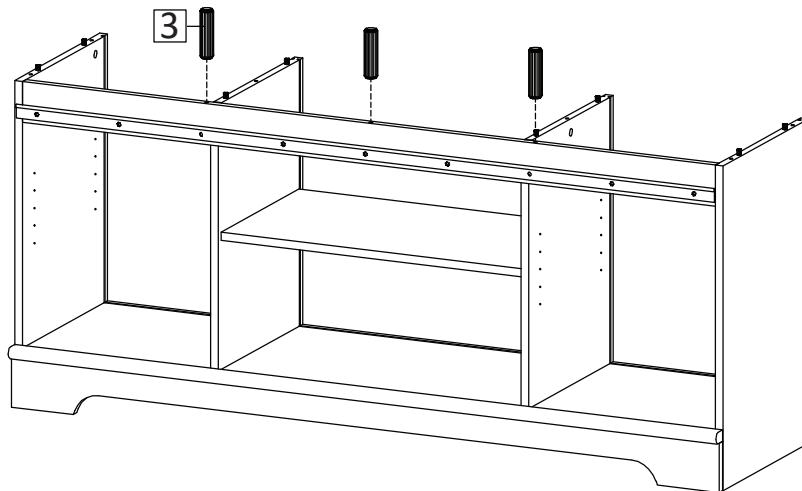
Attach Bottom Skirt 1 (K) and Bottom Skirt 2 (L) together by using Camlock (HW2) and screwdriver.

11

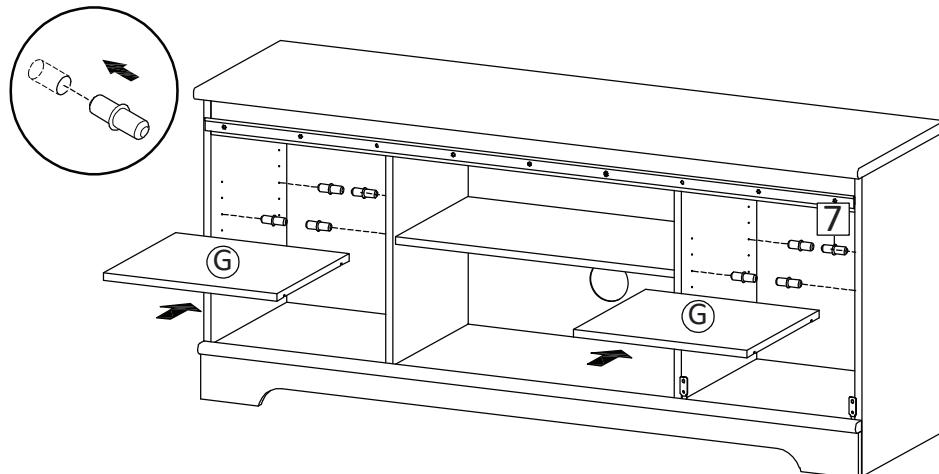
Put step 10 together with step 8 by using Camlock (HW2) and screwdriver.

12**20**

Put Foam Pad (HW20) to Bottom Skirt 1 (K).
Please refer to above image.

13

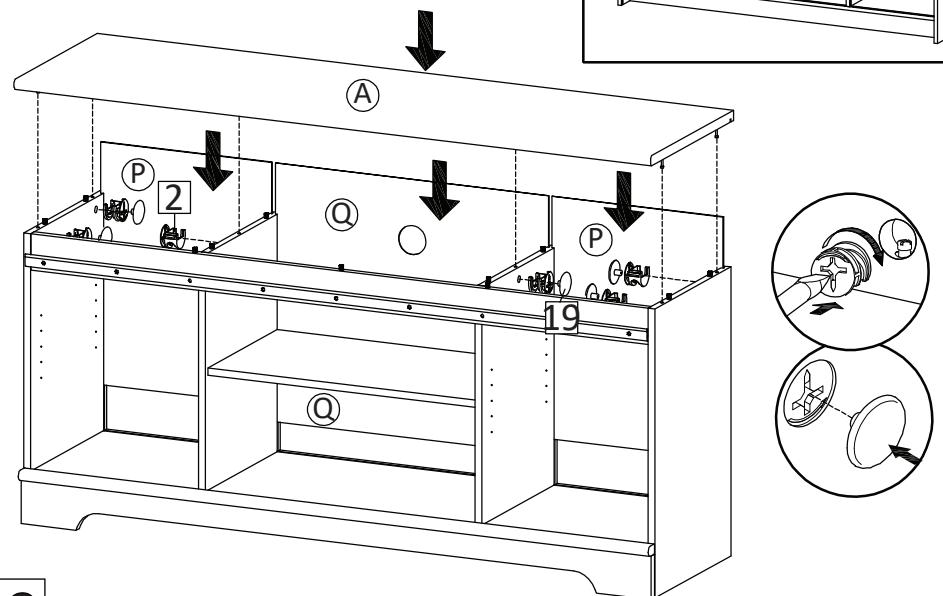
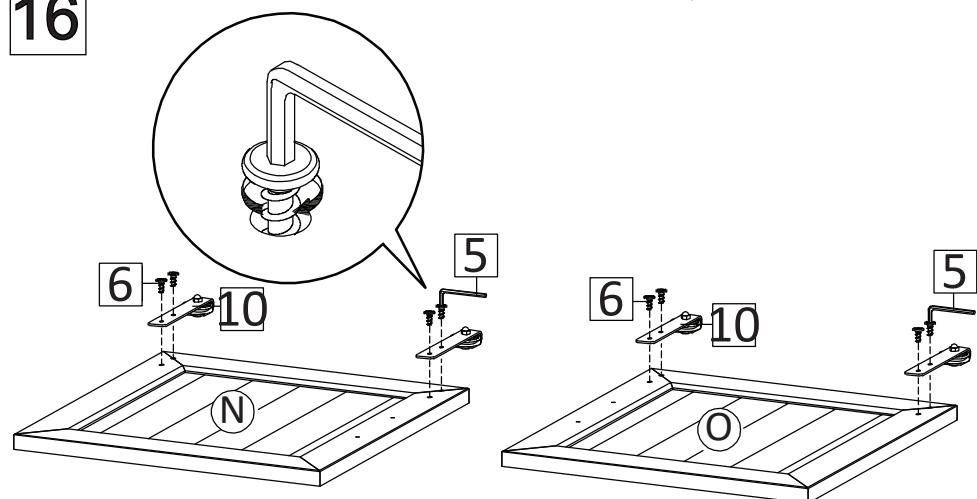
Insert Dowel Big (HW3) to the top part of the item.

15

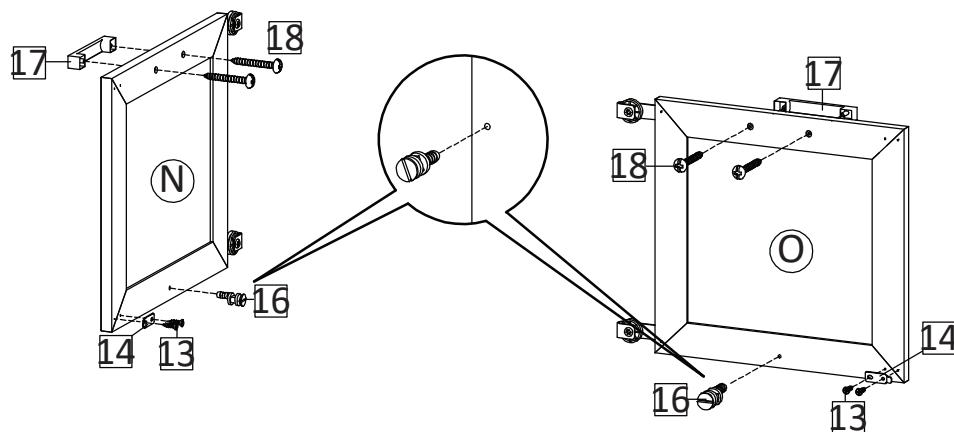
Use Shelf Pin (HW7) to hold Adjustable Shelf (G).

14

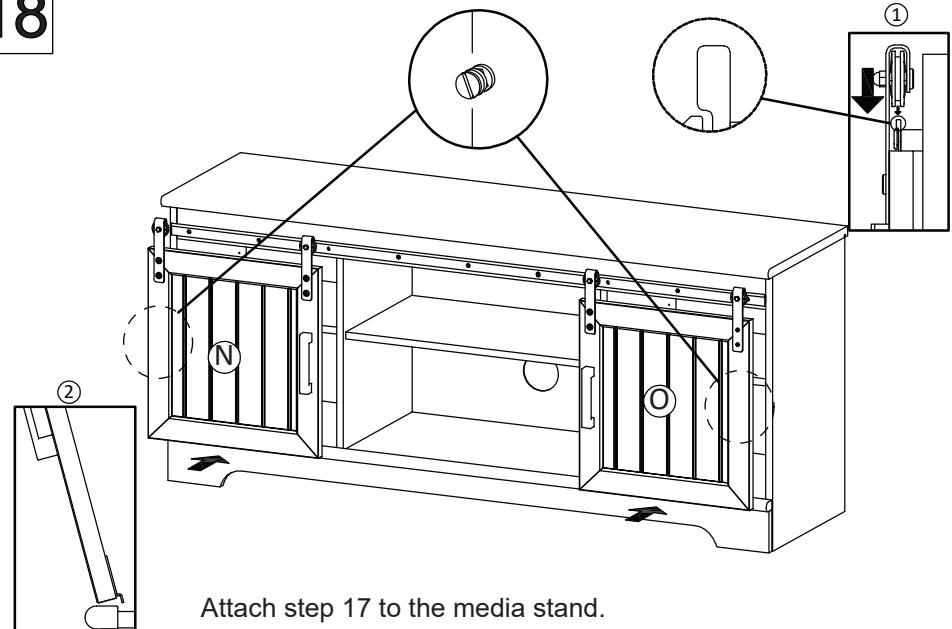
Attach Top Board (A), Back Board 1 (P) and Back Board 2 (Q) to step 13 by using Camlock (HW2) and screwdriver.

**16**

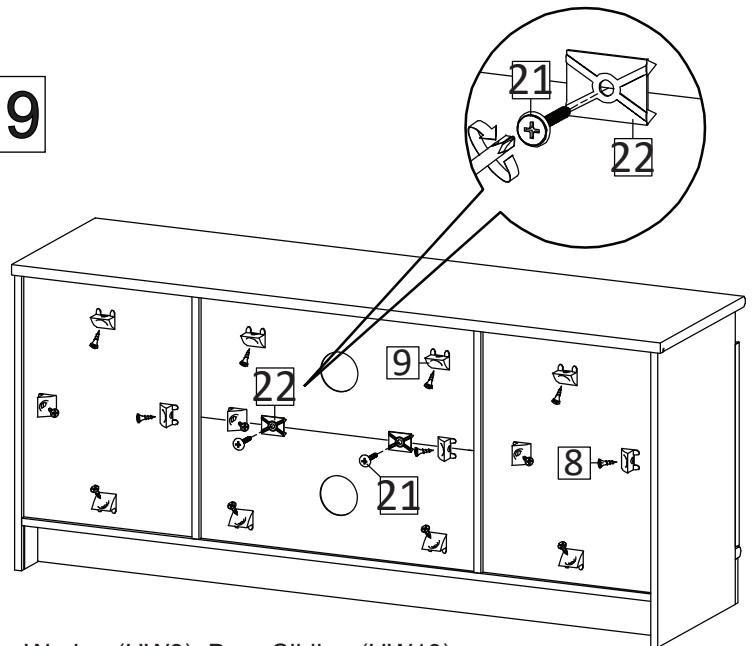
Attach Barn Sliding (HW10) to Frame Door Left (N) and Frame Door Right (O) by using Screw M 6.4x14 mm (HW6) and tighten them with Allen Key (HW5).

17

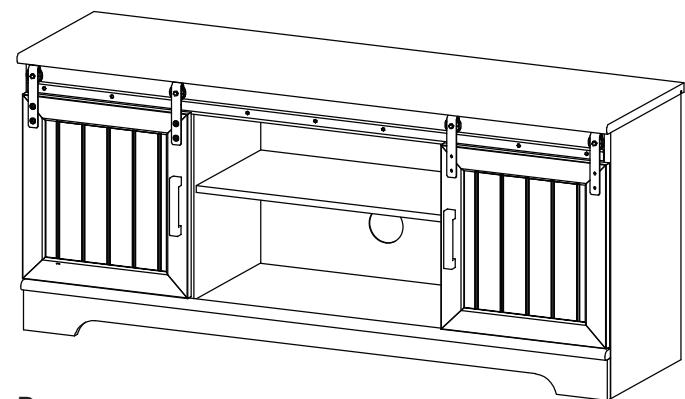
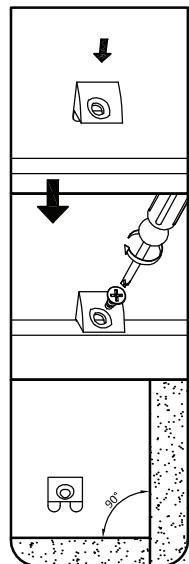
Use Screw M 3.5x25 mm (HW18) to attach Handle (HW17) to the Frame Door Left (N) and Frame Door Right (O). Also, insert Screw M 3.5x13 mm (HW13), Sliding Plate (HW14) and Stopper (HW16) as above image.

18

Attach step 17 to the media stand.

19

Use Wedge (HW9), Barn Sliding (HW10), Screw M 4x17 mm (HW21) and Back Panel Holder (HW22) to tighten the back of media stand by using screwdriver.

20

Done.